

Vacuum Technology

Vacuum Process
Engineering


Measuring and
Analytical Technology



LEYBOLD
VACUUM PRODUCTS INC.

Part Number 722-78-001 ■ Edition M

TRIVAC[®] "A" Dual Stage Rotary Vane Pump MANUAL

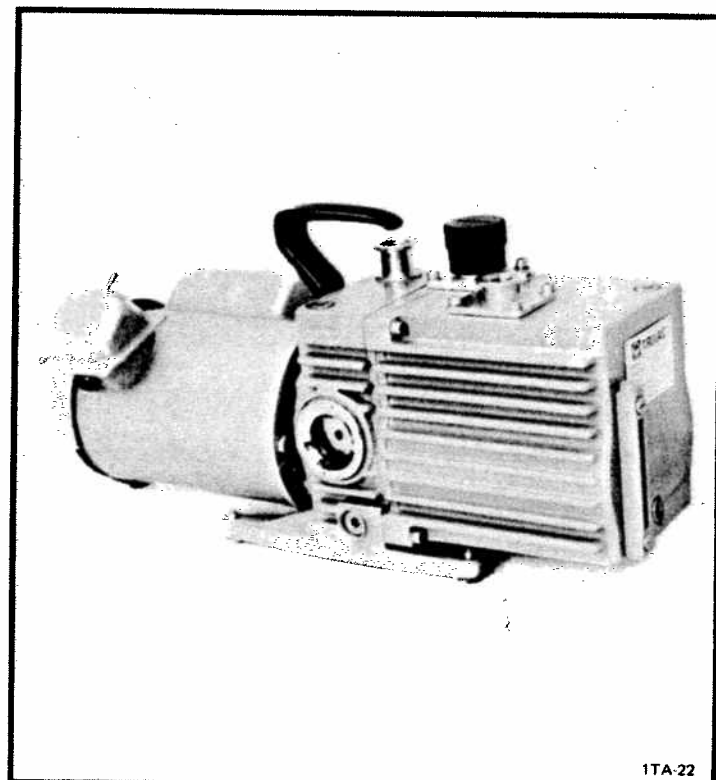

1TA-22

Manufactured in the United States

•



WARNINGS:



Death or serious injury can result from the improper use or application of this pump. If the pump will be exposed to toxic, explosive, pyrophoric, highly corrosive, or other hazardous process gases including greater than atmospheric concentrations of oxygen, contact Leybold for specific recommendations.



Ground the motor properly during installation. Disconnect the power before beginning installation, maintenance, or repair work or before interchanging the input leads when correcting the direction of rotation. Disconnecting the power also avoids an unexpected start-up for pumps with automatically resetting thermal overloads. Most of our single-phase motors have automatically resetting thermal overloads.



Don't run the pump without an exhaust line and an adequate exhaust system if hazardous gases or vapors are expelled from the pump.

Don't exceed a maximum back pressure of 7 psig. Excessive pressure in the pump could damage the seals, blow out the sight glass, or rupture the pump housing. In addition, excessive backpressure can result in hazardous process gas or contaminated oil leaking out of the pump. Don't install an exhaust line with a smaller ID than the exhaust port or allow restrictions or deposit buildup in the exhaust line. If you are purging the oil casing with inert gas, limit the inert-gas flow to avoid exceeding the 7 psig limit. Accidentally connecting the pump's exhaust port to a vacuum line containing a closed valve also causes a dangerous excessive pressure.



Hazardous process gases can concentrate in the vacuum pump, its oil, and its filters. If the pump has been used on toxic, explosive, pyrophoric, corrosive, volatile, or other hazardous substances, take the proper safety precautions before opening the pump or filters. Proper precautions could include inert gas purging before and after you drain the oil to sweep hazardous gas from the pump or filters; gloves or protective clothing to avoid skin contact with toxic or highly corrosive substances; specially ventilated work areas; fume hoods, safety masks; breathing apparatus; etc.

Before sending any equipment to our factory or to one of our service centers, use the form at the back of this manual to notify us of any toxic or other harmful products that may be in the pump, its oil, or its filters. You will also need to supply us with the pump's serial and catalog numbers from the ID plate on the end of the oil casing (see Figure 1-1).

Copyright © 1993 Leybold Vacuum Products, Inc.

⚠ WARNINGS:



If you are pumping highly reactive or other hazardous gases, prevent air from entering the pump, prevent the hazardous gas from leaking from the pump, and ensure that the concentrations of these gases in the pump and in the exhaust are low. Air entering the pump or exhaust line can have an explosive or other dangerous reaction with the process gas. The following safety modifications are often recommended:

- Installing a modification kit on the anti-suckback system to prevent the pump from venting itself with air and to prevent hazardous gases from leaking from the pump during and after shutdown.
- Adding a nitrogen purge to the oil casing.
- Adding a nitrogen purge to the gas ballast valve or sealing this valve,
- Having the pump degreased at our factory and using PFPE oil.
- Ensuring that the pump has an adequate exhaust system.
- Adding an oil filtering system to reduce the chance of seals failing and leaking contaminants from the pump.
- Ensuring that the materials in the pump and optional accessories are compatible with the process gas.
- Adding controls to shutdown the process if the nitrogen supply fails, if the pump becomes too hot, or if the oil-casing pressure gets too high.

Contact Leybold for safety recommendations for your particular process.

Important:

Failure to comply with the following could cause premature failure of your pump and void your warranty.

- If your process gas contains any condensable vapors or moisture, run the pump for about 1/2 hour with the gas ballast valve open before opening the pump to process gas (see Section 4-1-2). This prevents vapors from condensing in the pump. Open the gas ballast valve during operation and before shutdown if the oil becomes cloudy or emulsified from vapors condensing during operation (see Section 4-2).
- The pump must have an adequate supply of the correct clean oil at all times. Failure to change the oil often enough can result in poor performance and premature pump failure (see Section 4-3-3).
- When converting a pump from hydrocarbon oil to PFPE or vice-versa, the pump must be **completely** disassembled and cleaned, and a new module repair kit must be used. PFPE and hydrocarbon oil emulsify when they come into contact with each other causing failure of the lubrication system. Refer to Section 5-E-1 when switching to PFPE.

CONTENTS

Section	Title	Page
SECTION 1 – INTRODUCTION		
1-1	Manual Key	3
1-2	Model and Catalog Numbers	3
SECTION 2 – PRINCIPLES OF OPERATION		
2-1	Direct Drive Mechanism	4
2-2	Pumping Mechanism	4
2-2-1	High Vacuum Stage Pump Cylinder	4
2-2-2	Second Stage Pump Cylinder	5
2-3	Gas Ballast Mechanism	5
2-3-1	Opening and Closing the Valve	5
2-3-2	Purpose and Function	6
2-4	Lubricating Fluid	7
2-5	Anti-Suck Back Mechanism	8
SECTION 3 – PREPARING AND INSTALLING THE PUMP		
3-1	Receiving	8
3-1-1	Reporting Shipping Damage	8
3-1-2	Reporting Shipping Shortage	8
3-1-3	Reporting Incorrect Shipment	9
3-2	Initial Filling With Lubricating Fluid	9
3-3	Connecting the Pump to the System	9
3-4	Making the Electrical Connection	10
SECTION 4 – STARTING, OPERATING, AND MAINTAINING THE PUMP		
4-1	Start-up	10
4-1-1	Checking the Direction of Rotation	10
4-1-2	Using the Gas Ballast Valve During Pump Warm-up	10
4-2	Operation	11
4-3	Preventative Maintenance	11
4-3-1	Checking the Lubricating Fluid Level	11
4-3-2	Changing the Lubricating Fluid	12
4-3-3	Checking the Lubricating Fluid for Contamination	13
4-3-4	Long Term Storage	13
4-3-5	Checking the Dirt Trap	13
4-3-6	Avoiding Oil Leaks During Shipping and Storage	13
SECTION 5 – DISASSEMBLY, CLEANING, AND ASSEMBLY INSTRUCTIONS		
	Module Replacement Procedure	14
5-A	Required Materials and Tools	14
5-A-1	Required Materials	14
5-A-2	Required Tools	14
5-B	Removing the Module from the Pump	15
5-C	Disassembling the Module	17
5-D	Disassembling the Remaining Parts	22
5-E	Cleaning and Inspecting the Disassembled Pump	28
5-E-1	Special Requirements for Extreme-Corrosive Service Pumps	28
5-E-2	Instructions for Cleaning and Inspecting all Pump Models	28
5-F	Reassembling the Pump	29
SECTION 6 – TROUBLESHOOTING		
SECTION 7 – PARTS LIST		

LIST OF TABLES

Table	Title	Page
SECTION 4 – STARTING, OPERATING, AND MAINTAINING THE PUMP		
4-1	Technical Data	12
SECTION 5 – DISASSEMBLY, CLEANING, AND ASSEMBLY INSTRUCTIONS		
5-1	Rotor, Bearing, Shaft, and Vane Critical Dimensions	30
5-2	Parts Required for Installing Rotational Lock Bearing	32
SECTION 6 – TROUBLESHOOTING		
6-1	Troubleshooting Chart	43

LIST OF FIGURES

Figure	Title	Page
SECTION 1 – INTRODUCTION		
Sketch 1-1 Pump Identification Plate 3		
1-1	Location of the Identification Plate, the Oil Fill Ports and the Oil Drain Ports	4
SECTION 2 – PRINCIPLES OF OPERATION		
Sketch 2-1 Cross Section of the Gas Ballast Valve on the D8A/JAC through D90A/JAC Extreme-Corrosive Service Pumps 7		
2-1	D4A Module.	5
2-2	High Vacuum Stage Pump Cylinder with Rear End Plate Removed	5
2-3	Gas Ballast Valve and Second Stage Pump Cylinder with Front End Plate Removed	6
SECTION 5 – DISASSEMBLY, CLEANING, AND ASSEMBLY INSTRUCTIONS		
5-1	Assembled Pump (D16A Pump Model Shown)	16
5-2	Module Attached to Coupling Housing (D2A Pump Model Shown)	17
5-3	Module, Side View (D2A Pump Model Shown)	18
5-4	Front End of Module Minus Coupling and Centrifugal Switch (D2A Pump Model Shown)	19
5-5	Removing the Cylindrical Pins from the Module (D2A Pump Model Shown)	20
5-6	Rear End of Module Minus the Disk (D2A Pump Model Shown)	20
5-7	High Vacuum Stage Pump Cylinder (D2A Pump Model Shown)	21
5-8	Second Stage Pump Cylinder (D2A Pump Model Shown)	21
5-9	High Vacuum Stage Rotor Removed from the Shaft (D2A Pump Model Shown)	22
5-10A	Cap End of Gas Ballast Valve.	23
5-10B	Tube End of Gas Ballast Valve	23
5-11	Miscellaneous Disassembled Parts	24
5-12	Removing the Radial Shaft Seal from the End Plates (D2A Pump Model Shown)	25
5-13	D4A Module Showing Retaining Bracket and Valve Plate	25
5-14	Removing the Valve Stop and Plate (D2A Pump Model Shown)	26
5-15	Coupling Housing and Motor (D2A Pump Model Shown)	26
5-16	Removing the Oil Level Glass from the Coupling Housing (D2A Pump Model Shown)	27
5-17	Disassembled Motor (D30A Motor Shown)	32
5-18	Rotors/Shaft/Center Bearing Plate Assembly (D2A Pump Model Shown)	35
5-19	Driving the Long Cylindrical Pins that Align the HV Stage Cylinder and the Center Bearing (D2A Pump Model Shown)	36
5-20	Pulling the Second Stage Cylinder Tight Against the Center Bearing (D2A Pump Model Shown)	38
5-21	Driving the Short Cylindrical Pins that Align the Rear End Plate and the HV Stage Cylinder (D2A Pump Model Shown)	39
5-22	Using a Shaft Sleeve to Install the Radial Shaft Seal into the Front End Plate (D2A Pump Model Shown)	40
5-23	Reassembling the Module to the Coupling Housing	42
SECTION 7 – SPARE PARTS LIST		
7-1	Disassembled Pump (D2A Pump Model Shown)	56
7-2	Exploded Isometric Drawing of a D30A Pump Model	73

SECTION 1
INTRODUCTION

This manual contains important information regarding the safe operation, maintenance, and repair of your TRIVAC dual-stage pump. We urge you to read Sections 1, 3, and 4 before using your pump. Section 6, the troubleshooting chart, should be used in conjunction with the rest of the manual should the need occur.

1-1 MANUAL KEY

This manual covers the following pump models (see Section 1-2) in addition to extreme-corrosive service pumps.

Standard Series	Corrosive Application Series	Dual-Speed Standard and Corrosive Application Series
D2A D4A D8A D16A D30A D60A	D2AC D4AC D8AC D16AC D30AC D60AC	D60A2X D60AC2X

“WARNING” statements are used in this manual to prevent injury to personnel; “CAUTION” statements are used to prevent damage to equipment. “NOTES” contain helpful information. “REQUIRED ACTION” is used where necessary to distinguish the action of the step from the WARNINGS, CAUTIONS, and NOTES.

Numbers in parentheses refer to position numbers of parts in the parts list (see Section 7). These numbers are also used to identify parts on the figures.


The terms “lubricating fluid,” “pump fluid,” “fluid,” “oil,” and “lubricant” when used in this manual refer to the “proper vacuum pump fluid.”

A form is included in the back of this manual for use when sending a pump to our factory or service centers. It includes instructions on preparing the pump for shipping.

1-2 MODEL AND CATALOG NUMBERS

To understand many of the instructions in this manual, you need to know the model number of your pump. The plate attached to the end of the pump (see Figure 1-1) lists the model, catalog, and serial numbers in addition to the catalog number of the standard oil for the pump.

Always supply us with the pump's serial and catalog numbers when returning it to one of our service centers. Also report the serial number of the pumping system where applicable.



TRIVAC®

MODEL NO. _____

CATALOG NO. _____


SERIAL NO. _____

THIS PUMP FILLED WITH _____

LEYBOLD VACUUM PRODUCTS INC.
5700 Mellon Road Export, PA. 15632
MADE IN U.S.A.

Sketch 1-1. Identification Plate

TRIVAC is a registered trademark of Leybold

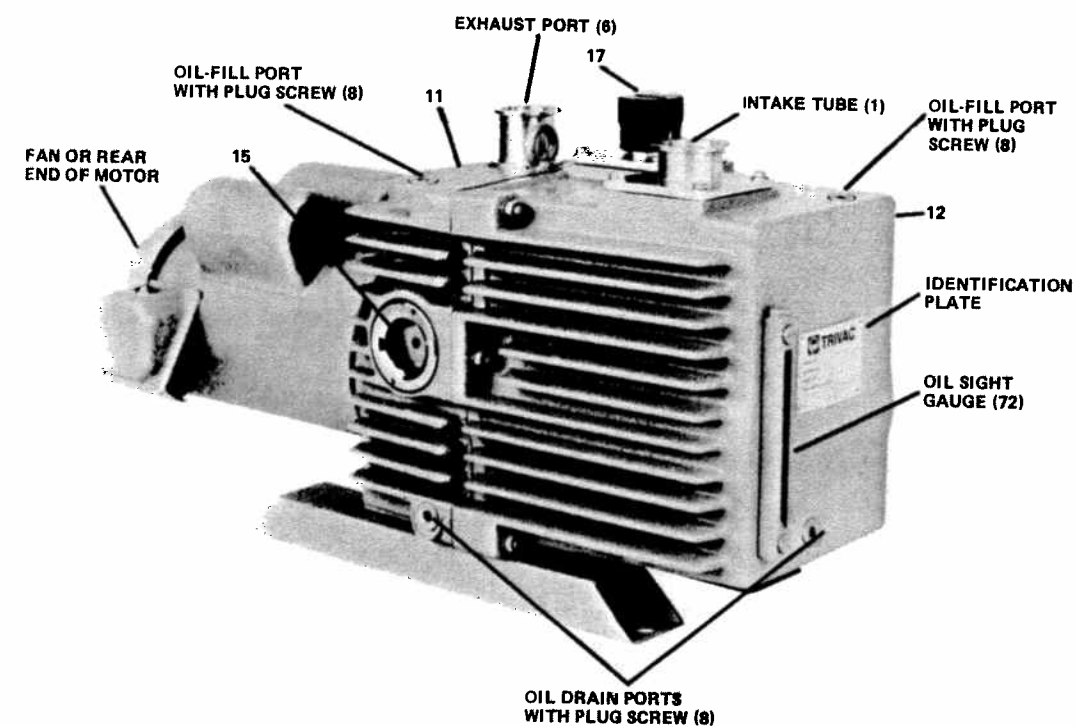

1TA-2.1

Figure 1-1. Location of the Identification Plate, the Oil Fill Ports and the Oil Drain Ports (D30A Pump Model Shown).

SECTION 2

PRINCIPLES OF OPERATION

Vacuum pumps are used to reduce the pressure in an enclosed vessel or system. For rough and medium vacuums (760 to 10^{-3} Torr), the intake tube (1) of the rotary vane pump is connected to the vessel to be evacuated. For high or ultrahigh vacuum (10^{-3} to 10^{-11} Torr), the rotary vane pump is used as a backing or roughing pump and is connected in series and/or parallel with other types of pumps which are designed to obtain a high vacuum.

2-1 DIRECT DRIVE MECHANISM

When the motor is switched on, the motor shaft turns the pump shaft. The motor shaft and pump shaft are connected directly through a coupling (37) and an elastic element (36) (see Figure 5-23). The elastic element (36) absorbs shock and vibration and results in quiet operation of the pump.

2-2 PUMPING MECHANISM

2-2-1 High Vacuum Stage Pump Cylinder

The pump intake tube (1) fits into the top of the high vacuum stage pump cylinder (55). The shaft and attached rotor (54) are mounted eccentrically in the high vacuum stage housing (52/60/55). Three rectangular vanes (53) fit into slots in the rotor (54) (see Figures 2-1 and 2-2).

As the shaft and rotor (54) rotate, centrifugal force pushes the vanes (53) out against the pump cylinder (55) inner surface (see Figure 2-2). The three vanes divide the cylinder into chambers 120° apart.

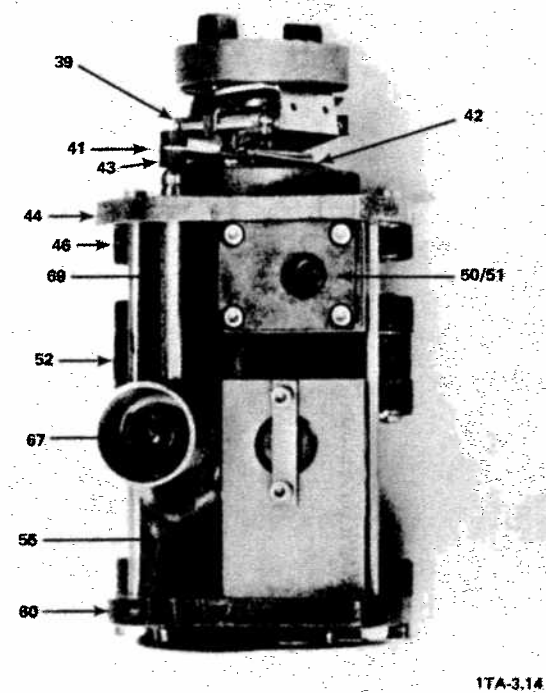


Figure 2-1. D4A Module

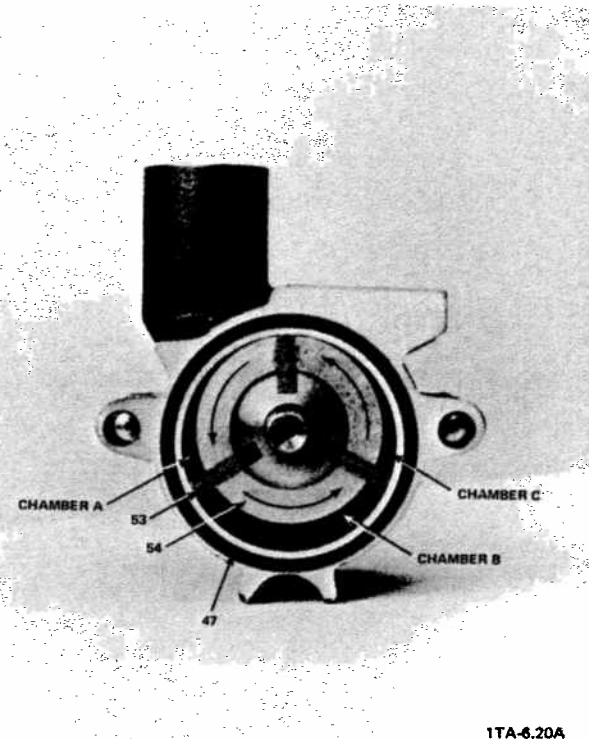


Figure 2-2. High Vacuum Stage Pump Cylinder With Rear End Plate Removed

One pumping cycle proceeds as follows (see Figure 2-2). Gas is drawn through the pump intake tube (1) into an increasingly large vacuum tight chamber (Chamber A). The rotation increases the size of the chamber until it is sealed off by a second vane (Chamber B). Further rotation diminishes the chamber size and compresses the gas (Chamber C). The gas is then forced out through an opening in the center bearing plate (52) and into the second stage pump cylinder (46) (see Figure 2-1).

With each cycle, the pump removes a portion of the original gas contained in the vessel or system being evacuated, until the ultimate pressure of the pump is reached.

The ultimate pressure is measured with the pump intake tube closed off. It is the lowest pressure attainable for a particular pump. The ultimate partial pressure for dual stage vane pumps is 3×10^{-4} Torr as measured with a LN_2 cold-trapped ionization gauge. Ultimate pressure measured with thermocouple gauges will be approximately $\frac{1}{2}$ to 1 decade higher.

2-2-2 Second Stage Pump Cylinder

The second stage of the pump is similar to the high vacuum stage in construction and operation. It accepts gas from the high vacuum stage, further compresses it, and then forces it out through the exhaust valve (50/51) (see Figures 2-1 and 2-3).


2-3 GAS BALLAST MECHANISM

2-3-1 Opening and Closing the Valve

There are two holes in the side of the gas ballast valve cap (18) on standard pump models. When one of these holes is aligned with the hole in the gas ballast valve (17), the valve is open (see Figure 2-3). When the side of the cap (18) is covering the hole in the gas ballast valve (17), the valve (17) is closed (see Figure 1-1).

To open the valve, turn the cap (18) until a cap hole is aligned with the valve (17) hole; to close the valve (17), turn the cap (18) so that the valve (17) hole is covered by the cap (18).

When the valve (17) is open, air at atmospheric pressure rushes in the cap-end hole, through the gas ballast valve stem and into the second stage pump cylinder (46) (see Figure 2-3).

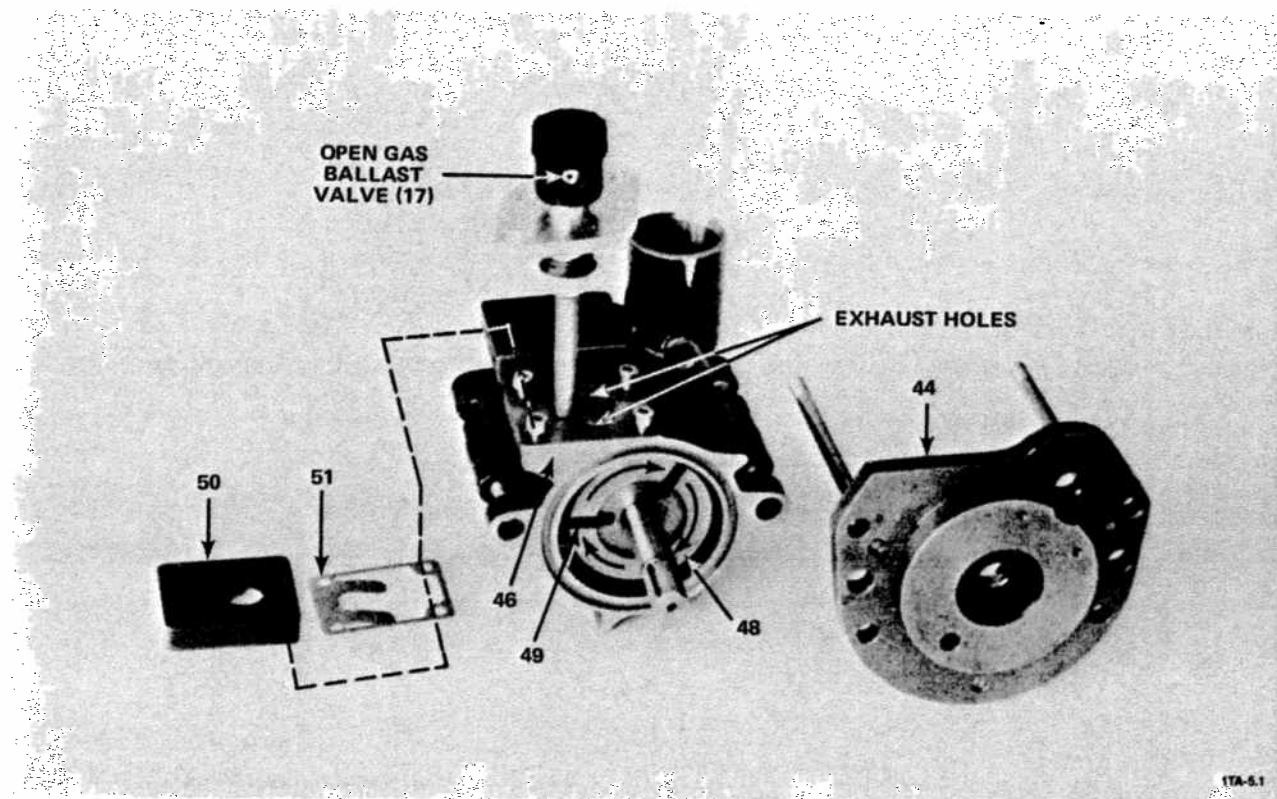

NOTE: This photograph is for illustration purposes only. When assembled, the cap end of the gas ballast valve (17) is attached outside the top of the oil casing (12) (see Figure 1-1), and an oil filter (35) and other parts fit around the valve (17) stem (see Figure 5-10B).

Figure 2-3. Gas Ballast Valve and Second Stage Pump Cylinder With Front End Plate Removed

2-3-2 Purpose and Function of the Gas Ballast Valve

All systems contain moisture. Some processes have large quantities of condensable vapors in the process gas. When these vapors condense in the pump, they degrade the lubricating and sealing qualities of the pump fluid (see Section 2-4) resulting in excessive pump wear, higher base pressure, and sometimes pump seizure.


The gas ballast valve allows removal of condensable vapors and condensate such as water, alcohol, gasoline, benzene, carbon tetrachloride, etc. from the pump. It also enables high levels of water vapors to be pumped without condensation. The water vapor tolerance for your pump is listed in Table 4-1. If the partial pressure of water vapor in the gas being pumped exceeds the tolerance of your pump, the vapor will condense. We recommend installing an AK condensate trap on the pump when pumping saturated vapors (see Section 1 of our catalog for more information on condensate traps).

When the gas ballast valve (17) is open, it admits a controlled amount of air into the second stage pump cylinder (46) just before the exhaust holes (see Figure 2-3). The open gas ballast valve prevents vapors from condensing by reducing the partial pressure of the condensable vapors and by increasing the operating temperature of the pump.

The gas ballast valve is not fully effective until the pump is warm to the touch. When using the gas ballast valve to remove condensate from the pump fluid, it is best to seal off the intake tube (1). Sealing off the intake tube (1) prevents additional vapors from entering the pump while the condensate is being vaporized and the vapor is being ejected. See Sections 4-1-2 and 4-2 for instructions for using the gas ballast valve during start-up and operation.

In addition to increasing the operating temperature, running the pump with the gas ballast valve open also results in higher ultimate pressure (see Table 4-1), higher pump fluid consumption, and a pump fluid mist in the exhaust stream. If you run the pump with the gas ballast valve open continuously, we recommend an SE smoke eliminator or an AF exhaust filter with an oil return line. After closing the gas ballast valve the pump normally reaches ultimate pressure as soon as it cools to operating temperature.

NOTE: On extreme-corrosive service pumps, the gas ballast valve (17) is sealed to prevent gases in the air from reacting with secondary gases or vapors in the pump. These pumps have a port on the valve (17) for installing a dry nitrogen gas line (see Sketch 2-1); the port is $\frac{1}{8}$ inch NPT for the D2A and D4A models and $\frac{1}{4}$ inch NPT for all other TRIVAC A models. The maximum nitrogen pressure is 2 psig delivered to the pump.

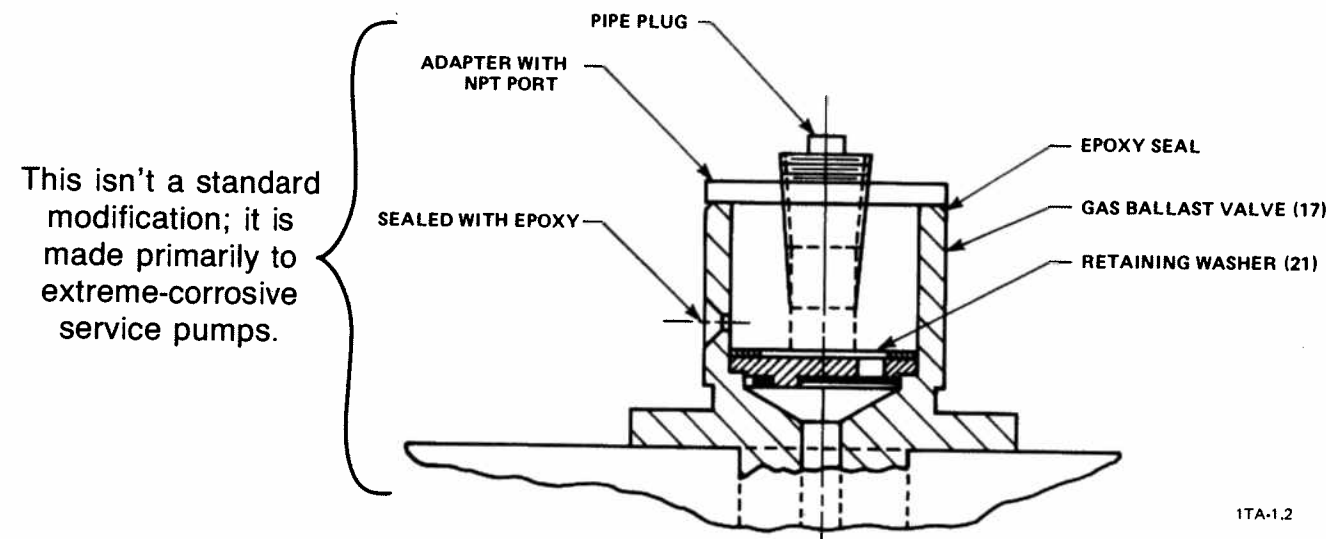

Sketch 2-1 Cross Section of the Gas Ballast Valve on the D8A/AC Extreme-Corrosive Service Pumps.

2-4 PUMP FLUID

The pump fluid partially fills the oil casing (12). It is injected from the oil casing (12) into the module through one or two oil nozzles (56) located in the second stage pump cylinder (46) (see Figure 5-8). Pump fluid consumption is minimal during normal operation, but increases when operating at high pressures or with the gas ballast valve open.

In addition to lubricating the moving parts, the pump fluid seals the clearances in the pumping module. This fluid seal is necessary for achieving the ultimate pressure of the pump. The pump fluid also transfers heat from the pumping element to the oil casing (12).

Other important qualities of the pump fluid include the following:

- It must have a low vapor pressure at the high temperature generated by gas compression and vane friction.
- It must be oxidation resistant.
- It must have a low water absorption rate.
- It must resist cracking under the mechanical stress of gas compression and vane pressure.

Based on operational testing, we have approved the following vacuum pump fluids for use in TRIVAC "A" pumps:

Standard Applications	HE-175 (hydrocarbon)
Corrosive Applications	HE-200 or HE-400 (hydrocarbon)
Extreme-Corrosive Applications	HE-1600 (perfluoropolyether)
High-Temperature Applications	HE-600 (synthetic diester hydrocarbon)

If you use a nonapproved pump fluid, we can't guarantee that our pumps will meet their operating specifications (ultimate pressure, pumping speed, operating temperature, etc.). However, the warranty is voided only if the non-approved fluid adversely affects the operation or reliability of the pump. The pump's identification plate (see Page 3) indicates which pump fluid was initially used in the pump.

Section 2-3-2 mentions the detrimental effects of condensate on the pump fluid. Contaminants also destroy many of the essential qualities of the fluid, resulting in pump wear, slower pumping speed, higher ultimate pressure, and sometimes pump seizure. Change the pump fluid frequently to ensure good performance and to extend the life of your pump.

2-5 ANTI-SUCK BACK MECHANISM

When the pump is intentionally turned off or if there is a power failure, the anti-suck back mechanism seals the intake tube (1) and vents the pumping chamber. The pump starts easier when the pumping chamber is vented. The sealing of the intake tube (1) prevents pump fluid from surging back into the vacuum line and maintains the vacuum in the vessel or system.

The primary components of the anti-suck back mechanism are the centrifugal switch (39), the lever (41) with spring (42) and seal (43), the air inlet tube (69), and the piston (68) with valve disk (67) (see Figure 2-1).

The centrifugal switch (39) is attached to the shaft. When the pump is turned off, the shaft rotation slows, causing the centrifugal switch (39) to push against the lever (41). As a result, the lever (41) opens the air inlet tube (69) (see Figure 2-1). Air at atmospheric pressure rushes through the open tube (69) and into the high vacuum stage pump cylinder (55), thus venting the pump. This air also forces the brass piston (68) and attached valve disk (67) to seal the pump intake tube (1).

When the pump is started again, the shaft rotation causes the centrifugal switch (39) to pull away from the lever (41). A spring (42) pushes the lever in the opposite direction, causing the seal (43) attached to the lever to close the air inlet tube (69). The suction of the pump draws the valve disk (67) and attached piston (68) away from the opening in the intake tube (1) allowing the pump to further evacuate the vessel or system.

On AC pump models, the anti-suckback mechanism is modified to avoid exposing the pumping module to atmospheric air and to avoid the possibility of hazardous process gas escaping from the pump during shutdown. The centrifugal switch and lever assembly are removed and a solenoid valve with tubing is added so that the module is vented with gas from the oil casing during shutdown.

SECTION 3**PREPARING AND INSTALLING THE PUMP****3-1 RECEIVING**

NOTE: The Leybold packing list is attached to the outside of one of the shipping containers.

3-1-1 Reporting Shipping Damage

Leybold makes every effort to ensure that your order is packed properly. However, rough or careless handling in transit occasionally results in shipping damage. In such cases, the carrier is responsible for the damages.

Unpack the pump and check for shipping damage as follows:

1. Inspect the outside of the shipping container for shipping damage. If you will be making a damage claim, save the shipping container and packing materials.
2. Unpack the pump.
3. Carefully inspect the pump for damage.
4. If you find any damage, proceed as follows:
 - a. Save the shipping container, packing material, and parts for inspection.
 - b. Notify the carrier that made the delivery within 7 days of delivery.
 - c. File a claim with the carrier.
 - d. Contact the Leybold Order Services Department to make arrangements for replacing the damaged part.

3-1-2 Reporting Shipping Shortage

If you did not receive all the goods that you ordered, do the following:

1. Check the number of pieces listed in the upper right section of the packing list. If the number of pieces listed is greater than the number of shipping containers received, contact the carrier concerning the missing piece.
2. Check the packing list to see if the missing item is back ordered.
3. Carefully check the packing material and container to ensure that you did not overlook the missing item.
4. If you cannot find the item, contact our Order Services Department.

3-1-3 Reporting Incorrect Shipment

If the item received is not the item ordered, contact our Order Services Department.

3-2 INITIAL FILLING WITH PUMP FLUID

The larger pump models are shipped filled with pump fluid; the smaller pump models are shipped with the pump fluid in a separate container. Ensure that the oil is in the middle to upper third of the sight glass before starting the pump (see Figure 1-1).

3-3 CONNECTING THE PUMP TO THE SYSTEM

KF® clamp rings are supplied for the intake and exhaust ports of the pump. A centering ring with dirt trap (2) is supplied for the intake tube (1) and a centering ring with O-ring (7) is supplied for the exhaust port (6).

Leybold also has a complete line of components, fittings, and adapters to connect your pump to any system. See our catalog for a list of these components. See Table 4-1 for the intake and exhaust flange dimensions of your pump model.

All connections must be vacuum tight for your pump to achieve its ultimate pressure. The O-ring on the centering rings must be clean to avoid leaks.

Your pump will perform better and last longer if it is protected by the correct inlet filter and/or oil filtering system. See our catalog or contact your nearest sales office for the recommended filter for your application.

Any accessories, such as coaxial traps, dust separators, exhaust filters, or inlet filters should be connected after Step 2 below. Use the manual that comes with each accessory for installing, maintaining, and operating the accessory (see the Leybold catalog for additional information on accessories).

CAUTION: IF YOU ARE PURGING THE GAS BALLAST VALVE, DO NOT EXCEED AN INERT GAS PRESSURE OF 2 psig; IF YOU ARE PURGING THE OIL CASE OR EXHAUST LINE WITH INERT GAS, DO NOT RAISE THE PRESSURE IN THE OIL CASING ABOVE 3 psig. EXCEEDING THESE PRESSURES WILL DEGRADE THE PUMP'S PERFORMANCE.

Connect the pump to your system as follows:

1. Set the pump on a horizontal surface. It need not be permanently mounted on the surface (See Figure 1-1).

2. **CAUTION:** FAILURE TO REMOVE THE SHIPPING WEDGE OR EXHAUST PORT COVER BEFORE STARTING THE PUMP COULD RESULT IN DAMAGE TO THE PUMP.

Remove and discard the protective cover from the pump intake tube (1) and exhaust port (6) and the metal shipping disc from the exhaust port (see Figure 7-2, the foldout). Also remove and discard the red plastic shipping wedge from underneath the coupling housing (11). A Day-Glo orange tag attached to the pump contains instructions for removing the shipping wedge.

3. **WARNING:** Ensure that your vacuum line is connected to the pump's intake tube (1) and not to its exhaust port (6) (see Figure 1-1). If your vacuum line has a closed valve, accidentally connecting it to the pump's exhaust port (6) causes a dangerous overpressure.

NOTE: Ideally, the inside diameter (ID) of the vacuum line should be the same size or larger than the ID of the intake tube (1). If the vacuum line is too narrow, it will reduce the pumping speed.

REQUIRED ACTION: Using the KF clamp ring and the centering ring with dirt trap (2) and O-ring (3), connect the pump intake tube (1) to the vacuum line.

®KF is a registered trademark of Leybold

4. **WARNING:** Don't install an exhaust line with a smaller ID than the exhaust port or have restrictions or closed valves in the exhaust line during operation. Such restrictions reduce the pumping speed and could damage the oil seals or cause a dangerous overpressure in the pump.

Using the KF clamp ring and the centering ring with an O-ring (7), make one of the following connections to the exhaust port (6).

- a. If practicable, install the exhaust line at a slightly descending angle to prevent condensate from flowing back into the pump and contaminating the pump fluid. Attach a drain valve at the lowest point in the exhaust line to drain off any condensates; then run the exhaust line up to its emission outlet. This arrangement also prevents particulates from dropping back into the pump from the exhaust line.
 - b. If the exhaust line must be installed in the ascending position and the process gas contains high levels of condensable vapors, connect an AK condensate trap to the exhaust port. AK traps serve to collect the condensates from saturated vapors. See Section 1 of our catalog for additional information on condensate traps.
 - c. If no exhaust line is connected and your pump will be running above 1 Torr inlet pressure, connect an AF or SE series exhaust filter to the exhaust port (6) to remove pump fluid vapors and smoke. See Section 1 of our catalog for additional information on exhaust filters.
5. If the exhaust line is attached to a negative pressure exhaust system, adjust the negative pressure so that pump fluid will not be drawn from the pump.

3-4 MAKING THE ELECTRICAL CONNECTION

When making the electrical connections for your motor, ensure that everything is grounded properly. Six-foot linecords are supplied on all standard single-phase 60-HZ motors that are purchased through Leybold. Most of our single-phase motors also have automatically resetting thermal overloads. If the motor doesn't have a linecord, you must provide the correct thermal overloads to protect the motor.

For 3-phase motors, use the schematic diagram on the motor nameplate or in the junction box to make the electrical connection.

For TRIVAC^{AC} pump models with 3-phase motors, wire the solenoid valve for high or low voltage according to the instructions on the solenoid-valve nameplate. Attach the solenoid-valve leads to any two of the three input line voltage wires.

SECTION 4 STARTING, OPERATING, AND MAINTAINING THE PUMP

4-1 START-UP

Before starting the pump, remove the shipping wedge; an orange cardboard tag on the pump has instructions for removing the wedge. The AC pump models don't have a wedge or a tag.

The motor manufacturer guarantees a maximum of six starts per hour at maximum power. To avoid exceeding six starts per hour, run the pump continuously and regulate the vacuum in your system with a valve.

4-1-1 Check the Direction of Rotation

Refer to Section 5, Step F-1 to check the direction of motor rotation. Looking from the motor end of the pump, the motor fan should rotate clockwise. If the fan doesn't rotate in the correct direction, turn the pump off immediately to avoid damaging the motor or the pump.

4-1-2 Using the Gas Ballast Valve During Pump Warm-up

NOTE: Opening the gas ballast valve (17) results in an oil mist in the exhaust stream and higher pump fluid consumption, operating temperature, and ultimate pressure. After closing the gas ballast valve, the pump normally reaches ultimate pressure as soon as it cools to operating temperature.

CAUTION: PUMPING PROCESS GAS WITH A COLD VANE PUMP CAN RESULT IN VAPORS CONDENSING IN THE PUMP FLUID.

1. Operate the pump with the gas ballast valve (17) open (see Section 2-3-1) and the intake tube (1) closed for about 1/2 hour while the pump is warming to operating temperature.

NOTE: If your system has a valve in the vacuum line, the intake tube (1) can be closed by shutting the vacuum-line valve during the pump warming period.

NOTE: When the pump is cold, condensation may occur in spite of the gas ballast valve being open.

2. Open the intake tube (1) and/or vacuum-line valve and allow the pump to operate for a few additional minutes with the gas ballast valve (17) open. This will remove condensable vapors from the system.

3. **NOTE:** Most of the vapors have been expelled from the pump when the pressure nears the "ultimate total pressure with gas ballast" (see Table 4-1).

NOTE: If your process has high levels of condensable vapors, it may be necessary to run the vane pump with the gas ballast valve open (see Section 2-3-2). When running continuously with the gas ballast valve open, we recommend installing an SE smoke eliminator or an AF exhaust filter with a return line.

Close (see Section 2-3-1) the gas ballast valve (17) after all vapors have been pumped out of the system or when there is only a small accumulation of vapor with a large excess of permanent gases.

4-2 OPERATION

WARNING: Don't pump toxic, pyrophoric, or hazardous gases unless your pump has the anti-suckback solenoid valve modification (see Pages 8 and 57). When pumping these hazardous gases, we recommend a negative pressure exhaust system and inert gas purging of the oil casing and gas ballast valve. In addition, a pump specially prepared for perfluoropolyether vacuum oil is required for pumping highly reactive or extremely corrosive gas. Contact the factory for recommendations.

CAUTION: Pumping corrosive gases with a standard pump can result in premature failure. Contact the factory for pump modifications for your particular process.

CAUTION: RUNNING THE PUMP AT GREATER THAN 1 TORR INLET PRESSURE RESULTS IN AN OIL MIST IN THE EXHAUST STREAM. INSTALL AN EXHAUST FILTER (SEE SECTION 3-3) AND CHECK THE PUMP FLUID LEVEL FREQUENTLY (SEE SECTION 4-3-1) WHEN OPERATING THE PUMP ABOVE 1 TORR.

CAUTION: DO NOT RUN THE PUMP CONTINUOUSLY AT GREATER THAN 300 TORR INLET PRESSURE FOR THE D2A, D8A, AND D30A PUMP MODELS OR GREATER THAN 187 TORR FOR THE D4A, D16A, D60A, AND D90A PUMP MODELS.

The 115/230 V, 50/60 Hz, single-phase motors have an automatically resetting thermal overload. If this overload shuts off the pump and the ON/OFF switch is left ON, the motor will restart itself as soon as it cools down.

Table 4-1 lists operating and other technical data for each of the TRIVAC dual-stage vane pump models.

1. **NOTE:** The pump fluid is usually saturated with condensate when the fluid becomes milky white or dark and the pump runs hot and fails to reach its ultimate pressure (see Table 4-1).

REQUIRED ACTION: If during operation, the pump fluid becomes saturated with condensate, run the pump with the intake tube (1) and/or vacuum-line valve closed and the gas ballast valve (17) open (See Section 2-3-1) until the condensate is vaporized and expelled from the exhaust port (6).

2. If condensate in the pump fluid is severe, the pump should be flushed out and the pump fluid changed (see Section 4-3-2). See Symptom 1 of the Troubleshooting Chart (Table 6-1) for other methods of removing condensate from the pump fluid.

4-3 PREVENTATIVE MAINTENANCE

NOTE: See Section 6 (Troubleshooting) to resolve corrective maintenance problems.

4-3-1 Checking the Pump Fluid Level

NOTE: When the pump is not running, the pump fluid level appears lower.

NOTE: It is not unusual for the pump fluid to foam because of the churning action of the disk (oil slinger). Foaming is more pronounced at high operating pressures. If only foam is visible in the oil level glass (15), it means that the pump fluid level is low.

Occasionally check the pump fluid level when the pump is running near its ultimate pressure (see Table 4-1) and the gas ballast valve (17) is closed.

The minimum pump fluid level is reached when the fluid surface is visible at the lower rim of the oil level glass (15) or at the "L" mark on the oil sight gauge (72) (See Figure 1-1). If the pump fluid level is low, use Section 4-3-2, Steps 7, 8, and 9 to add the appropriate amount of the correct fluid.

The maximum pump fluid level is reached when the fluid surface is at the top rim of the oil level glass (15) or at the "H" mark on the oil sight gauge (72). If the pump fluid level is too high, use Section 4-3-2, Steps 1, 3, and 5 to drain **some** fluid. Recheck the oil level while the pump is running to ensure that the fluid level is correct.

TABLE 4-1. TECHNICAL DATA

Pump Model	D2A	D4A	D8A	D16A	D30A	D60A	D90A
Displacement CFM	2.2	4.5	7.0	14.1	26.8	36.7	53.7
Displacement liters/minute	62.5	127	190	400	760	1030	1520
Ultimate partial pressure† Torr	3×10^{-4}	3×10^{-4}	3×10^{-4}	3×10^{-4}	3×10^{-4}	3×10^{-4}	3×10^{-4}
Ultimate pressure with gas ballast+ Torr	3×10^{-3}	3×10^{-3}	3×10^{-3}	3×10^{-3}	3×10^{-3}	5×10^{-3}	5×10^{-3}
Water vapor tolerance Torr	30	15	30	15	40	20	20
Oil Capacity quarts (hydrocarbon) lbs (perfluoropolyether)	0.5 2.5	0.75 3	1 4.2	1.25 5	3.5 13.7	4 16.8	4 16.8
Motor power hp	1/3	1/3	1	1	1-1/2	2.0	3.0
Pump rotational speed RPM	1725	1725	1725	1725	1725	1150	1725
Weight complete lb	41	45	80	85	163	210	210
Sound pressure level (max) at three feet with gas ballast closed dB(A)	50	50	60	62	59	60	60
Sound pressure level (ave) at three feet with gas ballast open dB(A)	54	56	57	60	62	63	63
Intake tube and exhaust port diameter mm	KF *16	KF *16	KF *25	KF *25	KF *40	KF *40	KF *40
Maximum ambient temperature	104°F (40°C)						

† The ultimate pressure⁺ of pumps filled with perfluoropolyether fluid is 9×10^{-4} Torr except for 50-Hz D60A pump models. The ultimate pressure of D60A pumps with perfluoropolyether fluid and with 50-Hz motors is 3×10^{-3} Torr.

+ The "ultimate partial pressure" is measured with an LN₂ trapped ionization gauge. The "ultimate pressure with gas ballast" is measured with a Kammerer Type McLeod Compression Gauge. Both of these pressures can be as much as a decade higher when measured with a thermal conductivity gauge.

* KF — Leybold quick assembly clamp ring diameter.

4-3-2 Changing the Pump Fluid

WARNING: IF THE PUMP HAS BEEN USED ON CORROSIVE, TOXIC, OR VOLATILE CHEMICALS, OBSERVE PROPER SAFETY PRECAUTIONS BEFORE REMOVING THE PLUG SCREW (8).

CAUTION: HYDROCARBON PUMP FLUID SHOULD BE CHANGED AT THE FOLLOWING TIMES: (a) AFTER A 100-HOUR BREAK-IN PERIOD OF PUMP OPERATION, (b) WHEN THE PUMP FLUID IS CONTAMINATED (see Section 4-3-3), (c) WHEN CONDENSATION IN THE PUMP FLUID IS SEVERE (see Section 4-2), AND (d) BEFORE AND AFTER THE PUMP IS STORED FOR A LENGTHY PERIOD (see Section 4-3-4). PERFLUOROPOLYETHER FLUID SHOULD BE RECONDITIONED WHEN IT BECOMES CONTAMINATED.

NOTE: Always change the pump fluid while the pump is warm to prevent condensables from remaining in the pump.

Turn the pump off and change the fluid as follows:

1. Proceed as follows to drain the oil from the pump:
 - a. Use an 8-mm allen wrench to remove one oil-fill plug and one oil-drain plug from the pump; allow the oil to drain into a suitable container (see Figure 1-1).
 - b. After the oil flow diminishes, switch ON the pump, allow it to run for about 10 seconds, and then switch it off.
2. If the used oil is discolored, contains particles, has a foul odor, or is very dirty, flush out the pump as follows (see Figure 1-1):
 - a. Reinstall the oil-drain plug with flat gasket into the oil-drain port.
 - b. Pour the approved vacuum oil into the oil-fill port until the oil level is visible at the lower rim of the oil level glass (15) or at the "L" mark on the oil sight gauge (72).
 - c. Reinstall the oil-fill plug with gasket into the oil-fill port.
 - d. Turn ON the pump and allow it to run for about 10 minutes.
 - e. **Shutdown the pump** and refer to Step 1 to drain the oil.
 - f. If the oil used for flushing is dirty, repeat Step 2 to flush out the pump again.

3. For the D2A, D4A, D8A, and D16A pump models only, check the oil filter (35) as follows:

- a. Refer to Steps B-5 and B-6 on page 15 to remove the gas ballast valve (17) and oil filter (35) from the pump (see Figures 5-1 and 5-10B).
- b. Inspect the oil filter (35); if it shows signs of disintegration, install a new one. If it appears to be in good condition, reuse it. This filter reduces the oil mist in the exhaust gas.
- c. Reinstall the oil filter/gas ballast assembly onto the pump.

4. Charge the pump with oil as follows:

- a. Reinstall the oil-drain plug with flat gasket into the oil-drain port.
- b. Remove the oil-fill plug and fill the pump to capacity with the correct vacuum pump oil. Table 4-1 lists the oil capacity for each model and Section 5-A-1 lists the approved vacuum oils.
- c. Reinstall the oil-fill plug with flat gasket.

4-3-3 Checking the Pump Fluid for Contamination

Occasionally check the pump fluid for contamination by looking through the oil level glass (15) on the side of the pump. If the fluid in the oil-level glass (15) has an unusual color, is very dark, or appears dirty or turbid, refer to Section 4-3-2 to change the fluid. For anti-corrosive fluid, flakes in the fluid indicate that its corrosive resistance is spent and thus the fluid should be changed. The oil-sight tube (72) on the end of the oil casing does not give an accurate indication of the condition of the pump fluid (see Figure 5-1).

NOTE: See Section 4-2 for identifying and eliminating condensate from the pump fluid.

NOTE: See Symptom 2 of the Troubleshooting chart (Table 6-1) for other methods of eliminating contamination from the pump fluid.

NOTE: The frequency of pump fluid change can vary from several months to every day depending on the operating conditions of the pump. The frequency must be adjusted to the operating conditions. If the pump fluid becomes contaminated quickly, use an OF-3000 or OF-1000 Oil Filtering System to protect the pump and to extend the period between pump fluid changes.

4-3-4 Long Term Storage (2 weeks or longer)

Use the Section 4-3-2 instructions to flush out the pump and change the pump fluid before and after the pump is stored for a lengthy period. After changing the fluid, run the pump for about 20 minutes with the intake sealed off and the gas ballast valve open (see Section 2-3) to ensure that all the internal parts are coated with clean pump fluid. Cover the intake and exhaust of the pump to prevent dirt, dust, and condensation from entering during storage.

4-3-5 Checking the Dirt Trap


Occasionally check the wire mesh dirt trap (2) that rests on the pump intake tube (1). A buildup of contaminants on the dirt trap reduces the pumping speed.

4-3-6 Avoiding Oil Leaks During Shipping and Storage

Tightly sealing the pump's inlet and exhaust ports for shipping or storage can cause oil leaks. To avoid oil leaks during shipping and storage, use a flexible membrane or a rigid cover with a pin hole on the pump's inlet and exhaust ports. The flexible membrane or pin hole accommodate the pressure differences that occur during air shipments and during temperature changes.

As further precautions against oil leaks during shipping, we insert a wedge up under the coupling housing to hold the anti-suckback lever and seal in the closed position. We also drain the oil from the smaller pumps in case they are turned upside down.

NOTE: Use the form at the back of this manual if you will be sending the pump to our factory or to one of our service centers.

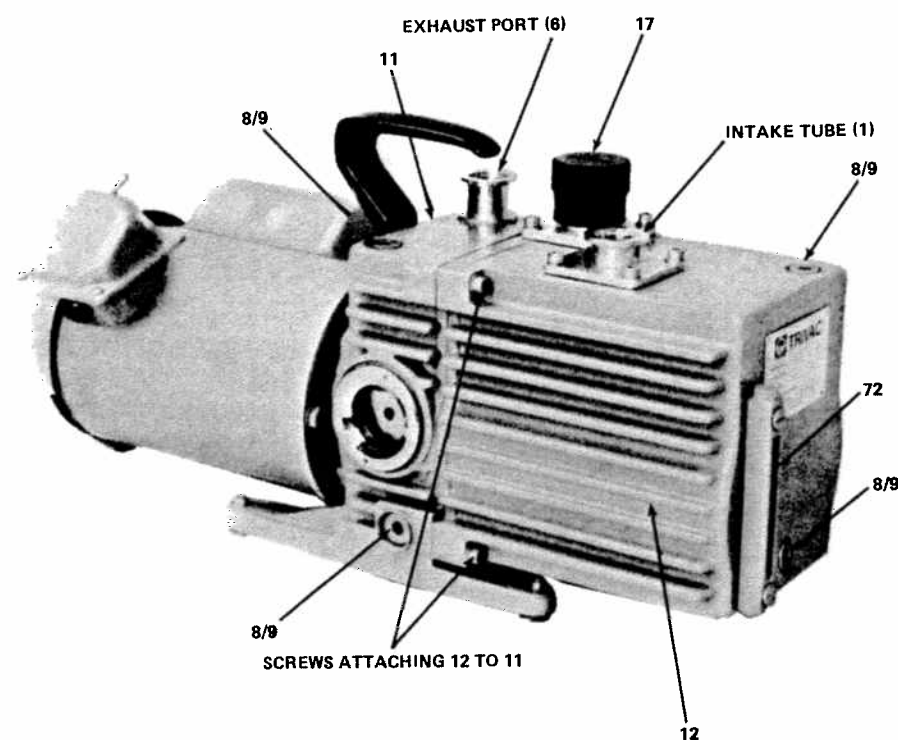

1TA-2.2

Figure 5-1. Assembled Pump (D16A Pump Model Shown)

Remove the oil casing (12) as follows:

- a. Unscrew and remove the lower screws (or nuts) and washers that attach the oil casing (12) to the coupling housing (11) (see Figure 5-1).
- b. **WARNING:** ESPECIALLY FOR THE HEAVIER PUMPS (D30A AND D60A), BE SURE TO SUPPORT THE OIL CASING WHILE REMOVING THE SCREWS (OR NUTS). OTHERWISE, THE CASING MAY FALL, RESULTING IN DAMAGE OR INJURY.

While supporting the oil casing, unscrew and remove the upper screws (or nuts) and washers.

- c. **NOTE:** If you plan to reuse the large flat seal (13) that fits between the oil casing and the coupling housing, carefully peel the seal (13) from the oil-casing flange before removing the oil casing (see Figure 5-2).

Remove the oil casing by sliding it straight back away from the main flange of the coupling housing.

NOTE: If resistance is encountered, strike the front corner of the oil casing (12) with a rubber hammer to release the oil casing (12) from the coupling housing (11).

- B-8 WARNING:** THE DISK ON THE MODULE END HAS A SHARP EDGE. FAILURE TO USE CARE WHEN REMOVING AND HANDLING THE DISK MAY RESULT IN INJURY.

Using a phillips head screwdriver, remove the disk (61) from the shaft (see Figure 5-2).

- B-9 WARNING:** PUMP FLUIDS ARE EXCELLENT LUBRICANTS AND AS SUCH ARE VERY SLIPPERY. BE CAREFUL WHEN HANDLING THE MODULE SINCE IT CONTAINS LUBRICATING FLUID WHICH COULD SPILL CAUSING A HAZARD.

STEP B-9 CONTINUED

Remove the module as follows:

- a. Unscrew and remove the lower screws and washers that attach the module to the coupling housing (11) (see Figure 5-2).
- b. **WARNING:** ESPECIALLY FOR THE HEAVIER PUMPS (D30A AND D60A), BE SURE TO SUPPORT THE MODULE WHEN REMOVING THE SCREWS. OTHERWISE, THE MODULE MAY FALL RESULTING IN DAMAGE OR INJURY.

While supporting the module, unscrew and remove the remaining upper screws and washers.

- c. Pull the module **straight back** and away from the coupling housing (11).


B-10 Clean the large flat seal (13) from the coupling housing (11) and/or front end plate (44) (see Figure 5-2).

NOTE: A replacement gasket is supplied with the gasket set and module repair kit.

5-C DISASSEMBLING THE MODULE

CAUTION: USE CARE WHEN HANDLING THE MODULE TO AVOID BENDING THE LEVER (41) OR CENTRIFUGAL SWITCH (39) (see Figures 5-3 and 5-4).

- C-1** Using a large pair of long nose pliers, pull the valve disk (67) and attached brass piston (68) out of the intake portion of the high vacuum pump cylinder (55) (see Figures 5-3 and -11).

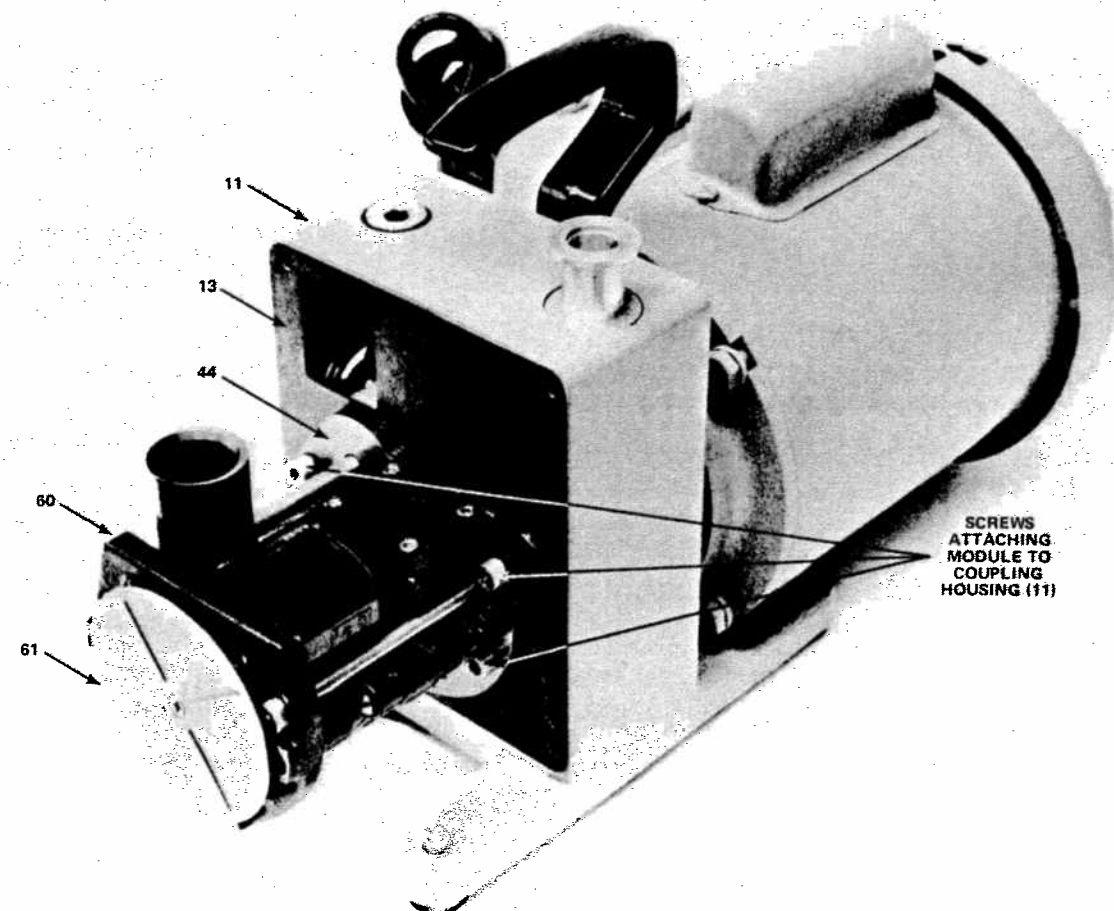

1TA-4.12

Figure 5-2. Module Attached to Coupling Housing (D2A Pump Model Shown)

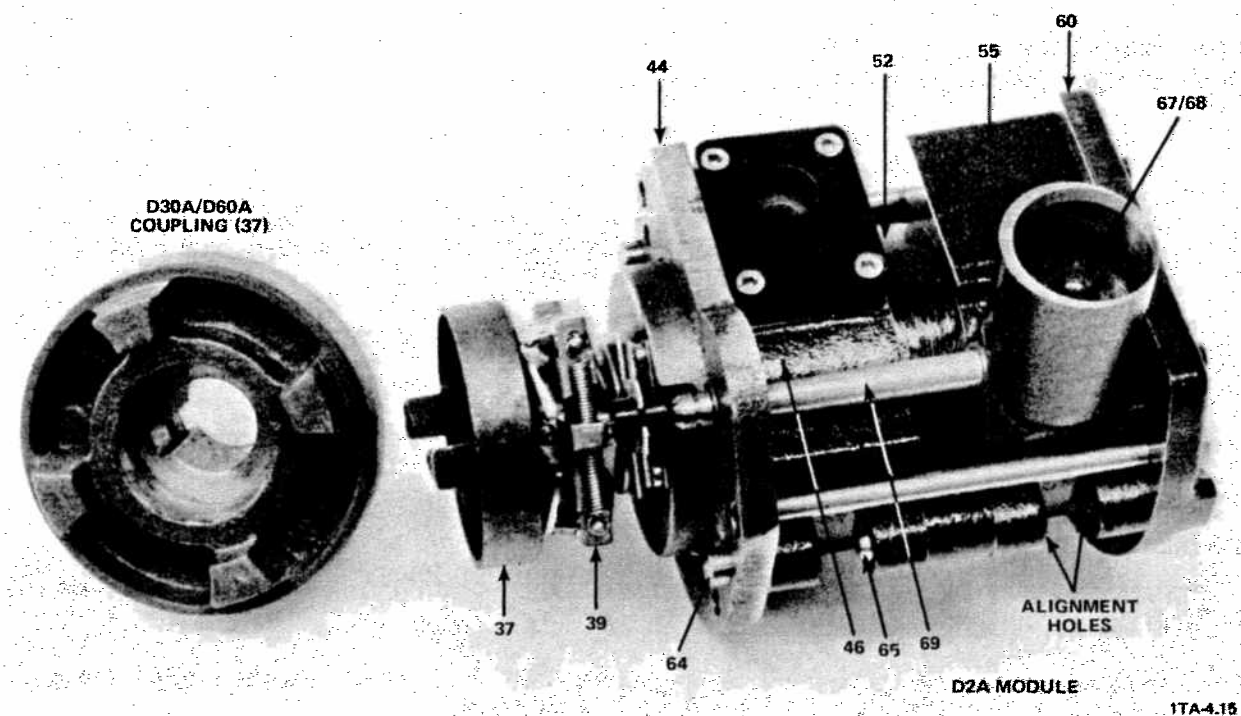


Figure 5-3. Module, Side View (D2A Pump Model Shown)

- C-2 CAUTION:** IF A PULLER IS USED TO REMOVE THE COUPLING (37), BE CAREFUL TO AVOID DAMAGING THE CENTRIFUGAL SWITCH (39).

Using a small screwdriver, loosen the setscrew that secures the coupling (37) to the shaft. Pull the coupling off of the shaft (see Figure 5-3).

- C-3** Using small diagonal cutting pliers, pull the coupling key (38) from the slot in the shaft (see Figure 5-4).

- C-4** Using snap ring pliers, remove the retainer ring (40) from the shaft (see Figure 5-4).

- C-5 NOTE:** For use during reassembly, the centrifugal switch end with the split halves faces the coupling (37).

For the D2A, D4A, D8A, and D16A models only, loosen the one or two setscrews that secure the centrifugal switch (39) to the coupling (37) (see Figure 5-3).

For the D30A, D60A, and D90A pump models only, loosen the setscrew(s) to remove the centrifugal switch (39) from the shaft rather than from the coupling (37).

- C-6** Using a phillips screwdriver, unscrew and remove the two screws that attach the lever to the front end plate. When removing the lever (41), hold its opposite end down to avoid losing the spring (42) from the penetration in the front end plate (44). Remove the lever (41) and spring (42) from the plate (44) (see Figure 5-4).

- C-7** Using a small screwdriver, remove the retainer disk (71) from the slot in the air inlet (69) tube (see Figure 5-4).

- C-8 CAUTION:** FAILURE TO HOLD THE DRIFT PIN (or bolt) STRAIGHT WHEN DRIVING THE CYLINDRICAL PINS COULD RESULT IN DAMAGE TO THE MODULE HOUSING.

Using a hammer and a drift pin (or long bolt), remove the cylindrical pins as follows (see Figure 5-5).

- Drive one of the two short cylindrical pins (64) that aligns the rear end plate (60) and the high vacuum stage pump cylinder (55) toward the center bearing (52) until the pin (64) falls out.

NOTE: On some pump models, this pin (64) does not have room to fall out. In this case, continue driving it until all three pins fall out of the alignment hole in the front end plate (44).

- While keeping the drift pin (or bolt) inserted through the rear-end-plate alignment hole, drive the long cylindrical pin (65) toward the front end plate (44). Continue driving the cylindrical pins

STEP C-8b CONTINUED

until the long pin (65) forces the other short pin (the one that aligns the front end plate (44) and the second stage pump cylinder) to fall out, and then the long pin also falls out of the front-end-plate alignment hole (see Figure 5-5).

- c. Repeat Steps C-8a and C-8b for the two short and one long cylindrical pins on the other side of the module.

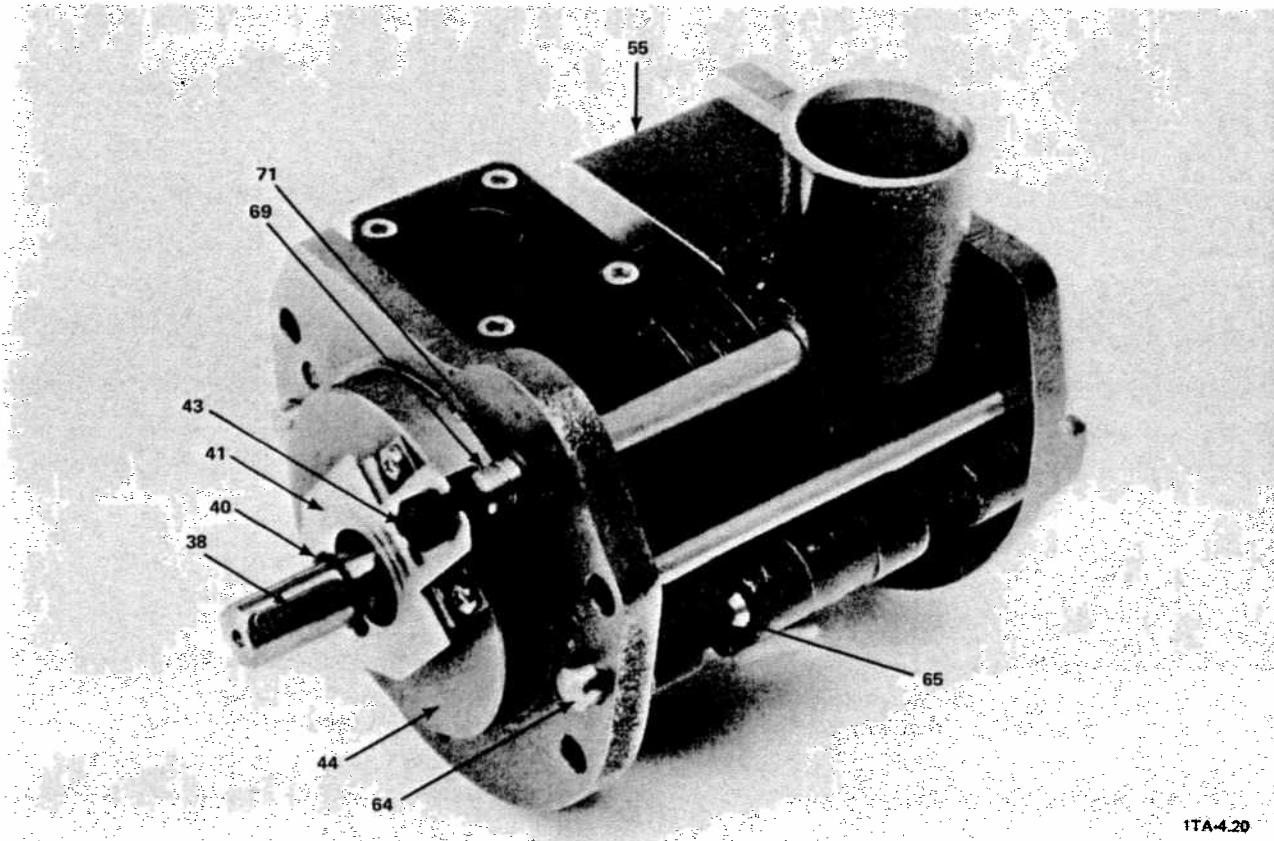


Figure 5-4. Front End of Module Minus Coupling and Centrifugal Switch (D2A Pump Model Shown)

- C-9** Unscrew and remove the hexagon nuts (63) and washers from the ends of the threaded studs (62) which tie the module segments together (see Figure 5-6).

NOTE: The D8A and D16A pump models have four, rather than three, threaded studs and hexagon nuts.

- C-10** Remove the rear end plate (60) from the module (see Figure 5-6).

NOTE: If necessary, lightly tap the back edge of the plate with a rubber hammer to free the plate from the module. This note also applies to Steps C-12, C-13, and C-15.

- C-11 CAUTION:** DO NOT SCRATCH THE INSIDE SURFACE OF THE PUMP CYLINDER OR THE END OF THE ROTOR. SCRATCHES ON THESE SURFACES RESULT IN POOR ULTIMATE PRESSURE.

CAUTION: DO NOT CHIP, SCRATCH, OR BREAK THE EDGES OF THE VANES DURING DISASSEMBLY, IF THEY ARE TO BE REUSED.

NOTE: If you plan to reuse the vanes, be sure to mark the orientation and location of each vane so that during reassembly each used vane is replaced in its same rotor slot and so that each used vane is **not** turned end-for-end in its slot.

REQUIRED ACTION: Using long nose pliers, remove the three vanes (53) from the high vacuum rotor (54). (See Figure 5-7).

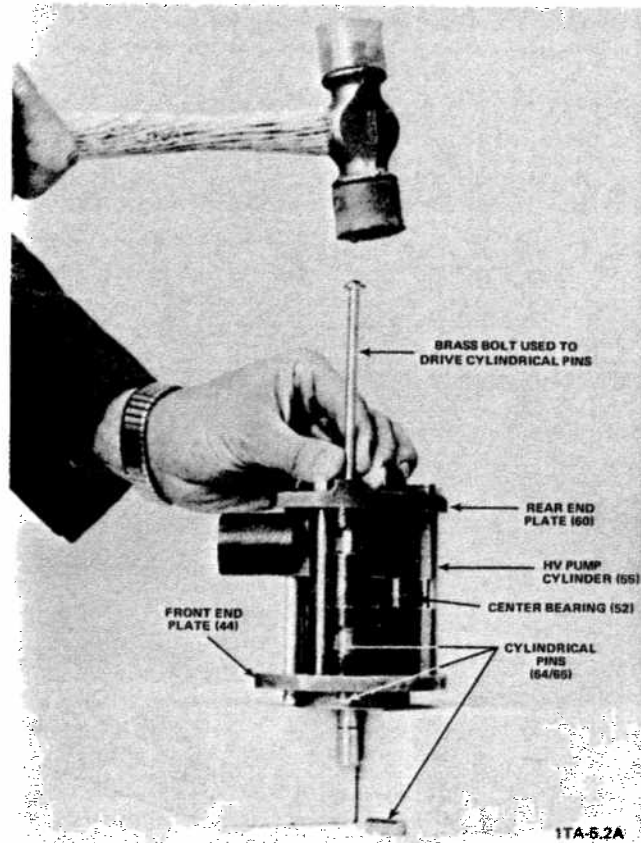


Figure 5-5. Removing the Cylindrical Pins From the Module (D2A Pump Model Shown)


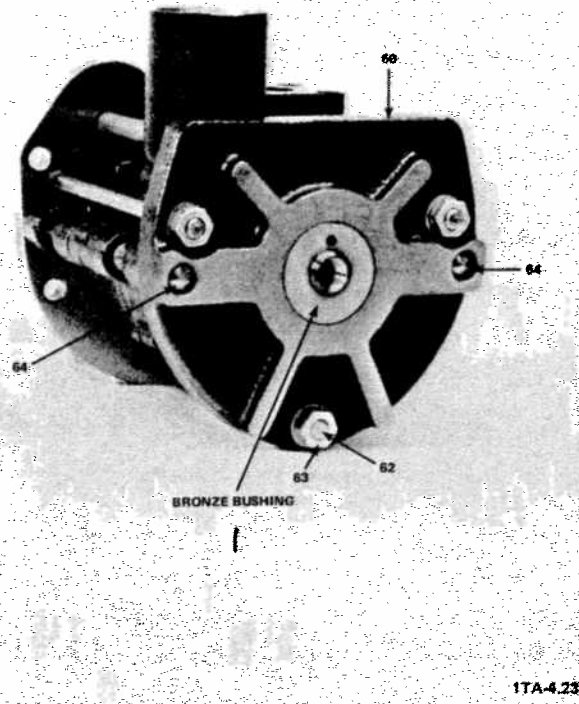



Figure 5-6. Rear End of Module Minus the Disk (D2A Pump Model Shown)

- C-12** Remove the high vacuum stage pump cylinder (55) to expose the high vacuum rotor (54) and the center bearing (52). Remove the O-rings (47) from both sides of this pump cylinder (see Figure 5-7).
- C-13** Remove the front end plate (44) from the motor side of the shaft (see Figure 5-8).
- C-14** Pull the air inlet tube (69) from the front end plate (44) or high vacuum stage pump cylinder (55). (See Figures 5-3 and 5-8.)
- C-15** Remove the second stage pump cylinder (46) to expose the second stage rotor (48). Remove the O-rings (47) from both sides of this cylinder (see Figure 5-8).
- C-16** Repeat Step C-11, except remove the vanes (49) from the second stage rotor (48). (See Figure 5-8).
- C-17** **CAUTION:** BE CAREFUL TO AVOID SCRATCHING THE END OF THE ROTOR OR THE CENTER BEARING. SCRATCHES TO THESE SURFACES RESULT IN POOR PUMP PERFORMANCE.
REQUIRED ACTION: Using a puller or a prying device, remove the high vacuum stage rotor (54) from the shaft.
NOTE: Two threaded metric pulling holes are located in the outside end of the high vacuum rotor (54) for use with a puller (see Figure 5-7).
NOTE: The second stage rotor (48) and the shaft are permanently attached to each other on the D2A, D4A, D8A, and D16A pump models.
- C-18** Using small diagonal cutting pliers, pull the high-vacuum-stage rotor key (57) from the slot in the shaft (see Figure 5-9).
- C-19** Slide the center bearing (52) off of the shaft (see Figure 5-9).

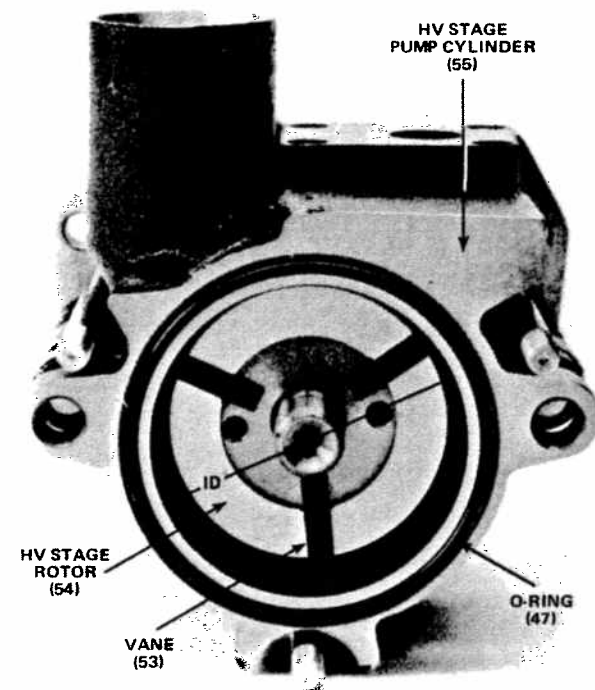

1TA-4.27

Figure 5-7. High Vacuum (HV) Stage Pump Cylinder (D2A Pump Model Shown)

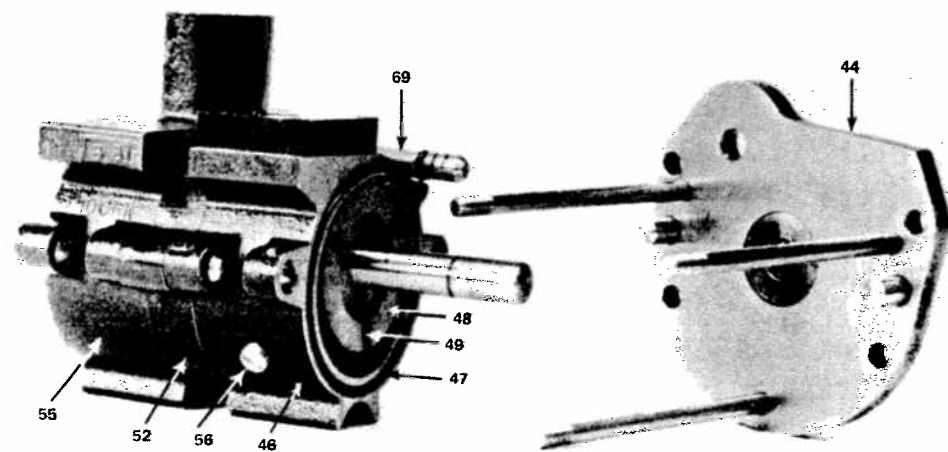

1TA-4.35

Figure 5-8. Second Stage Pump Cylinder (D2A Pump Model Shown)

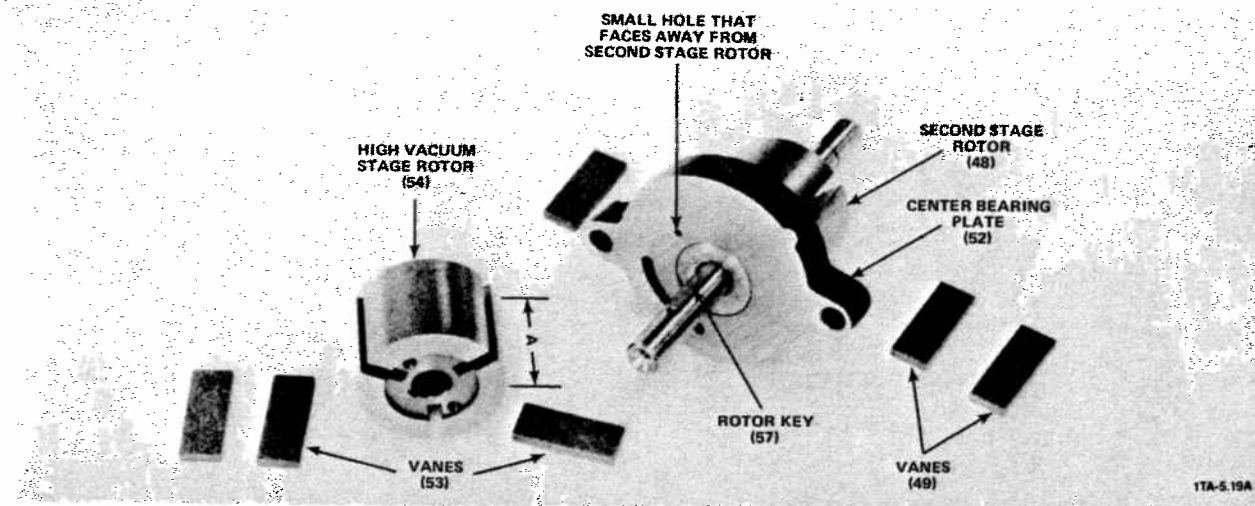


Figure 5-9. High Vacuum Stage Rotor Removed From the Shaft (D2A Pump Model Shown)

5-D DISASSEMBLING THE REMAINING PARTS

D-1 Disassemble the gas ballast valve as follows:

- a. For all pump models, pull the cap (18) off of the gas ballast valve (17). (See Figure 5-10A.)
- b. For the D8A and D16A pump models only, use snap ring pliers to remove the retainer ring (34) from the gas ballast valve tube (17), then slide the cover (33) off of the tube (17).
- c. For all pump models, slide the O-ring (27), flat gasket (29), and spring (28) off of the gas ballast valve (17) tube (see Figure 5-10B).
- d. For the D2A and D4A pump models only, use a screwdriver to unscrew and remove the nonreturn valve (23) assembly from inside of the top of the gas ballast valve (see Figure 5-10A).
- e. For the D2A and D4A pump models only, use a small screwdriver to unscrew and remove the strengthening piece (26), spring (25), and flat gasket (24) from the nonreturn valve (23). (See Figure 5-10A).
- f. For D8A, D16A, D30A, D60A, and D90A pump models only, use a screwdriver to remove the retaining washer (21), valve (19), and O-ring (20) from inside of the top of the gas ballast valve (See Figure 5-10A).
- g. For the D30A, D60A, and D90A pump models only, remove the retainer ring (30), valve plate washer (32), spring (31), and valve plate (32) from the tube end of the gas ballast valve (See Figure 5-10B).

D-2 Remove the two O-rings (70) from the air inlet tube (69). (See Figure 5-11.)

D-3 Remove the O-ring (3) from the dirt trap (2). (See Figure 5-11.)

D-4 Remove the O-ring (5) from the end of the pump intake tube (1). (See Figure 5-11.)

D-5 For D2A, D4A, D8A, and D16A pump models, pull the brass piston (68) from the valve disk (67). (See Figure 5-11.)

For D30A, D60A, and D90A pump models, unscrew the brass piston (68) from the valve disk (67). (See Figure 5-11.)

D-6 Remove the flat gasket (9) from each of the two plug screws (8). (See Figure 5-11.)



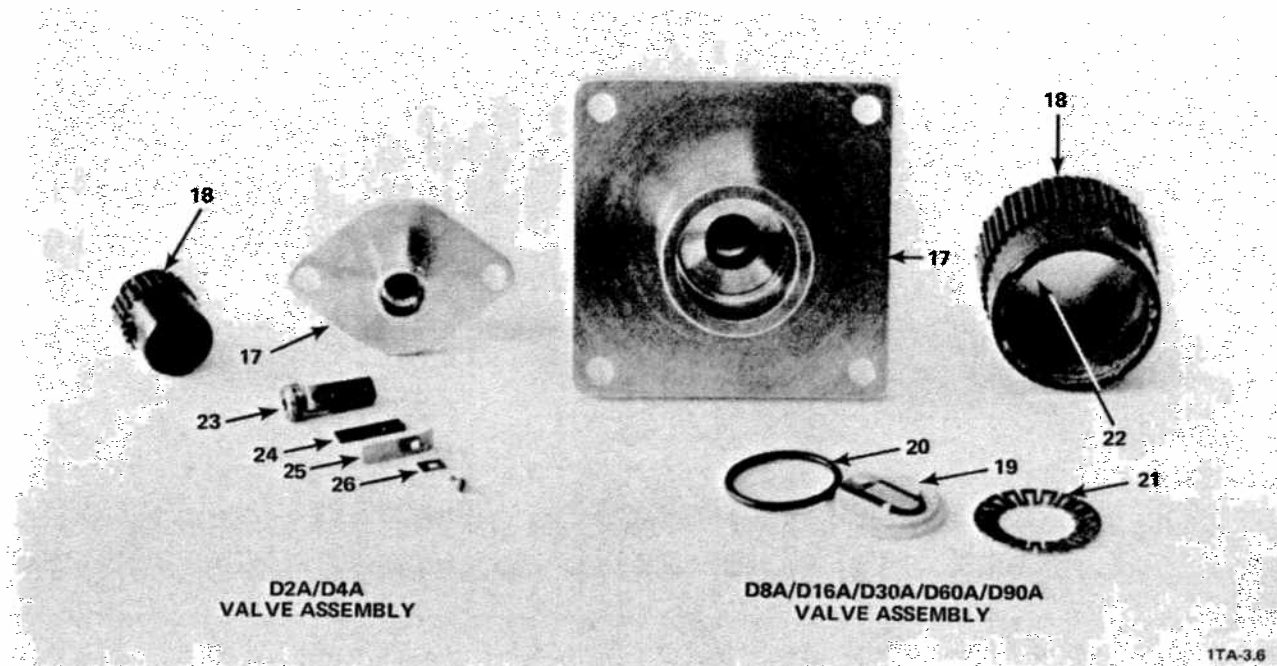


Figure 5-10A. Cap End of Gas Ballast Valve

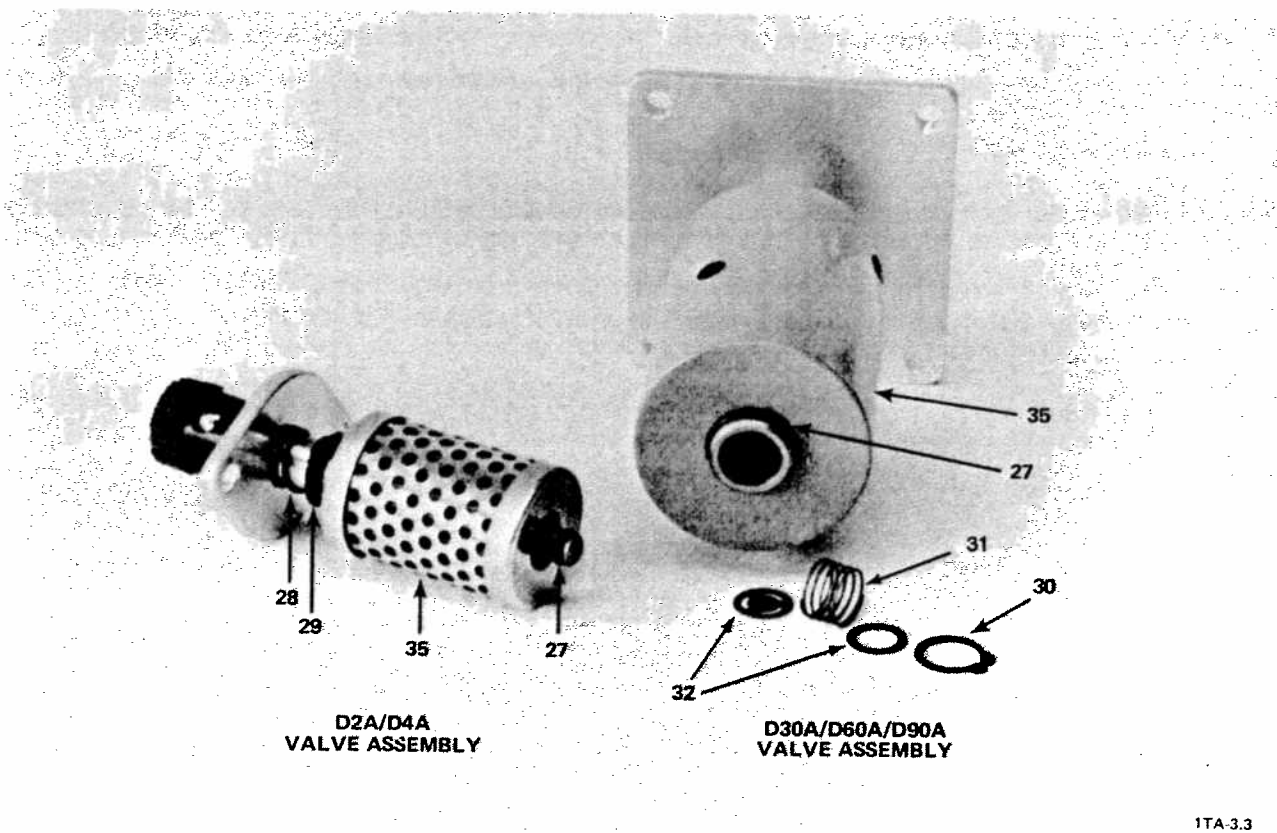

NOTE: The tube end of the D8A/D16A gas ballast valve is similar to the D2A/D4A, except the D8A/D16A has a cover (33) and retainer ring (34) above the oil filter (35).

Figure 5-10B. Tube End of Gas Ballast Valve

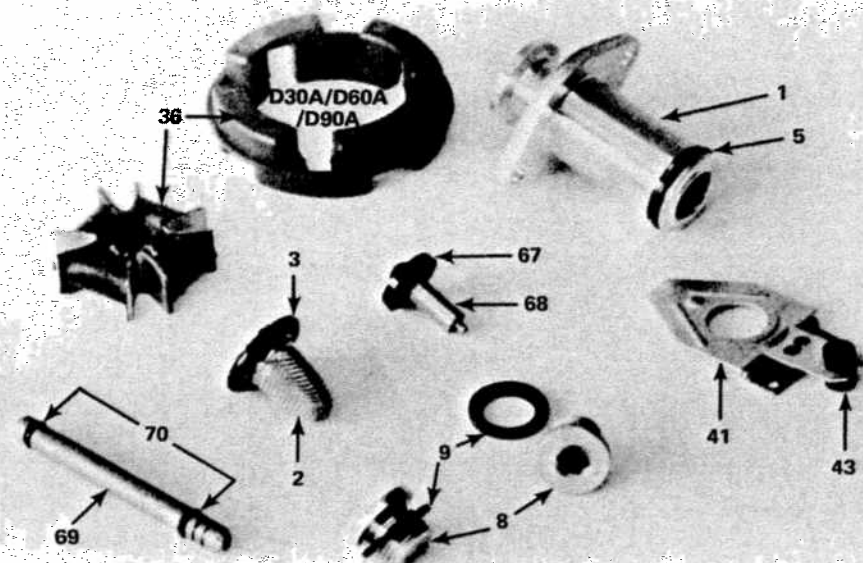

1TA-3.11

NOTE: All parts shown are from a D2A pump model, except for the D30A/D60A/D90A coupling ring (36).

Figure 5-11. Miscellaneous Disassembled Parts

D-7 Remove the seal (43) from the lever (41). (See Figure 5-11.)

D-8 **CAUTION:** BE CAREFUL TO AVOID SCRATCHING THE END PLATE OR INSIDE OF THE BRONZE BUSHING WHEN REMOVING THE RADIAL SHAFT SEAL. SCRATCHES TO THESE SURFACES COULD RESULT IN POOR PUMP PERFORMANCE.

Remove the radial shaft seal (45) from the rear end plate (60) as follows (see Figure 5-12).

- Place a thin wooden block on/or beside the end plate.
- CAUTION:** DO NOT INSERT ANY TYPE OF PRYING DEVICE INTO OR THROUGH THE BRONZE BUSHING.

Insert the end of a screwdriver between the bronze bushing and the shaft seal (45). Rest the shaft of the screwdriver on the wooden block.

- Using the wooden block as a fulcrum and the screwdriver as a lever, pry the shaft seal (45) out of the end plate.

D-9 Unscrew and remove the threaded studs (62) from the front end plate (44). (See Figure 5-12.)

NOTE: The D8A and D16A pump models have four threaded studs, rather than three.

NOTE: For use during reassembly, the ends of the threaded studs (62) that have the shorter threaded section screw into the front end plate (44) (see Figure 5-8). During reassembly, the threaded studs should be screwed until they are tight in the front end plate.

D-10 Repeat Step D-8, except remove the shaft seal (45) from the front end plate (44).

D-11 For the D4A, D16A, D60A, and D90A pump models only, use an allen wrench to remove the two screws that attach the retaining bracket (59) to the high vacuum pump cylinder (55). Remove the retaining bracket and the valve plate (58) from the pump cylinder (see Figure 5-13).

NOTE: The D2A, D8A, and D30A pump models do not have retaining brackets (59) and valve plates (58).

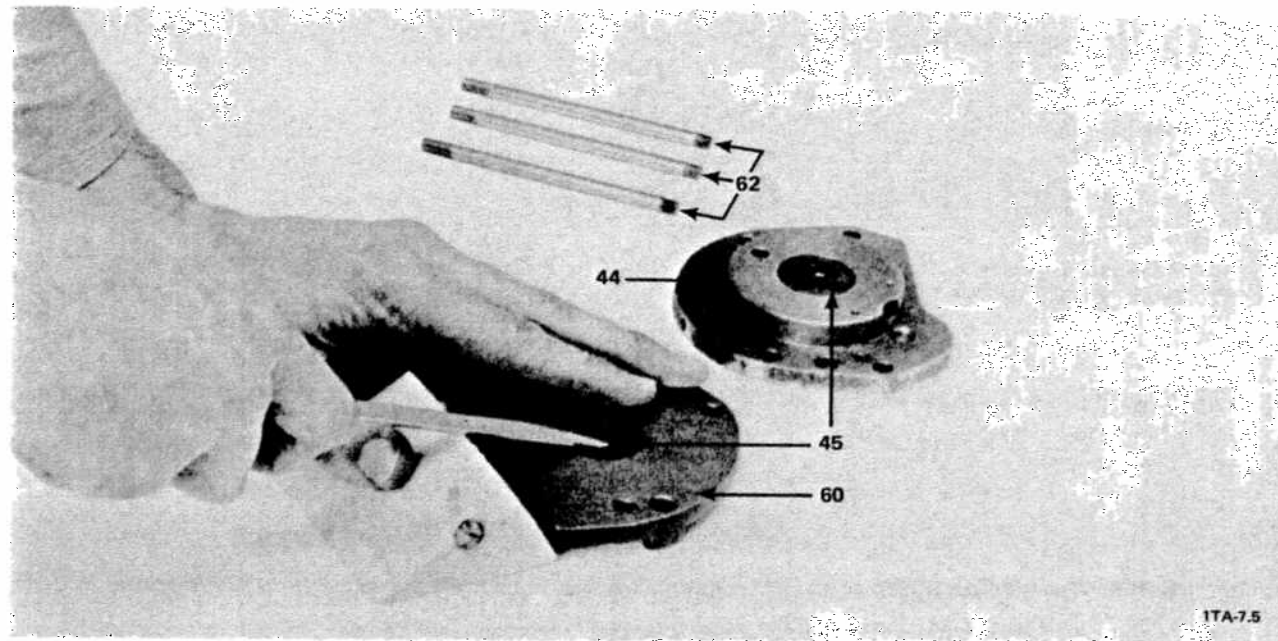


Figure 5-12. Removing the Radial Shaft Seal From the End Plates (D2A Pump Model Shown)

NOTE: The D60A and D90A pump model has two retaining brackets (59) and two valve plates (58) that must be removed.

NOTE: For use during reassembly, the thicker viton section of the valve plate (58) faces up.

D-12 NOTE: When removing the valve stop (51), observe the orientation of the valve stop, valve plate (50), and pump cylinder (46). It is important that these parts are placed in this same orientation during reassembly (see Figure 5-14).

Unscrew and remove the four screws that attach the valve stop (51) to the top of the second stage pump cylinder (46). Remove the valve stop (51) and thin metal valve plate (50) from the pump cylinder (46). (See Figure 5-14.)

NOTE: The valve stops (51) on the larger pumps are cast aluminum. On most of the smaller pumps, the valve stops are a black plastic.


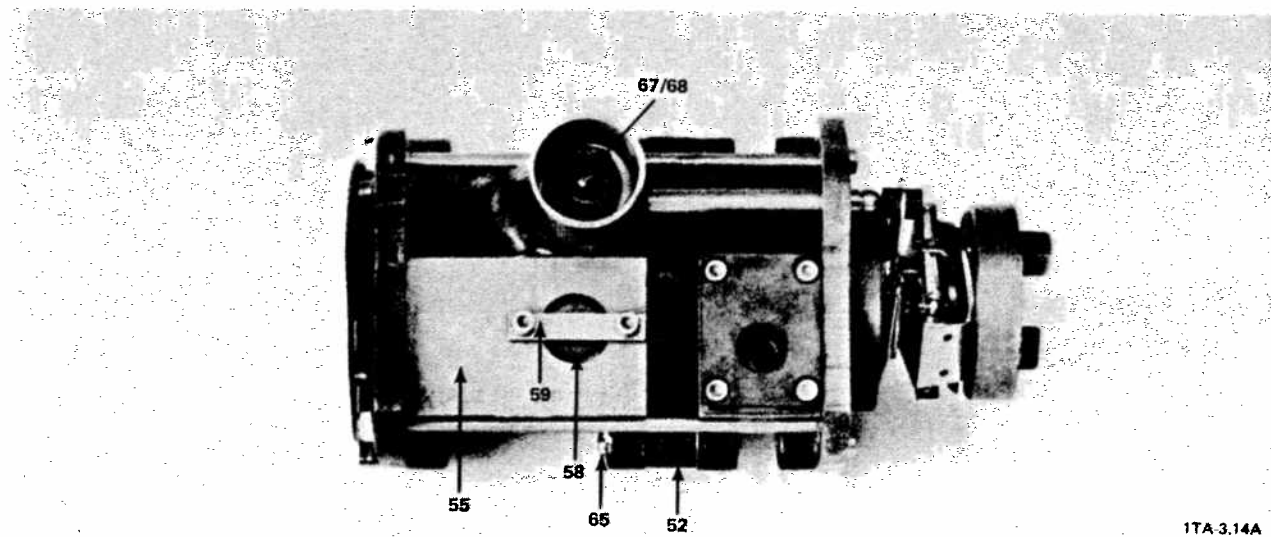


Figure 5-13. D4A Module Showing Retaining Bracket and Valve Plate

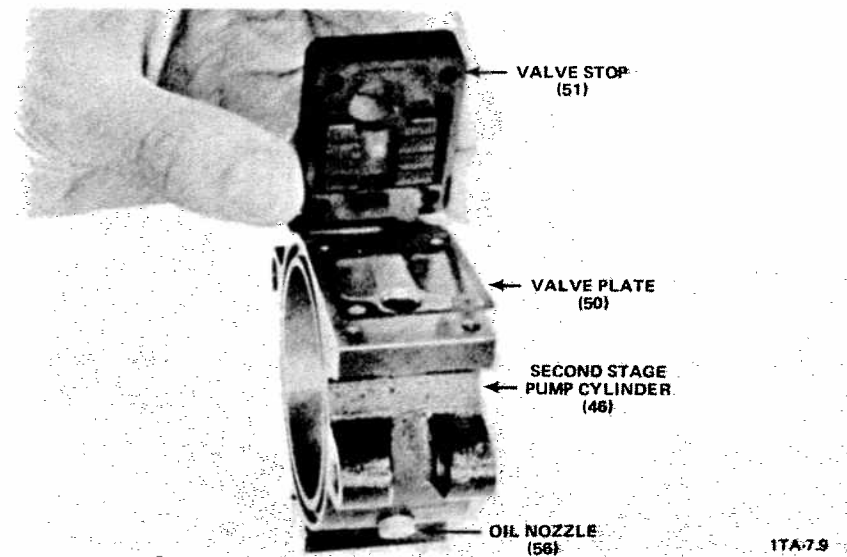

NOTE: The valve plate (50) on the D30A/D60A/D90A pump models has four tabs rather than two.

Figure 5-14. Removing the Valve Stop and Plate (D2A Pump Model Shown)

- D-13** Using a U.S. standard wrench, unscrew and remove the four nuts and washers that attach the motor (73) to the coupling housing (11). Remove the motor from the coupling housing (see Figure 5-15).
- D-14** For the D2A, D4A, D8A, and D16A pump models only, pull the elastic element (36) off of the coupling (37) mounted on the motor shaft (see Figure 5-15).
- For the D30A, D60A, and D90A pump models only, pull the coupling ring (36) off of the coupling (37) mounted on the motor shaft (see Figures 5-11, 5-3, and 5-15).
- D-15 CAUTION:** DO NOT USE CHANNEL LOCK PLIERS TO REMOVE THE OIL LEVEL GLASS ASSEMBLY FROM THE COUPLING HOUSING. USING CHANNEL LOCKS COULD RESULT IN DAMAGE TO THE OIL LEVEL GLASS ASSEMBLY.

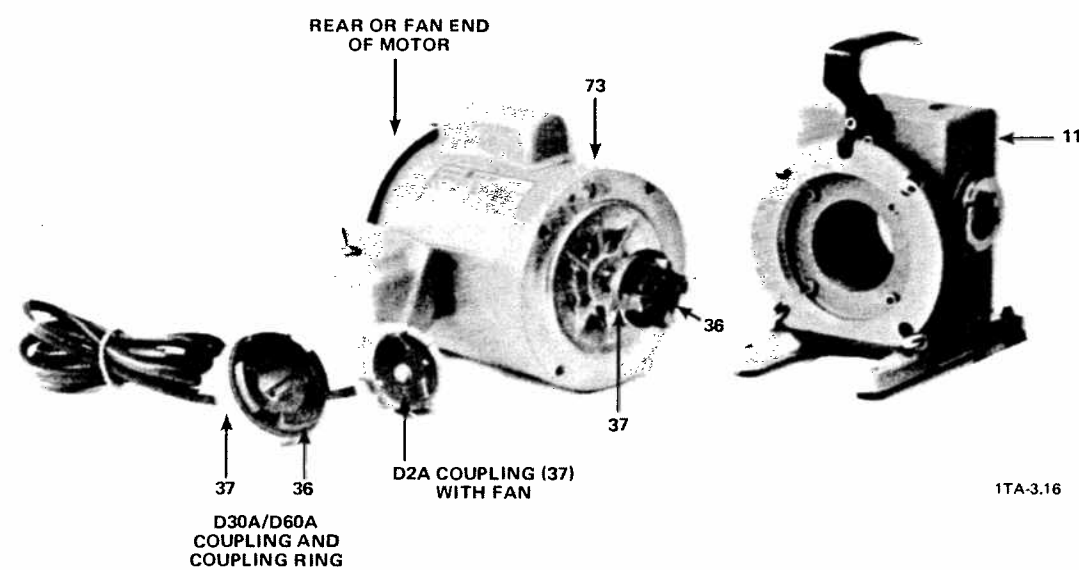


Figure 5-15. Coupling Housing and Motor (D2A Pump Model Shown)

STEP D-15 CONTINUED

If necessary for cleaning, remove and disassemble the oil level glass assembly (15) as follows:

- a. Use one of the following three methods to remove the oil level glass assembly from the coupling housing (11).

Method (1) — Unscrew the assembly using an adjustable spanner which has the correct pin locations to match the two holes in the assembly.

or

Method (2) — Place the nose ends of a large pair of snap ring pliers into the two holes in the assembly (15); insert a screwdriver or small bar between the nose ends of the snap ring pliers; use the screwdriver or bar to force the pliers and the assembly to turn counterclockwise; unscrew the assembly from the coupling housing (see Figure 5-16).

or

Method (3) — Place a sturdy pin, drift pin, or drill bit into each of the two holes in the assembly (15); cross the pins to form an "X"; insert a screwdriver or small bar through the oil-level-glass-assembly side of the "X"; use the screwdriver or bar to force the pins and the assembly to turn counterclockwise; unscrew the assembly (15) from the coupling housing (11).

- b. Disassemble the oil level glass assembly (15) as follows:

- (1) Using long nose pliers, unscrew the target piece from the assembly.
- (2) Push the glass and gaskets out of the assembly.

5-E CLEANING AND INSPECTING THE DISASSEMBLED PUMP

CAUTION: THE SECTION 5-E INSTRUCTIONS ARE FOR CLEANING PUMP PARTS. DO NOT USE THESE INSTRUCTIONS FOR CLEANING THE MOTOR.

It is not necessary to clean parts that will not be reused. A new valve disk (67) and elastic element (36), and all new seals, gaskets, and O-rings should be used for all pumps.

Use Freon TF or acetone to **clean all surfaces thoroughly**. For final rinse, use solvents such as alcohol or Freon TF.

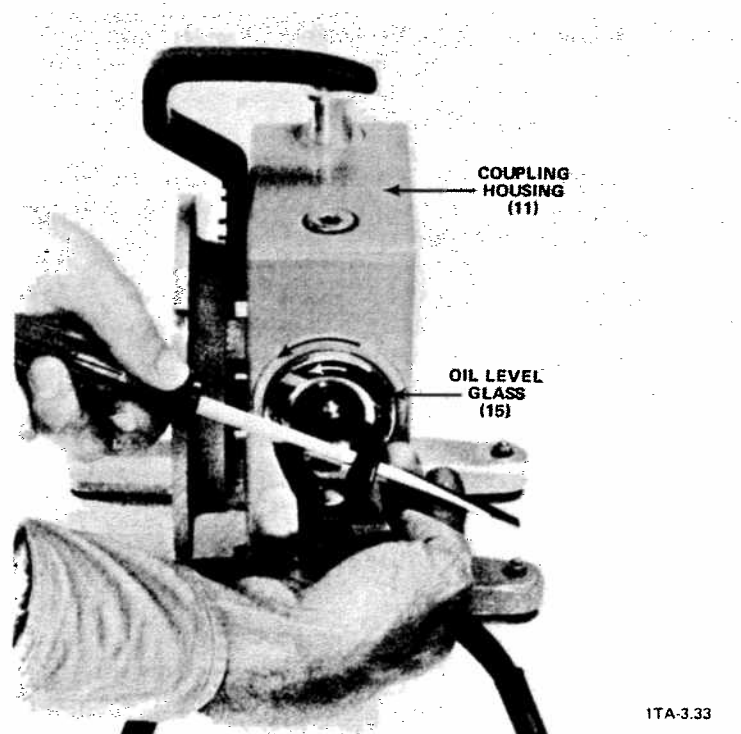


Figure 5-16. Removing the Oil Level Glass (15) From the Coupling Housing (D2A Pump Model Shown)

5-E-1 Special Requirements for Extreme-Corrosive Service Pumps

WARNING: STEPS 1 THROUGH 4 BELOW MUST BE FOLLOWED FOR EXTREME-CORROSIVE SERVICE PUMPS.

1. **NOTE:** New vanes (49/53) and a new oil filter (35) are required for extreme-corrosive service pumps; therefore, it is not necessary to do Step E-8c.

REQUIRED ACTION: Refer to Steps E-1 through E-8b(2) to clean and inspect all metal parts.

2. Degrease all tools that will be used for handling degreased extreme-corrosive service pump parts. Ensure that the working surface is free of any hydrocarbon substance.
3. Degrease and rinse all metal pump parts in a nonhydrocarbon solvent.
4. Wet all seals and all internal pump parts with the recommended perfluoropolyether pump fluid.

5-E-2 Instructions for Cleaning and Inspecting All Pump Models

Give particular attention to cleaning the following areas.

- E-1. Inspect all O-ring grooves for burrs and dirt. Sand and/or clean as necessary.

- E-2. **CAUTION:** FAILURE TO REMOVE BURRS AND SCRATCHES FROM THE SHAFT COULD RESULT IN DAMAGE TO THE RADIAL SHAFT SEALS (45).

Inspect the coupling key (38) and the shaft for burrs or scratches. Sand smooth, if necessary (see Figure 5-4).

- E-3. Ensure that all dirt accumulation is cleaned from all passages, including the following:

- a. The hole on the bottom edge of the front end plate (44) — this hole extends all the way to the bronze bushing.
- b. The small hole in or just above the rear-end-plate (60) and front-end-plate (44) bronze bushing (see Figures 5-6 and 5-8).
- c. The oil nozzle (56) hole in the second stage pump cylinder (46) — remove the oil nozzle screw and clean the screw and the hole (see Figure 5-14); then screw the oil nozzle (56) into its hole in the cylinder (46).

NOTE: The D30A, D60A, and D90A pump models have two oil nozzles that must be cleaned.

- d. **For D30A, D60A, and D90A pump models only,** clean the brass air nozzle screw (66) located inside of the intake tube portion of the high vacuum pump cylinder (55).
- e. The tiny silencing hole in the side of the gas ballast valve (17) stem just **below** the bolting flange - use fine wire to clear any dirt from the hole; **DO NOT ENLARGE THE HOLE.**

- E-4. Using a brush, thoroughly clean the center bearing (52). (See Figure 5-9.)

- E-5. Clean all dirt accumulation or buildup from the three vane slots in each rotor (48/54). (See Figure 5-9.)

- E-6. Visually inspect the air inlet tube (69) to ensure that it is clear of debris (see Figure 5-11).

E-7. Thoroughly clean the coupling housing (11), making certain that no dirt has accumulated in the crevices of the housing (see Figure 5-15).

E-8. Carefully inspect all parts for excessive wear. Give particular attention to the following:

- a. The ends of each rotor (48/54) may be wearing against the inside surface of the front (44) and rear (60) end plates or against the center bearing (52). Inspect these surfaces for gouges and wear (see Figure 5-8). If you observe scoring or wear, proceed as follows:
 - (1) Replace the plate that is scored.
 - (2) Check the rotors for burrs. If burrs are found, sand or file them smooth.
 - (3) Using calipers or micrometers, measure the length of each rotor (Dimension A of Figure 5-9). If the length dimension of either rotor is less than the dimension listed for your pump model in Table 5-1 (on the following page), replace that rotor.
- b. The shaft rides in bronze bushings in the front (44) and rear (60) end plates and in the center bearing (52) plate (see Figures 5-6, 5-8, and 5-9). Inspect the inside surface of these three bronze bushings for gouging or wear. If you observe deep gouging, replace the gouged shaft or the plate containing the gouged bushing. If you observe minor scratches or wear, proceed as follows:
 - (1) Using calipers or micrometers, measure the inside diameter (ID) of the bronze bushing. If the ID is greater than the dimension listed for your pump in Table 5-1, replace the end plate or center bearing plate containing the worn bushing.
 - (2) Using calipers, measure the outside diameter (OD) of the shaft at each area of wear. If the shaft OD at any point of wear is less than the dimension listed for your pump model in Table 5-1, replace the shaft.
- c. Three rectangular vanes (49/53) fit into slots in each rotor (48/54). (See Figures 5-7 and 5-8.) Using calipers or micrometers, measure the length and thickness dimension of each vane. If either dimension is greater than the maximum or less than the minimum dimension listed for your pump model in Table 5-1, replace that vane. If a vane dimension is greater than the maximum, it is the result of swelling due to chemical attack.

E-9. Using a paint brush, cover all the pump parts with a light coat of the proper pump fluid. (see Section 5-A-1).

5-F REASSEMBLING THE PUMP

New seals, gaskets, and O-rings and a new valve disk (67) and elastic element (36) should be used when re-assembling the pump. Use a new valve plate (50) only if wear is visible on the old valve plate. For extreme-corrosive service pumps, new vanes (49/53) and a new oil filter (35) are also used.

Wet the O-rings, gaskets, and seals with a film of the proper pump fluid before installing. Make certain that all O-rings, gaskets, seals, and all pump parts are clean before reassembly.

F-1 CAUTION: IF THE PUMP ROTATES IN THE WRONG DIRECTION FOR TOO LONG, PUMP FLUID IS EJECTED OUT OF THE INTAKE TUBE (1) AND THE VALVE DISK (67) OR THE MOTOR MAY BE DAMAGED.

Ensure that the direction of rotation of the motor is correct as follows:

- a. **Steps a(1) and a(2) are for the D30A pump models with single-phase motors and for all D2A, D4A, D8A, and D16A pump models.***

*See plate on motor for motor specifications.

TABLE 5-1. ROTOR, BEARING, SHAFT, AND VANE CRITICAL DIMENSIONS

Pump Model		D2A	D4A	D8A	D16A	D30A	D60A/D90A
Minimum Rotor Length (mm)	S ^a	34.970	34.970	44.960	44.960	74.921	74.921
	HV ^a	34.970	69.970	44.960	89.960	74.921	149.890
Maximum Bushing Diameters (mm)	F ^b	12.027	12.027	15.027	15.027	22.033	22.033
	C ^b	12.027	12.027	15.043	15.043	22.070	22.070
	R ^b	12.027	12.027	15.027	15.027	22.033	22.033
Minimum Shaft Diameter at Points of Wear (mm)		11.992	11.992	14.992	14.992	21.991	21.991
Second Stage Vane Dimensions (mm)	L ^c max.	34.991	34.991	44.991	44.991	74.990	74.990
	L ^c min.	34.980	34.980	44.980	44.980	74.971	74.971
	T ^c max.	4.47	4.47	4.47	4.47	4.47	4.47
	T ^c min.	4.445	4.445	4.445	4.445	4.440	4.440
High Vacuum Stage Vane Dimensions (mm)	L ^c max.	34.991	69.990	44.991	89.988	74.990	149.986
	L ^c min.	34.980	69.977	44.980	89.973	74.971	149.961
	T ^c max.	4.47	4.47	4.47	4.47	4.47	4.47
	T ^c min.	4.445	4.445	4.445	4.445	4.440	4.440
Maximum Inside Diameter ^d of Pump Cylinders (mm)		54.830	54.830	78.630	78.630	118.535	118.535

a — S = second stage pump cylinder; HV = high vacuum stage pump cylinder.
b — F = front bushing; C = center bushing; R = rear bushing.
c — L = length; T = thickness; max. = maximum; min. = minimum.
d — See Figure 5-7.

- Step F-1 (a) (Cont'd.) a(1) **If the motor is single phase and it was supplied through Leybold**, it has been factory altered the wiring or replaced the motor. If the wiring was altered or the motor replaced, refer to Step a(2) below.
- a(2) **If the motor is 3-phase, or if it wasn't supplied through Leybold, or if its wiring was altered**, check the direction of rotation as follows:
- (a) Connect the power supply momentarily to jog the motor, and then immediately switch it off.

Step a(2) (Cont'd)

- (b) Check if the fan on the rear end of the motor is rotating in the correct direction. Looking from the fan end of the motor, the fan and motor shaft should be rotating clockwise (see Figure 5-15).
Another method to check rotation is to place your hand over the pump's inlet port; if you can feel suction, then the rotation direction is correct.
- (c) Turn off the motor and disconnect the power supply.
- (d) If the rotation direction is incorrect, reverse it by interchanging the electrical line connection at the motor end, then repeat Steps a(2) (a) through a(2) (c) above. For 3-phase motors, correct the direction of rotation by interchanging any two of the three phases.

b. Steps b(1) and b(2) below apply only to D30A, D60A, and D90A pump models with three phase motors.

- (1) If the pump has a new motor supplied by Leybold, a rotational lock bearing has been correctly installed at the factory to prevent the motor from rotating in the wrong direction. In this case, check the wiring of the motor as follows:

CAUTION: FAILURE TO IMMEDIATELY TURN OFF THE MOTOR IF THE MOTOR FAN DOES NOT ROTATE COULD RESULT IN DAMAGE TO THE MOTOR AND THE PUMP.

- (a) Connect the power supply and turn the motor on.
- (b) Check if the fan on the rear end of the motor (see Figure 5-15) rotates.
- (c) Turn off the motor and disconnect the power supply.
- (d) If the fan did not rotate, correct the motor wiring by interchanging any two of the three phases; then repeat Steps b(1) (a) through b(1) (c).

- (2) If the motor was not supplied through Leybold or the pump has an old Leybold supplied motor, grab the motor shaft or motor fan and attempt to turn it clockwise and then counterclockwise; then proceed as follows:

CORRECTLY INSTALLED LOCK BEARING

Looking from the fan end of the motor, if the fan or shaft will turn clockwise and will not turn counterclockwise, the pump has a correctly installed rotational lock bearing. In this case, do Steps b(1) (a) through b(1) (d) to check the wiring.

LOCK BEARING INSTALLED BACKWARDS

Looking from the fan end of the motor, if the fan or shaft will turn counterclockwise and will not turn clockwise, the rotational lock bearing is installed backwards. In this case, do Steps b(2) (a) through b(2) (s), which follow, to disassemble the motor and install the lock bearing correctly.

NO LOCK BEARING OR MALFUNCTIONING LOCK BEARING

If the fan or shaft will rotate in both directions, we recommend installing a rotational lock bearing. (See Steps b(2) (a) through b(2) (s).) If you have insufficient time to order and install a rotational lock bearing now, do Steps a(2) (a) through a(2) (d) to ensure correct rotation of the motor; then order and install a rotational lock bearing as soon as possible.

Proceed as follows to install a rotational lock bearing (see Figure 5-17). Note that the rotational lock bearing is installed on the fan end of the motor for all pump models except for D60A/D90A pump models with Marathon motors. The lock bearing on D60A/D90A's with Marathon motors is installed on the shaft end.

NOTE: Catalog numbers for the required parts and materials are listed in Table 5-2.

NOTE: If the motor is attached to the pump, remove the motor before proceeding with Steps (a) through (s).

- (a) Unscrew and remove the screws that attach the fan cover to the end of the motor. Remove the fan cover.

Step F-1b (2) (Cont'd.) (b) For D30A pump models, use an allen wrench to loosen the setscrews that secure the fan to the shaft. Remove the fan.

For D60A and D90A pump models, loosen the screw that secures the fan to the shaft. Remove the fan; then use diagonal cutting pliers to remove the key from the shaft.

NOTE: For use during reassembly, the fan must be positioned on the shaft so that it does not contact the fan end-plate or the fan cover.

TABLE 5-2. Parts Required for Installing the Rotational Lock Bearing

Pump Model	Quantity	Part Name	Part Number
D30A	1	Rotational Lock Bearing KK17	99 104 0045
	2	Spring Washer	725 34 002
		Loctite 601	
D60A/D90A	1	Rotational Lock Bearing KK35 for Marathon Motors*	721 12 005*
	1	Rotational Lock Bearing KK30 for GE Motors	721 12 004
	2	Spring Washers K 6206 for GE Motors	99 164 002
		Loctite 601 or 609	

*For D60A and D90A pumps that have Marathon motors, the rotational lock bearing goes onto the shaft end of the motor, not on the fan end.

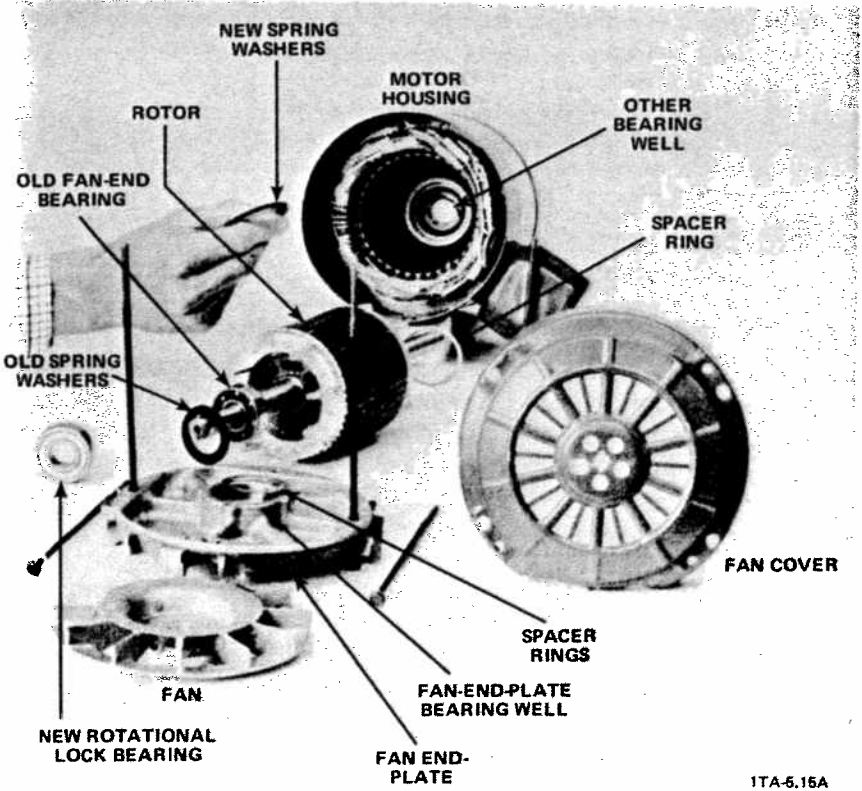


Figure 5-17. Disassembled Motor (D30A Motor Shown)

Step F-1b (2) (Cont'd.)

- (c) Unscrew and remove the four hex head bolts that attach the fan end-plate to the motor. Use a hammer to tap the edge of the fan end-plate to remove it from the motor.
NOTE: If the motor has a malfunctioning rotational lock bearing, it will be necessary to use a torch to heat the center of the fan end-plate and the shaft. The heat should help loosen the Loctite 609 which bonds the OD of the rotational lock bearing to the fan-end-plate bearing well. The lock bearing is press fit and bonded to the shaft with Loctite. Additional heat may be required to separate the lock bearing from the shaft.
- (d) Except for D60A/D90A's with Marathon motors, remove and discard the three spring washers that fit between the fan end-plate and the bearing.
- (e) Remove the shaft and attached rotor from the motor housing.
NOTE: It may be necessary to tap the other end of the shaft to free the shaft from the other end-plate.
- (f) For D30A pump models only, remove and save for reassembly the two spacer rings that fit into the fan-end-plate bearing well. Remove and discard the spacer ring that fits against the bearing on the other end of the shaft.
- (g) Grease the two new spring washers (see Table 5-2) and place them together so that the IDs are tight against each other and so that there is a gap between the ODs. (Figure 5-17 shows ungreased spring washers placed together as described above.)
- (h) Except for the D60A/D90A's with Marathon motors, reach through the motor housing to place the two new greased spring washers into the bearing well in the other end plate.
- (i) Except for the D60A/D90A's with Marathon motors, use a puller to remove and discard the fan-end bearing from the shaft.
NOTE: The fan-end bearing is the smaller bearing.
- (j) **CAUTION:** IF ALL GREASE IS NOT REMOVED FROM THE MATING SURFACES, THE LOCTITE WILL NOT FORM A PERMANENT BOND AND THE ROTATIONAL LOCK BEARING WILL NOT WORK. THE BEST SOLVENT FOR THIS PURPOSE IS TRICHLOROETHANE. THE FOLLOWING SOLVENTS SHOULD NOT BE USED, SINCE THEY LEAVE A FILM ON THE SURFACE: KEROSENE, GASOLINE, NAPHTHA, FUEL OIL, VARSOL, AND STODDARD SOLVENTS.
CAUTION: DO NOT IMMERSE THE NEW ROTATIONAL LOCK BEARING IN SOLVENT. GREASE MUST REMAIN IN THE INSIDE OF THIS BEARING.
 Wipe all grease from the bearing well in the fan end-plate, from the fan end of the shaft, and from the ID and OD of the new rotational lock bearing.
- (k) Reinstall the rotor and shaft in the motor housing.
NOTE: When installed properly, the fan end of the shaft (the one with the bearing removed) will face you.
- (l) **CAUTION:** It is essential that the rotational lock bearing is placed on the shaft in a way which allows the **Inner Bearing Sleeve** to rotate clockwise. Except for the D60A/D90A's with Marathon motors, the side of the bearing that has the bearing's name and number stamped in it should face toward the center of the motor. Occasionally, the name and number are stamped on the wrong side of this bearing. To double check, hold the OD of the rotational lock bearing so that the side with the stamped name and number faces the rotor. While holding the OD tight, rotate the ID. If the ID rotates only in the clockwise direction, the rotational lock bearing is positioned correctly.

Step F-1 (b) (2) (Cont'd.)

- (m) **CAUTION:** FAILURE TO EVENLY DRIVE THE ROTATIONAL LOCK BEARING DOWN THE SHAFT COULD RESULT IN GALLING OF THE BEARING ID.

REQUIRED ACTION: Apply Loctite 609 to the area of the shaft where the bearing will fit and to the ID of the new rotational lock bearing. Using a hammer and a pipe that has an ID greater than the shaft OD, gently tap the rotational lock bearing down over the shaft until it bottoms out. Wipe off any excess Loctite.

- (n) **CAUTION:** It takes about 5 minutes for loctite 609 to begin setting. For D30A pump models, Steps (o) and (p) should be completed before the Loctite has time to set, in case the end plate must be removed.

Apply Loctite 609 to the OD of the new rotational lock bearing and to the ID of the mating bearing well in the end plate.

- (o) Repeat Steps (f), (c), and (b), except assemble rather than disassemble.
- (p) **For D30A pump models only,** spin the fan to check if the motor rotates freely. If there is a lot of friction, immediately remove the fan and the fan end-plate before the Loctite has time to set; then remove and discard one of the spacer rings and reassemble the motor.
- (q) Using the four screws, attach the fan cover to the motor.
- (r) Spin the shaft to check if the fan contacts the fan cover or fan end-plate. If it does, remove the fan cover and adjust the position of the fan on the shaft; then reassemble.
- (s) **NOTE:** Allow the motor to sit for at least 1½ hours prior to testing. This will allow the locktite time to cure and firmly bind the surfaces.

REQUIRED ACTIONS: Use the instructions at the beginning of Step b(2) to determine if the rotational lock bearing is installed correctly and to correct the problem if the lock bearing is installed backwards or is malfunctioning.

If the lock bearing is installed correctly, repeat Steps b(1) (a) through b(1) (d) to check the wiring of the motor.

- F-2 **NOTE:** When reassembling the valve plate (50) to the second stage pump cylinder (46), ensure that the bent tabs that cover the exhaust holes are facing down. If the tabs are not bent, it does not matter which side is facing down.

Repeat Steps D-15 through D-11, D-9, and D-7 through D-2, except assemble rather than disassemble.

- F-3 **CAUTION:** NICKS OR TEARS IN THE RADIAL SHAFT SEAL COULD RESULT IN A LUBRICATING FLUID LEAK AND POOR PUMP PERFORMANCE.

CAUTION: FAILURE TO RECESS THE RADIAL SHAFT SEAL (45) IN ITS SLOT IN THE REAR END PLATE (60) WILL RESULT IN THE VANES (53) RUBBING AGAINST THE SEAL (45) DURING PUMP OPERATION.

NOTE: The side of the seal that has a small circular spring around the ID faces the bronze bushing in the rear end plate (60).

REQUIRED ACTION: Use one of the following methods to install a new radial shaft seal (45) in the rear end plate (60) (see Figure 5-12).

Method (1) — Insert the new seal into its slot in the rear end plate. Using a hammer and a seal driver (see Figure 5-22), recess the seal in the slot.

or

Method (2) — Insert the new seal into its slot in the rear end plate. Place the used seal over the new seal. Use a hammer to tap the used seal until it indents the new seal in its slot in the rear end plate. Remove and discard the used seal.

F-4 Assemble the gas ballast valve (20) as follows:

- a. For **D8A, D16A, D30A, D60A, and D90A pump models only**, reassemble the insides of the cap end of the gas ballast valve (17) as follows (see Figure 5-10A).
 - (1) Fit the O-ring (20) around the inner rim of the valve plate (19). The O-ring goes onto the side of the valve plate that has the metal valve.
 - (2) Insert the valve plate (19)/O-ring (20) assembly into the top of the gas ballast valve (17). The side of the valve plate that has the metal valve faces down.
 - (3) Push the retaining washer (21) into the top of the gas ballast valve until it is tight against the valve plate (19).
- b. For **D30A, D60A, and D90A pump models only**, insert the parts into the inside of the tube end of the gas ballast valve in the following order (see Figure 5-10B).
 - First — Valve plate (32) that has three slots.
 - Second — Spring (31).
 - Third — Valve plate (32) washer.
 - Fourth — Retainer ring (30). Fit the retainer ring into the groove in the inside of the gas ballast valve tube.
- c. Repeat Steps D-1e through D-1a, except assemble rather than disassemble.

F-5 Assemble the high vacuum stage rotor (54) and the center bearing (52) to the shaft as follows (see Figures 5-9 and 5-18).


- a. **NOTE:** The second stage rotor (48) is permanently attached to the shaft on the D2A, D4A, D8A, and D16A pump models.

NOTE: If the center bearing plate (52) does not have the small hole, it can face either direction.

Coat the bronze bushing with the proper pump fluid and slide the center bearing (52) onto the shaft so that the side of the center bearing (52) with the small hole faces away from the second stage rotor (48) (see Figure 5-9).

- b. Insert the rotor key (57) into its slot in the shaft. Tap the key (57) down into its slot.
- c. **NOTE:** The end of the high vacuum stage rotor (54) with the two pulling holes is the outside end.

Align the slot in the ID of the high vacuum stage rotor (54) with the rotor key (57) in the shaft. Slide the rotor (54) onto the shaft. The rotor (54) must slide freely on the shaft.

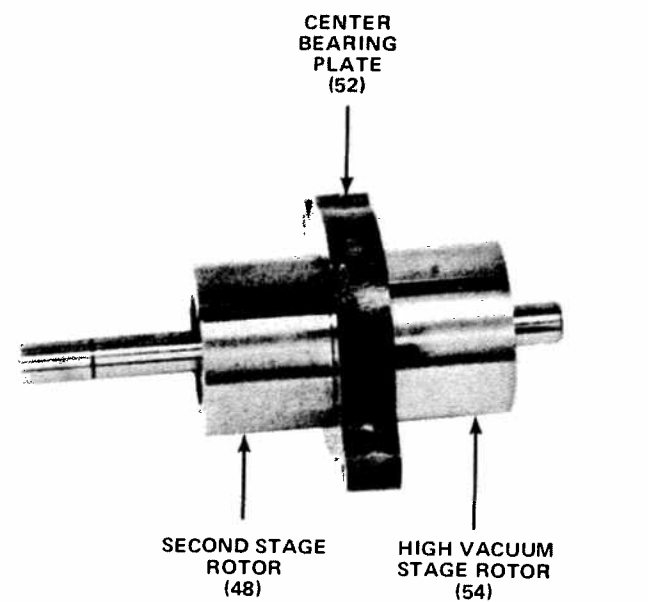

1TA-7.13

Figure 5-18. Rotors/Shaft/Center Bearing Plate Assembly (D2A Pump Model Shown)

F-6 CAUTION: FAILURE TO ENSURE THAT THE O-RINGS (47) REMAIN IN THEIR GROOVES DURING MODULE ASSEMBLY WILL RESULT IN DAMAGE TO THE O-RINGS AND POOR PUMP PERFORMANCE.

NOTE: The module assembly sequence (Steps F-6a through F-6j) is designed to keep the loose O-ring facing up, so that it does not fall out of its O-ring groove.

CAUTION: WHEN ASSEMBLING THE MODULE, DO NOT SCRATCH THE ENDS OF THE ROTORS OR THE INSIDE SURFACES OF THE PUMP CYLINDERS OR END PLATES. SCRATCHES TO THESE SURFACES COULD RESULT IN POOR PUMP PERFORMANCE.

NOTE: To ensure that each part is oriented correctly, refer to Figure 5-3 and follow each step precisely (Steps F-6a through F-6j).

REQUIRED ACTION: Assemble the module as follows:

- a. Place the high vacuum (HV) stage cylinder (55) so that it is lying flat with the intake tube portion (the top) on the right facing away from you (see Figure 5-19). Fit an O-ring (47) into the O-ring groove on the cylinder (55) surface that is facing up.
- b. Attach the assembly that you put together in Step F-5 to the HV stage pump cylinder (55) as follows:

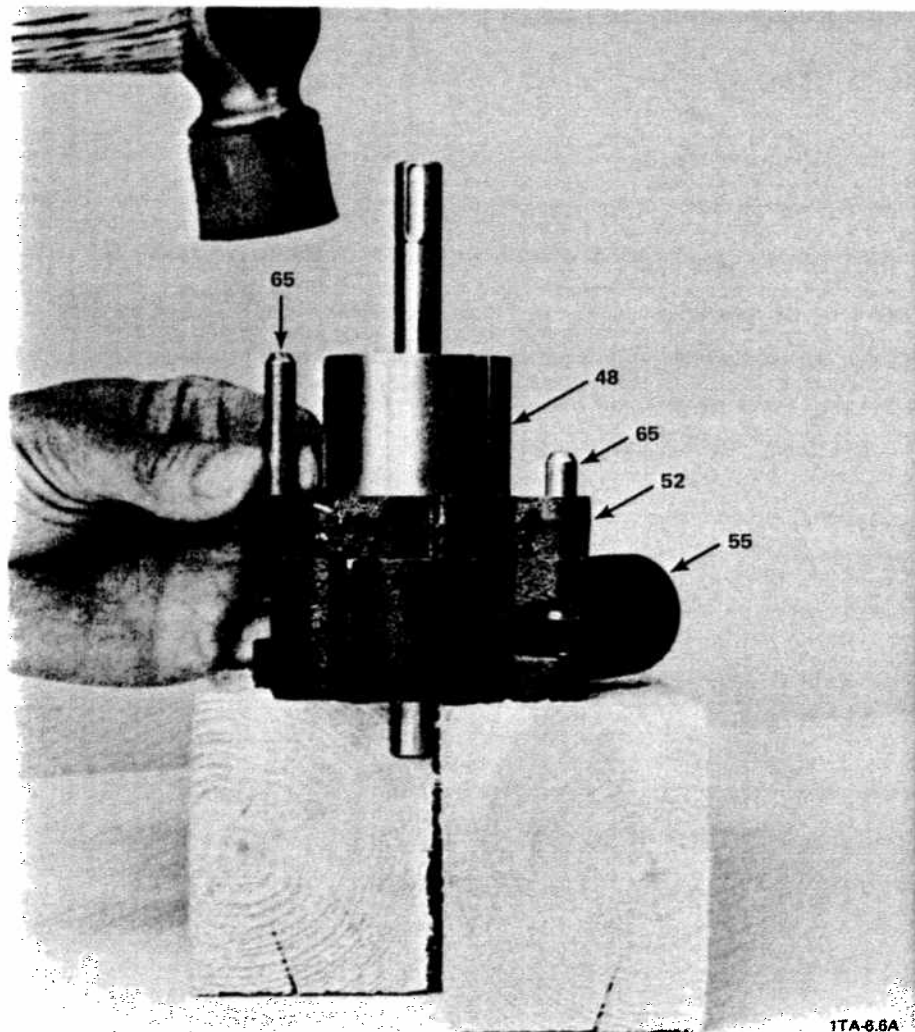


Figure 5-19. Driving the Long Cylindrical Pins that Align the HV Cylinder and the Center Bearing (D2A Pump Model Shown)

Step F-6 b (Cont'd.) (1) Take the Step F-5 assembly and insert its HV-stage end (the end that has two pulling holes on the outside end of the rotor) down into the HV stage cylinder (55) until the center bearing plate (52) rests against the HV stage cylinder (55) (see Figure 5-19).

(2) Align the two alignment holes in the center bearing plate (52) with the two upper alignment holes on the HV stage cylinder (55). (See Figure 5-19).

(3) **NOTE:** When driving the two long cylindrical pins (65) into the alignment holes, the flat end (nonbeveled end) of the pins (65) should face the HV cylinder (55). The HV cylinder is the one with the intake tube portion.

REQUIRED ACTION: Using a rubber hammer, hit the beveled end of the pins to drive the two long cylindrical pins (65) down through the two alignment holes in the center bearing plate (52), then through the two upper alignment holes in the HV cylinder (55) until the flat end of each pin extends just out of each upper HV-cylinder alignment hole (see Figure 5-19).

(4) Ensure that the center bearing plate (52) and the HV stage cylinder (55) are tight against each other and that they remain tight throughout the module assembly sequence.

c. Place the second stage pump cylinder (46) so that it is lying flat with the top edge (the flat portion that has the screw holes, exhaust holes, and gas ballast hole) on the right facing away from you. Fit an O-ring (47) into the O-ring groove on the cylinder (46) surface that is facing up.

For D30A, D60A, and D90A pump models, the second stage cylinder (46) should be lying flat on an open vice or other open support, so that the shaft can be inserted through it in Step d(3).

d. Attach the assembly that you put together in Step b(3) to the second stage pump cylinder as follows (see Figure 5-20):

(1) Take the assembly from Step b(3) and insert its second-stage end (the end that has the longer section of the shaft) down into the second stage pump cylinder (46).

(2) **NOTE:** When aligned correctly, the flat portions of the top of the two pump cylinders (46/55) are in line with each other.

REQUIRED ACTION: Align the beveled end of the two long cylindrical pins (65) (the pins which extend out of the alignment holes in the center bearing plate (52)) with the two upper alignment holes in the second stage cylinder (46).

(3) **NOTE:** When Step d(3) is completed, the beveled ends of the two long cylindrical pins (65) should extend most of the way through the upper alignment holes in the second stage pump cylinder (46).

REQUIRED ACTION: For the D2A, D4A, D8A, and D16A pump models, while keeping the assembly vertical, pull the second stage cylinder (46) straight up over the long cylindrical pins (65) until it is tight against the center bearing plate (52) (see Figure 5-20).

For the D30A, D60A, and D90A pump models only, while keeping the assembly vertical, push the Step b(3) assembly straight down until it is tight against the second stage cylinder (46).

(4) Ensure that the cylinders (46/55) and center bearing plate (52) remain tight against each other throughout the module assembly sequence.

e. **NOTE:** If you are reusing the old vanes (53), make sure that each used vane is replaced in its same rotor slot. Also make sure that the orientation of each vane is the same as it was before disassembly so that each used vane is not turned end-for-end in its slot.

NOTE: Be sure that the slotted edge of the vanes (53) faces the center of the rotor (54) when inserting the vanes into the rotor.

NOTE: For the D4A, D16A, D60A, and D90A pump models only, the high vacuum stage rotor (54) and vanes (53) are longer than the second stage rotor (48) and vanes (49). For these pump models, be sure to insert the longer vanes (53) into the high vacuum stage rotor (54).

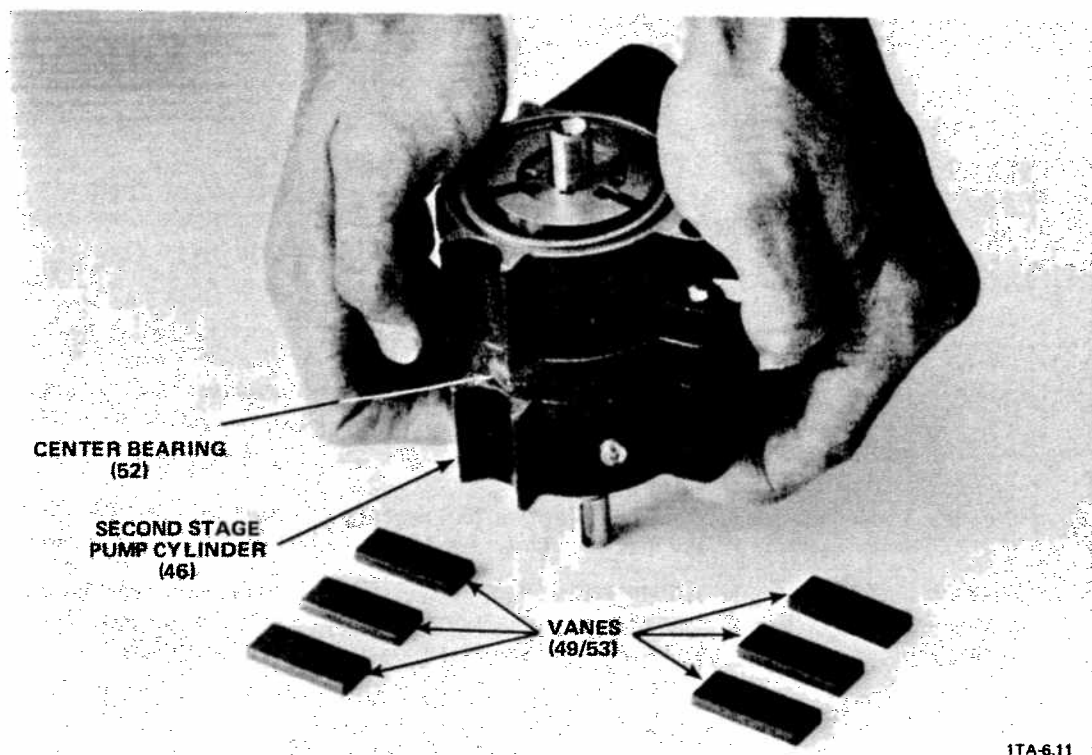


Figure 5-20. Pulling the Second Stage Pump Cylinder Tight Against the Center Bearing (D2A Pump Model Shown)

Step F-6 e (Cont'd.)

REQUIRED ACTION: Repeat Step C-11, except assemble rather than disassemble, to insert the three vanes (53) into the slots in the high vacuum stage rotor (54).

f. While keeping the partially assembled module vertical, fit an O-ring (47) into the O-ring groove on the HV-cylinder (55) surface that is facing up (see Figure 5-20).

g. Attach the rear end plate (60) to the partially assembled module as follows:

- (1) **NOTE:** Be sure to attach the rear end plate (60) to the HV-stage end of the module. The HV pump cylinder (55) is the one with the intake tube portion.

NOTE: The side of the rear end plate (60) that has the bronze bushing faces out.

REQUIRED ACTION: While keeping the partially assembled module vertical, align the rear-end-plate bushing hole with the shaft. Slide the rear end plate (60) down over the shaft until the machined surface of the rear end plate fits tight against the HV stage cylinder (55).

- (2) Align the two alignment holes in the rear end plate (60) with the two alignment holes in the HV cylinder (55), then use a rubber hammer to drive two short cylindrical pins (64) until the pin ends are slightly recessed in their alignment holes in the rear end plate (60) (see Figure 5-21).

h. Turn the partially assembled module over so that the other end faces up, then fit an O-ring (47) into the O-ring groove in the second stage pump cylinder (46).

i. **CAUTION:** DO NOT CHIP, SCRATCH, OR BREAK THE EDGES OF THE VANES.

NOTE: If you are reusing the old vanes (49), make sure that each used vane is replaced in its same rotor slot. Also make sure that the orientation of each vane is the same as it was before disassembly so that each used vane is not turned end-for-end in its slot.

NOTE: Be sure that the slotted edge of the vanes (49) faces the center of the rotor (48) when inserting the vanes into the rotor.

Step F-6 i (Cont'd.)

REQUIRED ACTION: Use long nose pliers to insert the three vanes (49) into the slots in the second stage rotor (48) (see Figure 5-8).

j. Attach the front end plate (44) to the partially assembled module as follows:

- (1) **NOTE:** The side of the front end plate (44) that has the threaded studs (62) extending out of it faces the second stage cylinder (46) (see Figure 5-21). The edge of the front end plate that has a small hole is the bottom edge.


REQUIRED ACTION: While keeping the partially assembled module vertical, align the front-end-plate bushing hole with the shaft and align the threaded studs (62) with their mating holes in the rear end plate (60). Slide the front end plate (44) down over the shaft until the plate (44) fits **tight** against the second stage cylinder (46). Install the washers and nuts hand-tight onto the threaded studs.

- (2) **NOTE:** If the two remaining cylindrical pins (64) have a beveled end, the beveled end should face away from the center of the module.

REQUIRED ACTION: Align the two alignment holes in the front end plate (44) with the two alignment holes in the second stage cylinder (46). Using a rubber hammer, drive the remaining two cylindrical pins (64) into the alignment holes until the pins (64) extend about 3/16 inch out of the outside surface of the front end plate (44) (see Figure 5-22).

k. **CAUTION:** NICKS OR TEARS IN THE RADIAL SHAFT SEAL COULD RESULT IN A LUBRICATING FLUID LEAK AND POOR PUMP PERFORMANCE.

NOTE: The side of the seal that has a small circular spring around the ID faces the bronze bushing in the front end plate.

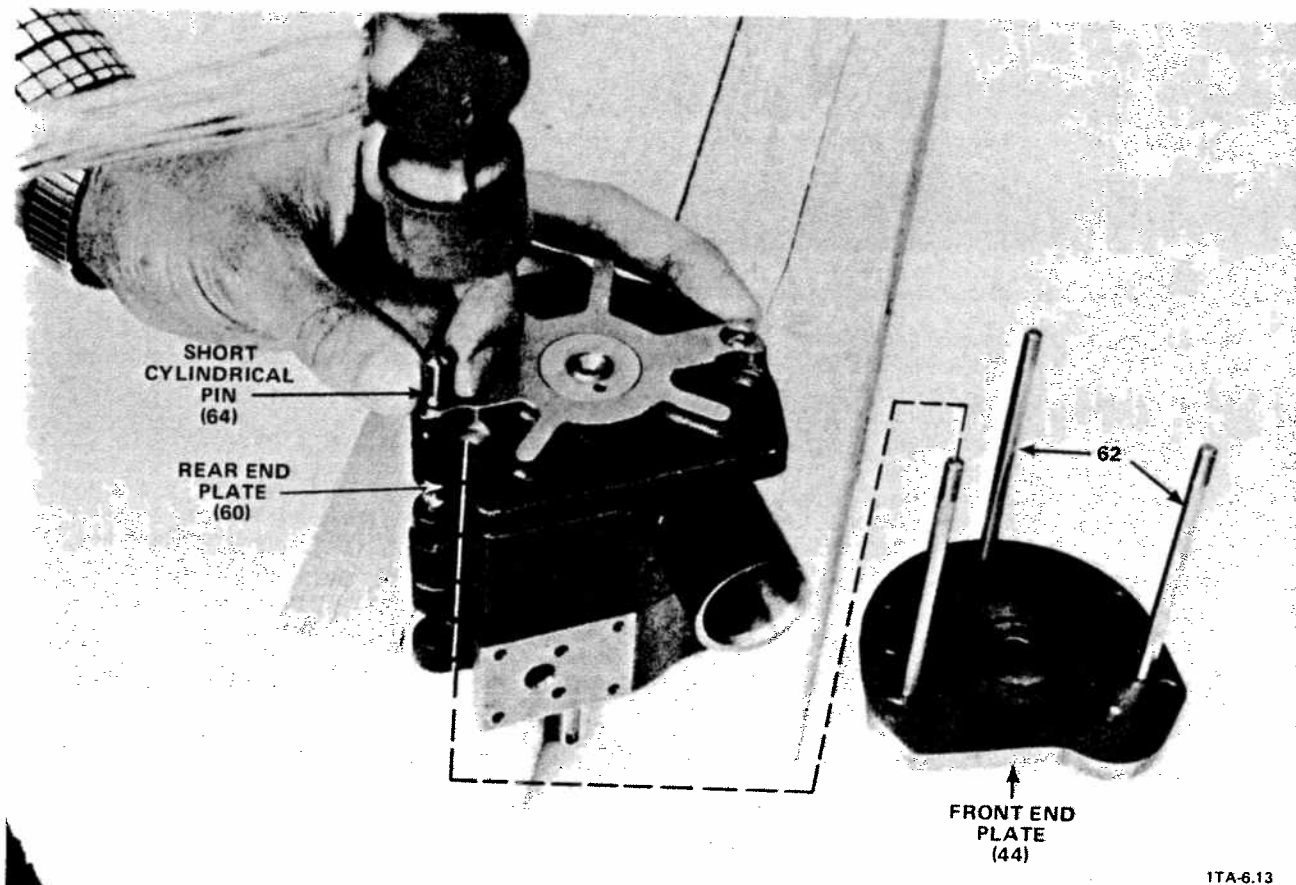

1TA-6.13

Figure 5-21. Driving the Short Cylindrical Pins that Align the Rear End Plate and the HV Cylinder (D2A Pump Model Shown)

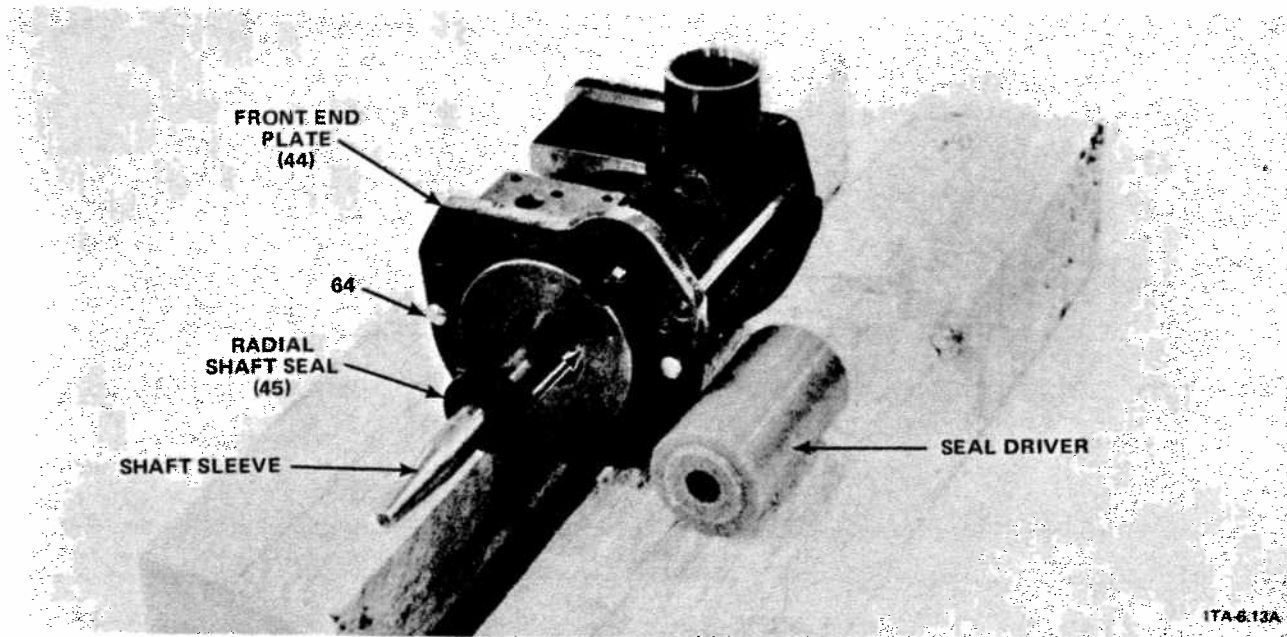


Figure 5-22. Using a Shaft Sleeve to Install the Radial Shaft Seal into the Front End Plate (D2A Pump Model Shown)

Step F-6 k (Cont'd.)

REQUIRED ACTION: Install the radial shaft seal (45) into the front end plate (44) as follows:

- (1) Insert the seal using one of the following methods.

Method (a) — Insert a shaft sleeve over the shaft (see Figure 5-22); slide the seal (45) over the shaft sleeve and insert the seal into its slot in the front end plate; remove the shaft sleeve from the shaft.

or

Method (b) — Place cellophane tape over the shaft to prevent the seal from being cut or nicked; carefully slide the seal (45) over the shaft and insert the seal into its slot in the front end plate; remove the tape from the shaft.

- (2) Recess the seal (45) using one of the following methods.

Method (a) — Slide a seal driver over the shaft; using a hammer, strike the seal driver to indent the seal into its slot in the front end plate; remove the seal driver from the shaft (see Figure 5-22).

or

Method (b) — Slide the used seal over the shaft until it is against the new seal; using a hammer, tap evenly around the used seal to indent the new seal into its slot in the front end plate; remove and discard the used seal.

F-7 NOTE: The end of the air inlet tube with the beveled tip and circumferential slots is the outside end (see Figure 5-4).

Install the air inlet tube (69) into the module as follows (see Figure 5-4):


- a. Push the air inlet tube through the hole in the top of the front end plate (44). When installed properly, two of the three circumferential slots in the end of the air inlet tube should extend out of the outside surface of the front end plate (44).
- b. Insert the retainer disk (71) into the second slot from the beveled tip of the air inlet tube (69).

NOTE: The other end of the air inlet tube (69) fits into the hole in the base of the intake portion of the high vacuum pump cylinder (55) (see Figure 5-4).

F-8 CAUTION: USE CARE WHEN HANDLING THE MODULE TO AVOID BENDING THE LEVER (41) OR CENTRIFUGAL SWITCH (39). (This CAUTION also applies to Steps F-9 through F-12.)

Repeat Steps C-9, C-6, C-5, C-4, and C-3, except assemble rather than disassemble.

- F-9** Install the coupling (37) onto the module shaft as follows (see Figures 5-3 and 5-4).
- Align the slot in the coupling with the key (38) on the shaft.
 - Slide the coupling onto the shaft until it rests against the retainer ring (40).
 - Screw the coupling setscrew clockwise until it is tight.
- F-10** Grab the coupling (37) and turn the module shaft (see Figure 5-3). If the end plates (44/60), pump cylinders (46/55), and center bearing (52) are aligned properly, the shaft will turn smoothly. If there is any binding, adjust the alignment as follows:
- Loosen the hexagon nuts (63) on the threaded studs (62) (see Figure 5-6).
NOTE: The D16A and D8A pump models have four rather than three nuts and studs.
 - CAUTION: BEFORE STRIKING THE REAR END PLATE (60), ENSURE THAT THE DISK (61) (see Figure 5-2) IS NOT ASSEMBLED TO THE MODULE.**
Strike the face of the rear end plate (60) a couple of times while cross-tightening the hexagonal nuts (63) (see Figure 5-6). Tighten these nuts until all are snug.
 - Grab the coupling (37) and turn the module shaft to see if the shaft turns smoothly (see Figure 5-3). Many times the act of turning the shaft will bring the module into alignment.
 - Continue repeating Steps F-10a through F-10c until the shaft turns smoothly and there is **no** binding. It is sometimes necessary to loosen or tighten each hexagon nut several times to eliminate all binding. Many times, it is necessary to tighten two of the nuts (63) and loosen the other nut(s) a bit. However, all nuts should be tightened to roughly the same torque.
 - Test the breakaway torque of the shaft. It must be less than 15 in./lbs.
 - If you cannot eliminate the binding, there must be an obstruction inside of the module. In this case, disassemble and inspect the module, eliminate the obstruction, and then reassemble the module ensuring that all parts are installed properly.
- F-11** **NOTE:** When the pump is not running, the air inlet tube (69) should be open. When the pump is running, the centrifugal switch (39) should pull away from the lever (41) causing the lever seal (43) to close the air inlet tube (69) (see Figures 5-3 and 5-4).
- Ensure that the anti-suck back mechanism is operating correctly as follows:
- Check to see if there is a gap between the lever seal (43) and the end of the air inlet tube (69). If there is not a gap while the pump is at rest, it means that the lever (41) is bent, the spring (42) is out of position, or the centrifugal switch (39) is malfunctioning. Remedy the problem before proceeding (see Figures 5-3 and 5-4).
 - Check if the anti-suck back mechanism will close the air inlet tube (69) as follows:
 - Push the split halves of the centrifugal switch (39) until they are tight against the coupling (37). (See Figure 5-3.)
 - While keeping the split halves of the switch (39) against the coupling (37), check if the lever seal (43) is sealing the opening in the air inlet tube (69) (see Figure 5-4).
 - If the lever seal (43) is not properly sealing the tube (69), see Symptom 3h of the troubleshooting chart (Table 6-1) for recommended corrective action.
 - Make sure that the air inlet tube (69) is pushed back into the module until it is seated firmly. When the air inlet tube (69) is installed properly, the retainer disk (71) fits against the front end plate (44) (see Figure 5-4).
- F-12** It is easiest to guide the module into alignment with the coupling housing (11) when the coupling housing/motor assembly is in the vertical position (see Figure 5-23). Proceed as follows:
- Set the coupling housing/motor assembly back onto its motor end and secure the assembly in this vertical position.
 - Place the main housing seal (13) onto the coupling housing flange (see Figure 5-2).
 - Keeping the module vertical, guide the module end that has the coupling (37) down into the coupling housing (11). The prongs on the module coupling (37) fit into the mating slots in the elastic element (36); the elastic element is located on the motor shaft in the coupling housing (11). Look through the opening in the bottom of the coupling housing (11) to align the mating prongs and slots properly (see Figure 5-23).
 - Use the screws and washers to attach the module to the coupling housing (11) (see Figure 5-2).
 - Return the assembly to the horizontal position.

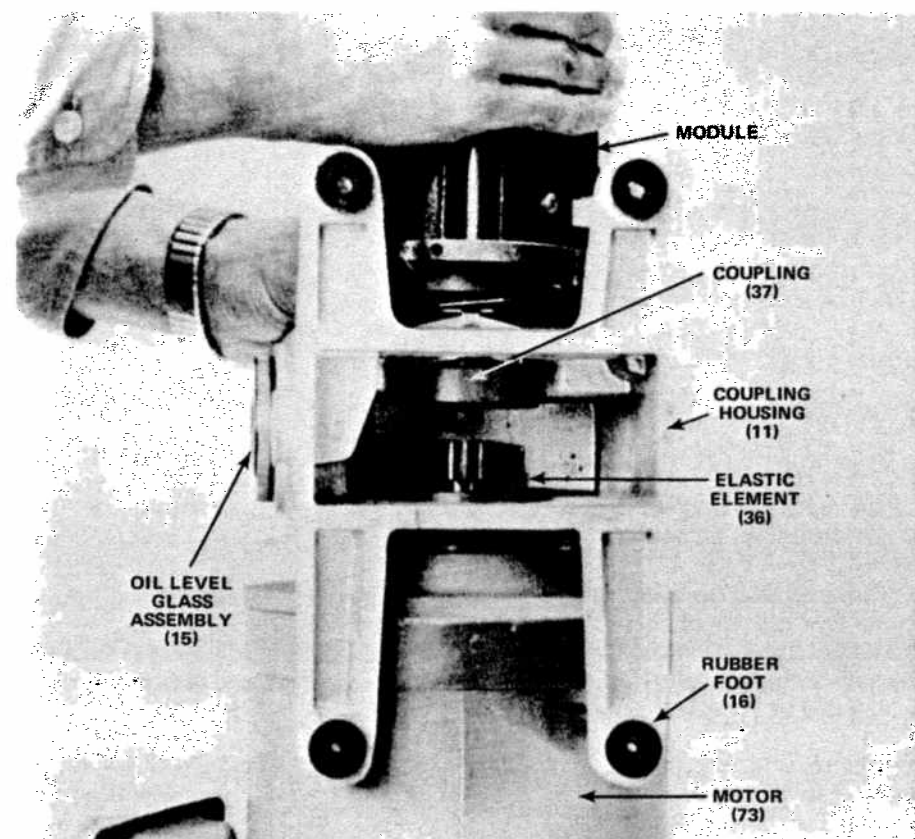

1TA-3.31

NOTE: This view is looking toward the opening in the bottom of the coupling housing (11). The coupling housing/motor assembly is resting on its motor end. The assembly is vertical.

NOTE: See Figure 5-15 for a photograph of the D30A/D60A/D90A coupling (37) and coupling ring (36).

Figure 5-23. Reassembling the Module to the Coupling Housing (D4A Pump Model Shown).

F-13 CAUTION: DO NOT SCRATCH, NICK, OR TEAR THE VALVE DISK (67) WHEN INSERTING IT INTO THE PUMP CYLINDER.

Using a large pair of long nose pliers, insert the valve disk (67) and attached brass piston (68) into the intake portion of the high vacuum pump cylinder (55) (see Figures 5-3 and -11).

F-14 Repeat Steps B-8, B-7, B-6, B-5, B-4, and B-2, except assemble rather than disassemble.

CAUTION: OVERTIGHTENING THE OIL CASING ONTO THE COUPLING HOUSING COULD DAMAGE THE FLAT GASKET (13) AND CAUSE AN OIL LEAK.

Use the following torque when tightening the oil casing onto the coupling housing:

Pump Model	Torque
D2A & D4A	4 Nm (3.0 ft-lb)
D8A & D16A	7 Nm (5.2 ft-lb)
D30A, D60A, & D90A	15 Nm (11.1 ft-lb)

F-15 Fill the pump with the proper pump fluid (see Section 5-A-1) as follows (see Figure 1-1).

- Using an 8-mm allen wrench, screw a plug screw (8) with flat gasket (9) into each oil drain port.
- Pour the required amount of pump fluid into the exhaust port (6) or into one of the oil fill ports. The required amount of pump fluid for each pump model is listed in Table 4-1.
- Using an 8-mm allen wrench, screw a plug screw (8) with flat gasket (9) into each oil fill port.

F-16 NOTE: The O-ring on the centering rings must be clean to avoid leaks.

Use the KF clamp rings to connect the intake tube (1) and exhaust port (6) of the pump to your system.

F-17 Change the pump fluid after a 100-hour break-in period of pump operation (see Section 4-3-2).

SECTION 6

TROUBLESHOOTING

WARNING: BEFORE REPAIRING THE PUMP, BE SURE TO READ ALL WARNINGS AND CAUTIONS IN SECTION 5-A AND AT THE BEGINNING OF SECTION 5-B.

The design of the MAXIMA rotary vane pumps allows for easy repair. Most corrective maintenance problems can be resolved quickly by using Table 6-1.

For repairs beyond the scope of this manual, contact your nearest Fisher Branch for service.

Table 6-1 contains the instructions for troubleshooting your pump if a malfunction occurs. To use the table, first observe the symptom, then locate the trouble area and perform the recommended corrective action. If disassembly of a component is necessary to perform the corrective action, refer to the steps listed in the "Repair Steps" column of Table 6-1. If the Table recommends cleaning, use the general cleaning instructions in Section 5-E, in addition to any specific "Repair Steps" recommended.

CONTENTS

Symptom	Page
1. The lubricating fluid is milky white or dark and the pump fails to reach its ultimate pressure and runs hot (Condensation in Lubricating Fluid)	44
2. The lubricating fluid has an unusual color, is very dark, dirty, turbid, or contains flakes (Contamination of the Lubricating Fluid)	44
3. The pump will not achieve its ultimate pressure	45, 46, 47
4. The evacuated vessel or system is vented to atmosphere pressure after pump shutdown	47, 48
5. The pump is excessively noisy	48
6. Excessive smoke or oil mist in exhaust stream	49
7. Lubricating fluid is ejected out of the intake tube	49
8. Excessive lubricating fluid is consumed	49, 50
9. Lubricating fluid is leaking from the top of the oil casing	50
10. Exhaust gas is leaking from the top of the oil casing	50
11. The pump will not start	50, 51
12. The pump will not achieve its rated pumping speed	52
13. Lubricating fluid or oil is found in the vacuum line or in the vessel or system being evacuated	53
14. The pump is running hot (greater than 95°C or 200°F)	53

TABLE 6-1. TROUBLESHOOTING CHART

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
1. The lubricating fluid is milky white or dark and the pump fails to reach its ultimate pressure and runs hot.	Condensation in lubricating fluid.	Gas ballast valve (17) is closed.	Run pump with intake tube (1) closed off and gas ballast valve (17) open until vapors are expelled.	Sec. 4-2
		Gas ballast valve (17) is clogged.	+Clean gas ballast valve (17).	B-5, D-1, & F-4
			Install new spring (25), flat gasket (24), and nonreturn valve (23), or valve (19) or valve plate (32) as necessary.	B-5, D-1, & F-4
		Pump temperature is low.	Run pump with gas ballast valve (17) open until pump is warm.	Sec. 4-1-2
2. The lubricating fluid has an unusual color, is very dark, dirty, turbid, or contains flakes.	Contamination of the pump fluid.	Vapor in gas being pumped exceeds pump tolerance.	Insulate oil casing (12).	
			Add condensate trap to intake tube (1) and/or exhaust port (6).	B-1 & Sec. 3-3
		Process is dirty.	Change lubricating fluid.	Sec. 4-3-2
			Add OF-3000 or OF-1000 to purify fluid and prevent reoccurrence of problem.	
	Pump fluid has broken down.	Wrong pump fluid is being used.	Add AS dust separator, IF or FS inlet filter, adsorption trap, AK condensate trap, or MF molecular filter to intake tube (1) to prevent reoccurrence of problem.	B-1 & Sec. 3-3
			For D2A, D4A, D8A & D16A pump models only, replace oil filter (35).	B-5 & B-6
			+Clean pump and charge it with the recommended pump fluid.	Sec. 4-3-2
			Pump ran low on pump fluid.	+Clean pump and charge it with the recommended pump fluid.
	Large vacuum leak.	Repair leak, +clean pump and change pump fluid.	Sec. 4-3-2	
	Pump is running continuously above 112 Torr.	+Clean pump, change pump fluid, and run pump at lower pressure.	Sec. 4-3-2	

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

+Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
3. The pump will not achieve its ultimate pressure.	a. Gas ballast valve (17)	Valve (17) is open.	Close valve (17) unless condensation is a problem.	Sec. 2-3-1
		Cap (18) is worn.	Install new cap (18).	D-1a
		The O-ring (27) on the end of the gas ballast tube (27) is worn.	Install new O-ring (27).	B-5, D-1c, and E-9
	b. Vacuum line connection	Vacuum line is connected to exhaust port (6).	Connect vacuum line to intake tube (1).	Sec. 3-3, Steps 3 & 4
	c. Exhaust connection line	Line diameter is smaller than exhaust port (6) diameter.	Install larger diameter connection line.	Sec. 3-3, Step 4
	d. Vacuum line or evacuated vessel	Vacuum line or vessel contains leak.	Repair leak or +clean O-ring if dirty.	
	e. Dirt trap (2) on intake tube (1)	Trap (2) is obstructed with dirt.	+Clean dirt trap (2).	B-1 and B-2
	f. Lubricating fluid	Fluid is contaminated resulting in poor sealing qualities and excessive wear on seals.	See Symptoms 1 and 2.	
	g. Module contains insufficient lubricating fluid.	Wrong lubricating fluid is being used.	Flush out pump and add correct lubricating fluid.	Sec. 4-3-2
		Pump fluid level is too low.	Add lubricating fluid to pump.	Sec. 4-3-1
		Oil nozzle (56) is clogged.	+Clean oil nozzle (56) and change lubricating fluid.	B-1 thru B-7, E-3c & Sec. 4-3-2
	h. Anti-suck back assembly. Also See Symptom 5g.	Pump is running continuously at 187 or more Torr.	Slowly pour some lubricating fluid into intake tube (1) and run pump at lower pressure.	B-1 and Sec. 4-2 CAUTION
		The coupling (37) is too tight against the retainer ring (40) or the centrifugal switch (39).	Loosen the coupling setscrew, pull the coupling (37) away from the centrifugal switch (39) or retainer ring (40) until the switch (39) has enough space to function properly, and then tighten the coupling setscrew.	B-1 thru B-9, F-11 & F-12

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

+Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
3. The pump will not achieve its ultimate pressure (cont'd.).	h. Anti-suck back assembly (cont'd.)	Centrifugal switch (39) is malfunctioning.	Install new centrifugal switch (39).	B-1 thru C-5, F-9, F-11 & F-12
		Centrifugal switch (39)/lever (41)/spring (42) assembly is excessively dirty.	+Clean assembly (39)/41/42).	B-1 thru C-6, F-9, F-11, & F-12
		Lever seal (43) is worn.	Reverse seal (43) or install new seal.	B-1 thru B-7, & D-7
		Level (41) is bent.	Straighten lever (41) or install new lever.	B-1 thru C-6, F-9, F-11, & F-12
		The spring (42) is not sitting properly in its hole in the front end plate (44).	Reinstall the spring (42) in its hole.	B-1 thru C-6, F-9, F-11, & F-12
	i. Radial shaft seal (45) is worn.	The O-ring (70) on HV-pump-cylinder end of the air inlet tube (69) is worn.	Install new O-ring (70).	B-1 thru C-7, C-14, D-2, E-9, F-7, F-9, F-11, & F-12
		Worn seal (45) is allowing venting of module.	Install new seal (45). Inspect the shaft where it rides in the seal for wear. Install new shaft, if necessary.	See worn seal in Symptom 8b. If replacing shaft, do B-1 thru F-17.
		Dirt has accumulated in rotor slot.	+Clean rotor slots and change lubricating fluid.	B-1 thru F-17
	j. Vane (49/53) is stuck in rotor (48/54) slot.	Vanes are installed with chamfered edge out.	Clean vane slots and install vane with chamfered edge facing center of rotor.	B-1 thru F-17
		One or more of these parts contain gouging or wear.	Replace worn part with new part.	B-1 thru F-17
	k. Vanes (49/53) rotors (48/54), pump cylinders (46/55), shaft, inside surface of plates (52/60/44), or bronze bushing in plates (60/44/52)			

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

+Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
3. The pump will not achieve its ultimate pressure (cont'd.).	l. Motor (73)	Motor is rotating in wrong direction.	Interchange line ends.	F-1a
		Motor malfunction	Check rotational lock bearing.	D-13 & F-1b
	m. Module O-rings (47) are dirty or damaged.	Dirty or damaged O-rings (47) are allowing venting of module.	Contact motor manufacturer's service center.	D-13 & F-1
	n. Intake tube.		Install new O-rings (47).	B-1 thru F-17
		O-ring (5) is allowing venting of module.	Install new O-ring (5).	B-1, B-2, B-4, & D-4
	o. For D4A, D16A, D60A, and D90A pump models only—valve plate (58)	Sealing surface on bottom of tube is scratched.	Smooth scratches with jeweler's rouge.	B-1, B-2, & B-4
		Valve plate (58) is dirty or worn.	+ Clean or replace valve plate.	B-1 thru B-7 & D-11
		Vacuum line or evacuated vessel	Repair leak or + clean O-ring if dirty.	
	b. Anti-suck back valve assembly	*Valve disk (67) is worn or dirty.	Remove old disk (67) and install new one or clean old disk.	B-1 thru B-7, Fig. 5-13, & D-5
		Valve disk (67) and piston (68) are stuck in place in high vacuum pump cylinder (55).	+ Clean disk and piston or install new ones. + Clean intake tube portion of high vacuum pump cylinder (55).	B-1 thru B-7, C-1 & D-5

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.
+ Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
4. The evacuated vessel or system is vented to atmospheric pressure after pump shutdown (cont'd.).	b. Anti-suck back valve assembly (cont'd.).	Centrifugal switch (39)/ lever (41)/spring (42) assembly is excessively dirty.	+ Clean assembly (39/41/42).	B-1 thru C-6, F-9, F-11, & F-12
		Air inlet tube (69) is clogged.	+ Clean air inlet tube (69).	B-1 thru C-7, C-14, F-7, F-9, F-11 & F-12
		Centrifugal switch (39) is malfunctioning.	Install new centrifugal switch (39).	B-1 thru C-5, F-9, F-11, & F-12
		Lever (41) is bent.	Straighten or install new lever (41).	B-1 thru C-6, F-9, F-11, & F-12
5. The pump is excessively noisy.	a. Intake or exhaust connecting lines	Line contains restriction	Clear line.	B-1
	b. Slap noise heard (oil slap) when attaining ultimate pressure.	The silencing hole is the tiny hole in the side of the gas ballast valve (17) stem just below the bolting flange.	+ Use a fine wire to clear any dirt from the silencing hole. DO NOT ENLARGE THE HOLE.	B-5
	c. Coupling (37) and/or elastic element (36)	Coupling and/or element is worn.	Install new element and/or coupling.	See Symptom 11a.
	d. Disk (61)	Disk is bent.	Straighten disk or install new disk.	B-1 thru B-8
	e. Module	Module contains insufficient lubricating fluid.	See Symptom 3g.	See Symptom 3g.
	f. Module bushing	Lubricating holes in end plates are clogged.	Clear holes so pump fluid can lubricate the shaft bushing.	E-3
	g. Shipping wedge	The shipping wedge was not removed.	Remove shipping wedge. NOTE: Running the pump with the shipping wedge installed can result in damage to the anti-suckback mechanism.	Sec. 3-3, Step 2. Symptom 4b.

* This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

+ Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
6. Excessive smoke or oil mist in exhaust stream.	a. Fluid level in sight glass (15) is high.	Pump is filled with lubricating fluid beyond its capacity.	Drain excess lubricating fluid.	Sec. 4-3-1
	b. Negative pressure exhaust system (only if one is connected).	Negative pressure is too high.	Adjust negative pressure exhaust system.	Sec. 3-3, Step 5
	c. Oil filter (35)	Filter is clogged.	+ Clean filter or install new filter.	B-5 & B-6
	d. Pump pressure	Pump is running continuously at greater than 112 Torr.	Modify system to run at lower pressure or use larger pump model.	Sec. 4-2 CAUTION
	e. Gas ballast valve (17)	Valve (17) is open.	Close valve (17) or install SE smoke eliminator or AF exhaust filter with oil return line.	Sec. 2-3
7. Lubricating fluid is ejected out of the intake tube (1). (Also see Symptom 13.)	Motor (73)	Motor is rotating in wrong direction.	Interchange the line ends.	F-1a
			Check rotational lock bearing.	D-9 & F-1b
8. Excessive lubricating fluid is consumed. (Also see symptoms 6 and 9.)	a. Oil filter (35)	Filter is clogged.	+ Clean filter or install new filter.	B-5 & B-6
	b. Oil leak	Flat gasket (9) on plug screw (8) is worn.	Install new flat gasket (9).	B-3, D-6, & F-15
		Main seal (13) between oil casing (12) and coupling housing (11) is worn.	Replace seal (13).	B-1 thru B-10, F-12, F-14 thru F-16
		Front end plate radial shaft seal (45) is worn.	Install new seal and check if the exhaust line is too narrow or if an exhaust filter or screen is clogged.	B-1 thru C-6, D-10, F-6k, F-9, F-11, & F-12
		Rear end plate radial shaft seal (45) is worn.	Install new seal.	B-1 thru C-1, C-9, C-10, D-8, F-3, F-6g, F-10, & F-12
		Inert gas pressure in purge line of modified pumps is too high.	Reduce inert gas pressure to below 3 psig for an oil casing purge & below 2 psig for an inert gas connection to the gas ballast valve.	Sec. 3-3

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.
+ Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
8. Excessive lubricating fluid is consumed. (Also see symptoms 6 and 9) (cont'd.).	c. Gas ballast valve (17)	Valve (17) is open.	Close valve (17) or use AF exhaust filter with oil return line.	Sec. 2-3-1
	d. Lubricating fluid is ejected out of intake tube (1).	Motor is rotating in wrong direction.	Interchange the line ends.	F-1a
9. Lubricating fluid is leaking from the top of the oil casing (12).	Gas ballast valve (17)	Flat gasket (4) is worn.	Check rotational lock bearing.	F-1b
		Oil casing (12) is scratched below valve (17) flange.	Install new flat gasket (4).	B-5
10. Exhaust gas is leaking from the top of the oil casing (12).	a. Intake tube (1) or gas ballast valve (17)	Flat gasket (4) is worn.	Install new oil casing (12).	B-1 thru B-7
		Oil casing (12) is scratched below tube (1) or valve (17).	Install new flat gasket (4).	B-1, B-2, & B-4 or B-5
11. The pump will not start.	a. Coupling (37) and/or elastic element (36)	Coupling and/or element is worn or improperly installed.	Install new oil casing (12).	B-1 thru B-7
		Lubricating fluid is contaminated.	Properly install new coupling and/or elastic element.	++
	b. Shaft is seized in bushing.	Hole in rear-end plate (60) bronze bushing is clogged.	If needed, replace shaft, end plates (44/60), and/or center bearing (52). See Symptoms 1 and 2.	If needed B-1 thru F-17
		Hole running from bottom edge of front end plate (44) to bronze bushing is clogged.	+Clean hole. If necessary, replace shaft and/or end plate (60).	B-1 thru B-8; if needed B-9 thru F-17
			+Clean hole. If necessary, replace shaft and/or end plate (44).	B-1 thru B-8; if needed B-9 thru C-7, C-9, C-13, F-9, F-10, F-11, & F-12; or B-9 thru F-17

*This column contains the disassembly steps required to perform the corrective action. Some critical assembly steps are also listed. If the section is not specified, the steps are located in Section 5.

+Use the general cleaning instructions at the beginning of Section 5-E.

++D-13, D-14 and F-12, except set pump on its oil-casing (12) end and lower the motor into alignment. If the module coupling is worn, do B-1 thru C-2, F-9, & F-12.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
11. The pump will not start. (cont'd.)	c. Module is not vented.	Valve disk (67) and piston (68) are stuck in place in high vacuum pump cylinder (55).	+ Clean disk and piston or install new ones. + Clean intake tube portion of high vacuum pump cylinder (55).	B-1 thru B-7, C-1 & D-5
		For D30A, D60A, and D90A pump models only, small hole in high vacuum pump cylinder (55) just below piston (68) is clogged.	+ Clean this small hole.	B-1 thru B-7, C-1, E-3d; if needed C-2 thru C-7, C-14, F-7, F-9, F-11, & F-12
		Centrifugal switch (39)/lever (41)/spring (42) assembly is excessively dirty.	+ Clean assembly (39/41/42).	B-1 thru C-6, F-9, F-11, & F-12
		Air inlet tube (69) is clogged.	+ Clean air inlet tube (69).	B-1 thru C-7, C-14, F-7, F-9, F-11, & F-12
		Centrifugal switch (39) is malfunctioning.	Install new centrifugal switch (39).	B-1 thru C-5, F-9, F-11, & F-12
	d. Friction occurs between the rotors (48/54) or vanes (49/53), and the module housing (44/46/52/55/60).	Lever (41) is bent.	Straighten or install new lever (41).	B-1 thru C-6, F-9, F-11, & F-12
		Spring (42) is not sitting properly in its hole in the front end plate (44).	Reinstall the spring (42) in its hole.	B-1 thru C-6, F-9, F-11, & F-12
		Module is not aligned properly.	Align module.	B-1 thru B-10, F-10, & F-12
		Room is too cold. (The minimum ambient temperature for easy startup is 50° F.)	Start pump at atmospheric pressure before connecting it to your vacuum system.	
			Heat oil casing (12)	
	e. Pump fluid is too thick.		Drain pump fluid, heat it, and refill pump with warm fluid.	

* This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.
+ Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
12. The pump will not achieve its rated pumping speed. (See Section 1 of the Leybold-Heraeus Catalog for pumping speed curves.)	a. Lubricating fluid	Pump is cold.	Run pump for 1 hour while it warms to operating temperature.	Sec. 4-1-2
		Fluid is dirty.	See Symptoms 1 and 2.	
	b. Vacuum line valve	Vacuum line valve is partially closed.	Open vacuum line valve.	
	c. Dirt trap (2) on intake tube (1)	Trap (2) is obstructed with dirt.	+Clean dirt trap (2).	B-1 and B-2
	d. Exhaust or vacuum line	Exhaust or intake filter accessory is dirty.	Clean or install new filtering element.	B-1 & Sec. 3-3
	e. Exhaust or vacuum line connection	Exhaust or intake line diameter is too small.	Install larger diameter connection line.	B-1 & Sec. 3-3, Steps 3 & 4
	f. Coupling (37) and/or elastic element (36)	Coupling and/or element is worn or improperly installed.	Properly install new element and/or coupling.	See Symptom 11a.
	g. Exhaust holes in second stage pump cylinder (46) or opening in center bearing (52)	Holes or opening is blocked.	+Clean holes or opening.	B-1 thru B-7, & D-12. If needed, D-13 thru F-17
	h. Anti-suck back assembly	See Symptom 3h.	See Symptom 3h.	
	i. Friction between the rotors (48/54) or vanes (49/53) and the module housing (44/46/52/55/60)	Module is not aligned properly. Oil nozzle (56) is clogged.	Align module. +Clean nozzle (56).	B-1 thru B-10, F-10, & F-12 B-1 thru B-7 & E-3c
	j. Inside of module housing (44/46/52/55/60)	Dirt buildup is restraining rotation speed.	+Clean inside of module and change lubricating fluid.	B-1 thru F-17
	k. Motor	Malfunction	Contact motor manufacturer's service center.	D-13 & F-1

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

+Use the general cleaning instructions at the beginning of Section 5-E.

TABLE 6-1. TROUBLESHOOTING CHART (Continued)

Symptoms	Trouble Area	Probable Cause	Recommended Corrective Action	Repair Steps*
13. Lubricating fluid or oil is found in the vacuum line or in the vessel or system being evacuated (Also see Symptom 7).	a. Vapors are back-streaming into the vacuum line.	Lubricating fluid is contaminated.	See Symptoms 1 & 2.	
		Vapor pressure of lubricating fluid is insufficient.	Replace used fluid with HE-200 lubricating fluid.	Sec. 4-3-2
		Pump fluid suckback during shutdown.	Install an RST, FA or adsorption trap in the inlet line.	B-1 & Sec. 3-3
14. The pump is running hot (greater than 95°C or 200°F)			See Symptom 4b.	
			Install SECUVAC® valve or venting device.	
			See Symptoms 1, 2, 3a through 3i, 11b, 11d, 12e, 12i, 12j, and 12k.	

*This column contains the **disassembly** steps required to perform the corrective action. Some critical **assembly** steps are also listed. If the section is not specified, the steps are located in Section 5.

SECTION 7
PARTS LIST


Table 7-1 contains information for ordering modules, gasket sets, and repair kits. Table 7-2 is a complete list of spare parts.

Use Figures 7-1 and 7-2 to help identify the part that you need. The numbers called out in the figures correspond to the position number listed for each part in the first column of Table 7-2. For example, the first column on Page 58 lists "1" for the intake tube. One Figure 7-1, the number "1" is pointing to the photograph of the intake tube.

The second series of six columns indicates which pump model uses the part and how many each pump requires. For example, in Table 7-2 the number "1" under the "D2A" column for Position No. 1 indicates that one intake tube (Part No. 433 60 118) is required for the D2A pump model. Be sure to specify the model and Serial Number of your pump when ordering spare parts.

CONTENTS

Title	Page
Disassembled Pump (D2A Pump Model Shown) (Figure 7-1)	56
Module	57
Universal Gasket Set	57
Module Repair Kit	57
Anti-Suckback Modification Kit	57
Intake Tube Assembly	58
Exhaust Port Assembly	58, 59
Pump Housing Assembly	59, 60
Gas Ballast Valve Assembly (Includes Oil Filter)	60, 61
Coupling Assembly	61, 62
Module Centrifugal Switch and Retainer Ring	62
Lever Assembly	62
Second Stage Assembly (Includes Center Bearing and Exhaust Valve Plate and Stop)	62, 63, 64
High Vacuum Stage Assembly	64, 65, 66
Module Studs and Pins	66
Anti-Suck Back Assembly	67
Motors	68, 69, 70
Oil Sight Gauge Assembly	67

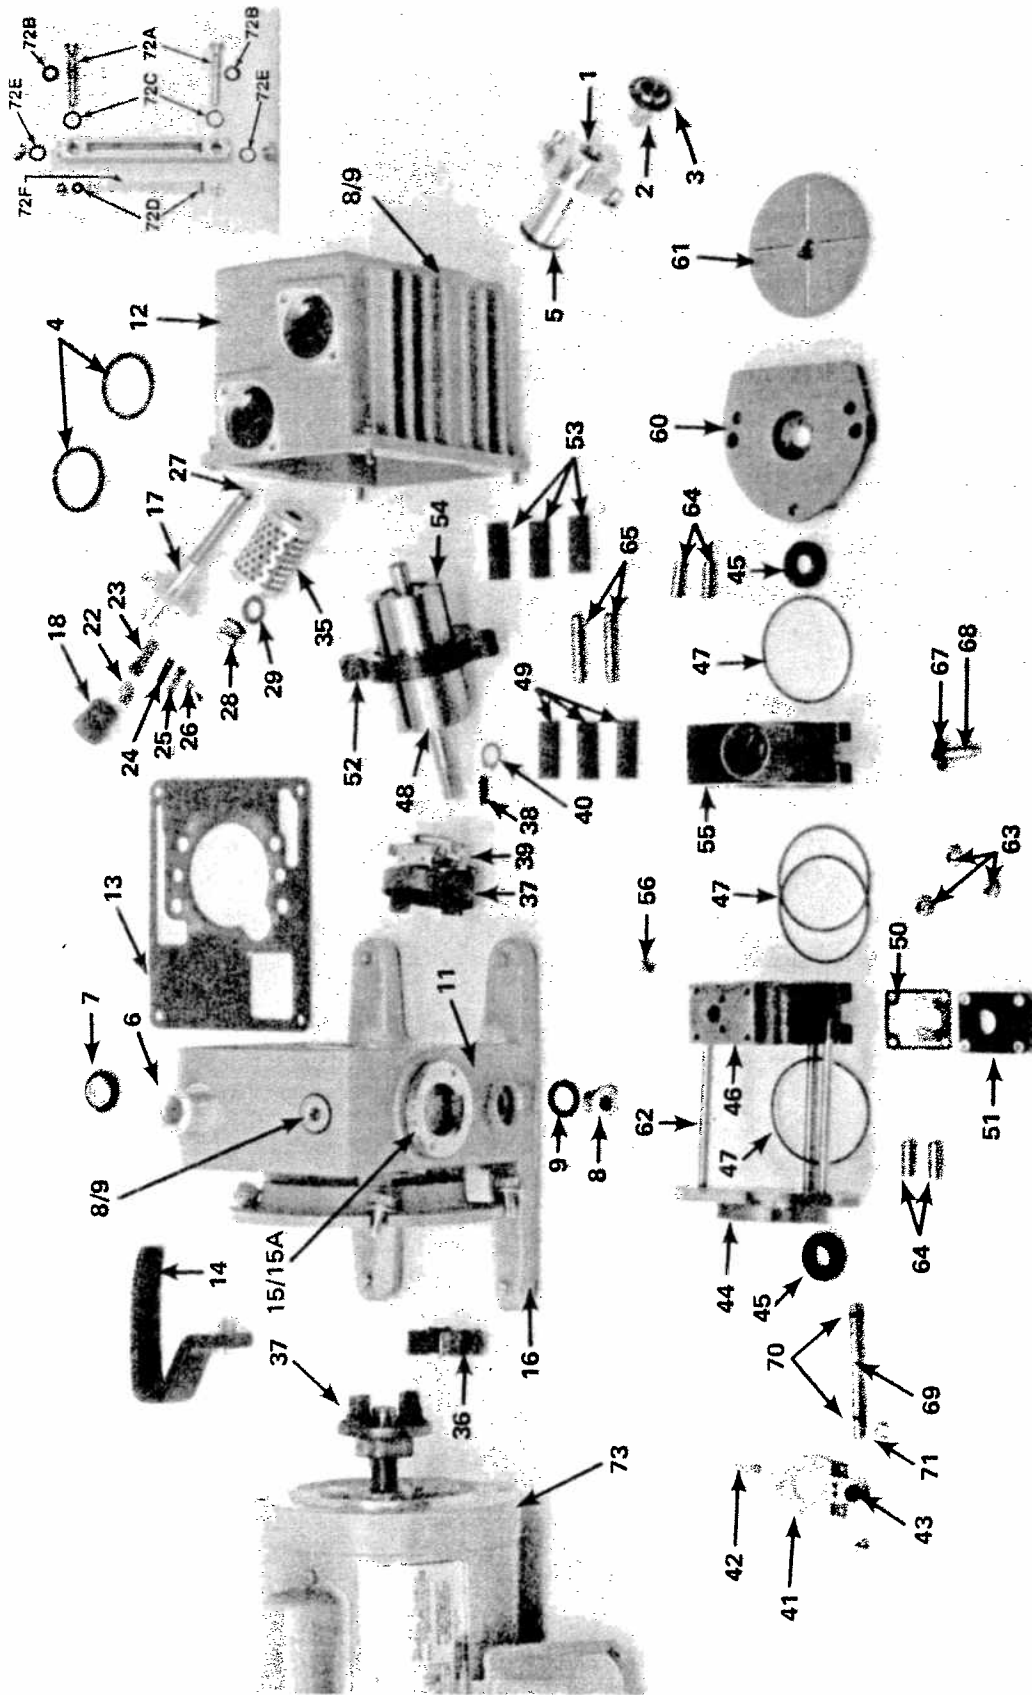

1TA-3.27

Figure 7-1. Disassembled Pump (D2A Pump Model Shown)

NOTE: The numbers on this figure correspond to the Position No. listed for each part in Table 7-2, beginning on page 58.

TABLE 7-1—SPARE MODULES, GASKET SETS, AND REPAIR KITS

† This kit must be installed before pumping toxic, pyrophoric, or hazardous gases. See the supplemental instructions that come with the kits and with the TRIVAC AC pumps for the part numbers of each item in the kit.

TABLE 7-2 – COMPLETE LIST OF PARTS

Posi- tion No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model										
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A					
1	1	1					INTAKE TUBE ASSEMBLY	433 60 118	KF16	Al-aly	
1			1	1				433 60 119	KF25x71	Al-aly	
1					1	1		431 65 116	KF40x107	Al-aly	
2	1	1					Dirt trap with centering ring	411 70 122	KF16	Steel	
2			1	1				411 70 206	KF25	Steel	
2					1	1		411 70 121	KF40	Steel	
3	2	2					O-ring	239 70 176++	D18x5	Viton	One of the O-rings goes on the intake centering ring; the other goes on the exhaust centering ring.
3			2	2				239 70 506++	D28x5	Viton	
3					2	2		239 70 516	D42x5	Viton	
4	2	2					Flat gasket	238 20 147++ *	D38x44	AFM	One of the flat gaskets fits under the intake tube; the other fits under the gas ballast valve.
4			2	2				238 20 156++ *	D55x63	AFM	
4					2	2		238 20 158++ *	D75x84	AFM	
5	1	1					O-ring	239 70 410++	D22x3	Viton	
5			1	1				239 70 117++	D29x3	Viton	
5					1	1		239 70 304++	D45x3	Viton	
6	1	1					EXHAUST PORT ASSEMBLY	433 60 113	KF16	Al-aly	
6			1	1				433 60 117	KF25x42	Al-aly	
6					1	1		433 60 115	KF40x63	Al-aly	

++Included in universal gasket set and module repair kit
(see page 57 of parts list).

*Included in the standard module (see Page 57).

KF — Leybold quick assembly clamp ring diameter
D —diameter
Al-aly — aluminum alloy
Viton — heat resistant synthetic rubber
AFM — asbestos-free gasket fiber

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model										
	D2A	D4A	D8A	D16A	D30A	D60A/D90A					
7	1	1					EXHAUST PORT ASSY. (Cont'd.) Centering ring with O-ring	88346	KF16	SS, Viton	
7			1	1				88347	KF25	SS, Viton	
7					1	1		88348	KF40	SS, Viton	
8	3	4	4	4	4	4	PUMP HOUSING ASSEMBLY Plug screw	201 27 105 ++	D16x1.5	Stl	DIN 908, Isometric, Straight
9	3	4	4	4	4	4	Flat gasket	239 55 165 ++	D22x15.1x2	Viton	
10					1	1	Eye bolt	201 13 101	M8	Stl	See Figure 7-2.
11	1	1					Coupling housing	720 00 001	228x140x185	C Al-aly	
11			1	1			Coupling housing	720 00 003	265x172.5x216.5	C Al-aly	
11					1		Coupling housing	720 00 019	149x242x272.5	Cast iron	
11						1	Coupling housing	720 00 021	164x242x272.5	Cast iron	
12	1						Oil casing	720 00 005	127.5x135x162	C Al-aly	
12		1					Oil casing	720 00 007	162.5x135x162	C Al-aly	
12			1				Oil casing	720 00 009	158x172.5x192.5	C Al-aly	
12				1			Oil casing	720 00 011	200.5x172.5x192.5	C Al-aly	
12					1		Oil casing	720 00 015	246.5x242x279.5	Al-aly	
12						1	Oil casing	720 00 017	321.5x242x279.5	Al-aly	
13	1	1					Seal	200 10 724++*	136x162x1	AFM	Asbestos-free
13			1	1			Seal	200 10 725++*	172x190x1	AFM	Asbestos-free
13					1	1	Seal	200 10 726++*	242x270x1	AFM	Asbestos-free

++Included in universal gasket set and module repair kit
(see page 57 of parts list).

*Included in the standard module (see Page 57).

SS—Stainless Steel
KF—Leybold quick assembly clamp ring diameter
D—Diameter
Stl—steel
Viton—heat resistant synthetic rubber
C Al-aly—cast aluminum alloy
Al-aly—aluminum alloy
AFM — asbestos-free gasket fiber
Buna-N—synthetic rubber
Al—Aluminum

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit							Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model											
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A						
14	1	1						PUMP HOUSING ASSY. (Cont'd.)	283 02 106	100x86x28	Black plastic	
14			1	1				Handle	283 02 107	106x120x32	Black plastic	
15	1	1						Oil level glass	520 40 124	M50x1.5	Glass, Viton	Includes flat gasket (Item 15A)
15			1	1	1	1		Oil level glass	520 40 125	M60x2	Glass, Viton	
15A	1	1						Flat gasket	239 55 172 ++	48x56x2	Viton	
15A			1	1	1	1		Flat gasket	239 55 171 ++	60x68x2	Viton	
16	4	4	4	4				Rubber foot	279 80 308	D20x16	Buna-N	
16					2	2		Support	720-00-068	63.5x38	Stl	Not shown in Figs.
					4	4		Vibration pad	99 274 005		Buna-S	
	1	1						GAS BALLAST VALVE ASSEMBLY	720 00 077			This assembly includes Position Numbers 17 thru 27 and 30, 31, & 32.
			1	1				Gas ballast valve assy.	720 00 079			
					1	1		Gas ballast valve assy.	720 00 080			
	1	1						Gas ballast valve stem	‡	43x109	Al-aly, Stl	
17								Gas ballast valve stem	‡	65x113.5	Al-aly-Stl	
17			1	1				Gas ballast valve stem	‡	85x85x67	Al-aly, Stl	
17					1	1		Flat gasket				See Position No. 4.
18	1	1						Cap	349 75 102	D22x24	Buna-N	
18			1	1	1	1		Cap	349 75 105	D50x40	Buna-N	
19			1	1	1	1		Valve assembly	350 20 158	D31.7x6	Thermoplastic	See Fig. 5-10A.
20			1	1	1	1		O-ring	239 70 436 + +	D27x2.5	Viton	See Fig. 5-10A.
21			1	1	1	1		Retaining washer	221 49 207	D19.5x33x0.9	Steel	See Fig. 5-10A.
22	1	1						Stiffening disk	222 04 104	D15x3	Brass	
22			1	1	1	1		Stiffening disk	222 04 107	D40x0.5	Bronze	
23	1	1						Nonreturn valve	350 20 126	D16x26	Steel	
24	1	1						Flat gasket	239 73 133 + +	19x6x1	Viton	
25	1	1						Spring	451 74 424 + +	19x0.1	Steel	
26	1	1						Strengthening piece	451 74 425 + +	6x7x0.1	Steel	
	1	1						Pan head screw	201 04 129	M2 x 6	Steel	Not shown

+ + Included in universal gasket set and module repair kit
(see page 57 of parts list).

‡ Must be purchased as gas ballast assembly.

Buna-N—synthetic rubber
Stl—steel
Al-aly—aluminum alloy
D—diameter
Viton—heat resistant synthetic rubber

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit							Part Name	Catalog No.	Dimensions (mm)	Material	Remarks	
	Pump Model												
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A							
27	1	1	1	1				GAS BALLAST VALVE ASSEMBLY (Cont'd.)	239 70 148++	D5x2	Viton		
27					1	1		O-ring	239 70 147++	D16x2.5	Viton		
28	1	1						Spring (filter)	221 62 144	D14.5x12x1.25	Steel		
28			1	1				Spring (filter)	221 62 143	D20x35	Steel		
28					1	1		Spring (filter)	221 62 142	D25.2x38	Steel		
29	1	1						Flat gasket	239 25 227++	D18x10x1	Viton		
29				1	1			Flat gasket	239 25 226++	D30x16x1	Viton		
29					1	1		Flat gasket	239 25 225++	D30x18x1	Viton		
30					1	1		Retainer ring	231 04 104	D15x1	Steel	See Fig. 5-10B.	
31					1	1		Spring (gas ballast)	221 62 140	D15x11.5	Steel	See Fig. 5-10B.	
32					1	1		Valve plate	401 64 117++	D14.8x0.2	Steel	See Fig. 5-10B.	
33				1	1			Cover	341 01 109	D48x5	Steel	Not shown in Figs.	
34				1	1			Retainer ring	231 03 106	17x1	Steel	Not shown in Figs.	
35	1	1						Oil filter	390 26 121+	D36x55	Stl, fiber		
35			1	1				Oil filter	390 26 117+	D42x55	Stl, fiber		
35					1	1		Oil separator	411 12 108-A	D58x90	Steel	See Fig. 5-10B.	
								Oil filter spring				See position 28	
36	1	1	1	1				COUPLING ASSEMBLY					
36					1	1		Elastic element	701 00 147* ++	41x15	Buna-N		
37	1	1				1		Coupling ring	701 00 196* ++	D80x21	Vulkollan	See Fig. 5-11.	
37								Coupling, complete	570 42 130*	D58x60		Includes pump-side and motor-side coupling and Pos. No. 36.	
37			1	1				Coupling, complete	570 42 134*	D58x61			
37					1			Coupling, complete	570 42 132*	D85x85	Cast iron		
37						1		Coupling, complete	570 42 133*	D85x85	Cast iron	See Fig. 5-3.	

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model										
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A					
38	1	1					COUPLING ASSEMBLY (Cont'd.)	221 16 065*	4x4x18	Steel	
38			1	1			Key (coupling)	221 16 151*	5x5x18	Steel	
38					1	1	Key (coupling)	221 16 179*	6x6x22	Steel	
39	1	1					CENTRIFUGAL SWITCH AND RETAINER RING	500 36 123*	D60x23	Brs, Stl	
39			1	1			Centrifugal switch	500 36 128*	D70x27	Brs, Stl	
39					1	1	Centrifugal switch	500 36 147*	D60x23	Brs, Stl	
40	1	1					Retainer ring	231 03 101*	D12x1	Steel	
40			1	1			Retainer ring	231 03 104*	D15x1	Steel	
40					3	3	Retainer ring	231 03 111*	D22x1.2	Steel	The 2 additional rings fit onto the shaft on both sides of the second stage rotor.
41	1	1					LEVER ASSEMBLY	281 53 130*	73x36	Steel	
41			1	1			Lever	281 53 102*	88x40x1	Steel	
41					1	1	Lever	281 53 101*	109x40x1	Steel	
42	1	1					Spring (lever)	221 61 199*	D5.8x18x0.4	Steel	
42			1	1	1	1	Spring (lever)	221 62 141*	D8.5x23	Steel	
43	1	1	1	1	1	1	Seal (lever)	239 73 131*++	D9x11	Buna-N	
44	1	1					SECOND STAGE ASSEMBLY	301 51 138*	D12x18	Cl, Brz	
44			1	1			Front end plate	301 51 137*	D15x23	Cl, Brz	
44					1	1	Front end plate	301 51 140*	D40x27	Cl	
45	2	2					Radial shaft seal	239 53 124*++	D12x28x7	Viton	
45			2	2			Radial shaft seal	239 53 142*++	D15x32x7	Viton	
45					2	2	Radial shaft seal	239 53 110*++	D22x40x7	Viton	One of the seals fits into the front end plate; the other fits into the rear end plate.

* Included in module (see Page 57 of parts list).
++ Included in universal gasket set and module repair kit
(see page 57 of parts list).

Stl — steel
Cl — cast iron
Viton — heat resistant synthetic rubber
D — diameter
Brs — brass
Brz — bronze

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit							Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model											
	D2A	D4A	D8A	D16A	D30A	D60A/D90A						
46	1	1					SECOND STAGE ASSEMBLY (Cont'd.) Second stage pump cylinder	231 58 117*	D54.8x35	CI		
46			1	1			Second stage pump cylinder	231 58 124*	D79x45	CI		
46					1	1	Second stage pump cylinder	231 58 122*	D118.5x75	CI		
47	4	4					O-ring	239 70 409*++	D60x2	Viton	Two of these O-rings go on the second stage pump cylinder; the other two go on the high vacuum stage pump cylinder.	
47			4	4			O-ring	239 70 156*++	D86x2	Viton		
47					4	4	O-ring	239 70 411*++	D122x3	Viton		
							Oil nozzle				See Position No. 56.	
48	1						Rotor with shaft	481 21 242*	D48x151	CI, Stl		
48		1					Rotor with shaft	481 21 243*	D48x186	CI, Stl		
48			1				Rotor with shaft	481 21 238*	D68x183	CI, Stl		
48				1			Rotor with shaft	481 21 239*	D68x228	CI, Stl		
48					1		Rotor with shaft	481 21 240*	D101 x 75	CI, Stl		
48						1	Rotor with shaft	481 21 241*	D101 x 75	CI, Stl		
49	3	3					Vane	200 10 878*+	14x35x4.5	Inkutex	Asbestos-free	
49			3	3			Vane	200 10 882*+	22x45x4.5	Inkutex	Asbestos-free	
49					3	3	Vane	200 10 846*+	32.5x75x4.5	Inkutex	Asbestos-free	

* Included in module (see page 57 of parts list).
+ Included in module repair kit (see page 57 of parts list).
++ Included in universal gasket set and module repair kit (see page 57 of parts list).

Stl — steel
CI — cast iron
Viton — heat resistant synthetic rubber
D — diameter

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model										
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A					
50	1	1					SECOND STAGE ASSEMBLY (Cont'd.) Valve plate (standard)	401 64 109* +	45x35x0.1	Stl	For strd. series pumps. For strd. series pumps. For strd. series pumps. For corr. series pumps. For corr. series pumps. For corr. series pumps. The valve stop in the Figures is made of black plastic.
50			1	1			Valve plate (standard)	401 64 116* +	63x45x0.1	Stainless steel	
50					1	1	Valve plate (standard)	401 64 114* +	75x82x0.2	Stl	
50	1	1					Valve plate (corrosive)	401 64 121*	45x35x0.1	Gold plated	
50			1	1			Valve plate (corrosive)	401 64 116* +	63x45x0.1	Stainless steel	
50					1	1	Valve plate (corrosive)	401 64 124*	75x82x0.2	Gold plated	
51	1	1					Valve stop	373 58 103*	34.6x45x10	Black plastic	The valve stop in the Figures is made of black plastic.
51			1	1			Valve stop	373 58 107*	63x45x9	Black plastic	
51					1	1	Valve stop	373 58 106*	80x74.5x12	Al-aly	
52	1	1					Center bearing	261 51 132*	D12x15	Cast iron	
52			1	1			Center bearing	261 51 131*	D15x15	Cast iron	
52					1	1	Intermediate plate	261 51 135*	D30x30	Cast iron	
53	3						HIGH VACUUM STAGE ASSEMBLY Vane	200 10 878*+	14x35x4.5	Inkutex	Asbestos-free
53		3					Vane	200 10 879*+	14x70x4.5	Inkutex	Asbestos-free
53			3				Vane	200 10 882*+	22x45x4.5	Inkutex	Asbestos-free
53				3			Vane	200 10 881*+	22x90x4.5	Inkutex	Asbestos-free
53					3		Vane	200 10 846*+	32.5x75x4.5	Inkutex	Asbestos-free
53						3	Vane	200 10 880*+	32.5x150x4.5	Inkutex	Asbestos-free

*Included in module (see page 57 of parts list).
+Included in module repair kit (see page 57 of parts list).

D — diameter
Duroplast — durable thermoplastic
Al-aly — aluminum alloy

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks	
	Pump Model											
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A						
54	1						HIGH VACUUM STAGE ASSEMBLY (Cont'd.) Rotor, HV stage	321 66 126*	D48x35	Cast iron		
54		1						Rotor, HV stage	321 66 125*	D48x70	Cast iron	
54			1					Rotor, HV stage	321 66 123*	D68x45	Cast iron	
54				1				Rotor, HV stage	321 66 122*	D68x90	Cast iron	
54					1			Rotor, ‡	321 66 119*	D101x75	Cast iron	‡
54						1		Rotor, HV stage	321 66 120*	D101x150	Cast iron	
55	1						Pump cylinder, HV stage	231 65 117*	D54.8x35	Cast iron		
55		1					Pump cylinder, HV stage	231 65 116*	D54.8x70	Cast iron		
55			1				Pump cylinder, HV stage	231 65 121*	D79x45	Cast iron		
55				1			Pump cylinder, HV stage	231 65 122*	D79x90	Cast iron		
55					1		Pump cylinder, HV stage	231 65 118*	D118.5x75	Cast iron		
55						1	Pump cylinder, HV stage	231 65 107*	D118.5x150	Cast iron		
							O-rings				See position 47.	
56	1	1					Oil nozzle	392 25 107*	0.5	Brass	The oil nozzle is located in the second stage pump cylinder.	
56			1	1			Oil nozzle	392 25 113*	0.8	Brass		
56					2	2	Oil nozzle	392 25 124*	1.5	Brass		
							Radial shaft seal				See position 45.	
57	1	1					Key (rotor)	221 16 070*	4x4x28	Stl	See Fig. 5-9.	
57			1	1			Key (rotor)	221 16 156*	5x5x28	Stl	See Fig. 5-9.	
57					2	2	Key (rotor)	221 16 188*	6x6x50	Stl	See Fig. 5-9.	
58		1		1			Valve plate	400 50 135* ++	16x16x5	Stl, Viton	See Fig. 5-13.	
58						2	Valve plate	400 50 138* ++	25x25x5	Stl, Viton	See Fig. 5-13.	

*Included in module (see page 57 of parts list).
++Included in universal gasket set and module repair kit
(see page 57 of parts list).
† Both rotors are the same part
number on the D30A pump model.

D — diameter
Stl — steel
Viton — heat resistant synthetic rubber
HV — high vacuum

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks				
	Pump Model														
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A									
59	1						HIGH VACUUM STAGE ASSEMBLY (Cont'd.)					See Fig. 5-13.			
59				1			Retaining bracket	491 60 109*	40x8x4	Steel		See Fig. 5-13.			
59						2	Retaining bracket	491 60 107*	40x10x8	Steel		See Fig. 5-13.			
60	1	1					Retaining bracket	491 60 111*	52x4x4	Steel	See Fig. 5-13.				
60			1	1			Rear end plate	351 55 131*	D12x16	Cast iron	Cast iron				
					1	1	Rear end plate	351 55 130*	D15x18	Cast iron					
							Rear end plate	351 55 132*	D40x28	Cast iron					
61	1	1	1	1	1	1	Disk (oil slinger)	451 74 335*	D85x2.1	Steel					
62	3	3		4	4		MODULE STUDS AND PINS	201 52 104*	D6x107	Steel					
												Threaded stud	201 52 103*	D6x142	Steel
												Threaded stud	201 52 109*	D6x133	Steel
												Threaded stud	201 52 110*	D6x178	Steel
												Threaded stud	201 52 106*	D8x218	Steel
												Threaded stud	201 52 108*	D8x293	Steel
												Hexagon nut	211 01 312*	D6	Steel
												Hexagon nut	211 01 314*	D8x8	Steel
												Cylindrical pin	241 03 585*	D8x20	Steel
												Cylindrical pin	241 03 586*	D8x24	Steel
63	3	3	4	4				211 01 312*	D6	Steel					
												Hexagon nut	211 01 314*	D8x8	Steel
64	4	4	4	4			Cylindrical pin	241 03 585*	D8x20	Steel	For rear end plate				
64					2	2	Cylindrical pin	241 03 586*	D8x24	Steel	For front end plate				
65	2	2	2	2			Cylindrical pin	241 03 590*	D8x40	Steel	For front end plate				
65					2	2	Cylindrical pin	241 03 593*	D8x60	Steel	For front end plate				

* Included in module (see page 57 of parts list).

D — Diameter

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Catalog No.	Dimensions (mm)	Material	Remarks
	Pump Model										
	D2A	D4A	D8A	D16A	D30A	D60A/ D90A					
							ANTI-SUCK BACK ASSEMBLY				
							Centrifugal switch				See position 39.
							Lever				See position 41.
							Spring (lever)				See position 42.
							Seal (lever)				See position 43.
66					1	1	Air nozzle	392 25 204	0.36	Brass	Not shown in Figures
67	1	1					Valve disk	400 50 136*++	D20	Stl, Viton	
67			1	1			Valve disk	400 50 139*++	D32	Stl, Viton	
67					1	1	Valve disk	400 50 137*++	D45	Stl, Viton	
68	1	1					Piston	321 06 130*	D7.9x26	Brass	
68			1	1			Piston	321 06 104*	D12x30	Brass	
68					1	1	Piston	321 06 131*	D12x22	Brass	
69	1	1					Air inlet tube	431 31 161*	D8x79	Steel	
69			1	1			Air inlet tube	431 31 177*	D8x92.5	Steel	
69					1	1	Air inlet tube	431 31 174*	D8x144	Steel	
70	2	2	2	2	2	2	O-ring	239 70 148*++	D5x2	Viton	
71	1	1					Retainer disk	231 05 107*	D5	Steel	
71			1	1	1	1	Retainer disk	231 05 108*	D6	Steel	
72	1	1					OIL SIGHT GAUGE ASSEMBLIES	720 00 113	5 11/32" x5/8"	Aluminum	
72			1	1				720 00 114	5 11/32" x5/8"	Aluminum	
72					1	1		720 00 115	6 13/16" x5/8"	Aluminum	
72A	2	2	2	2	2	2	Mounting bolt	720 00 129	5/16-24 UNF-2A		A mounting bolt with 2 flat gaskets (72B) is available under Part No. 720 00 118
72B	2	2	2	2	2	2	Flat gasket	725 90 001++		Viton	A seal kit containing these 4 seals is available under Part No. 720 00 116
72C	2	2	2	2	2	2	O-ring	725 91 001++		Viton	
72D	2	2	2	2	2	2	Flat gasket	725 90 000++		Viton	
72E	2	2	2	2	2	2	O-ring	725 91 000++		Viton	
72F	1	1	1	1			Sight tube	722 11 003		Glass	
					1	1	Sight tube	722 11 004		Glass	

*Included in module (see page 57 of parts list)

++Included in module repair kit and universal gasket set
(see page 57 of parts list)

D -- Diameter
C al-aly -- cast aluminum alloy
M -- motor side adapter flange
P -- pump side adapter flange
Viton -- heat resistant synthetic rubber
Al -- aluminum

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Motor Specifications	Motor Part No.
	Pump Model								
	D2A	D4A	D8A	D16A	D30A	D60A			
73	1	1					Motor	1/3 hp, TEFC, 1 ph 115/208-230V, 60 Hz, 1725 rpm 115/208-230V, 50 Hz, 1500 rpm Wired for 115V	722-60-066*
73	1	1					Motor	1/3hp, TEFC, 3ph 200/230/460V, 60 Hz, 1725 rpm 200/220/380V, 50Hz, 1500 rpm	722-60-067
73			1	1			Motor	1 hp, TEFC, 1 ph 115/208-230V wired for 115V 50/60 Hz, 1500/1725 rpm	722-60-069*

* This motor has an automatic resetting thermal overload.

hp—horsepower
kw—kilowatt
V—voltage
VAC—voltage, alternating current
ph—phase
Hz—hertz
TEFC—totally enclosed fan cooled
rpm—revolutions per minute

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit						Part Name	Motor Specifications	Motor Part No.
	Pump Model								
	D2A	D4A	D8A	D16A	D30A	D60A			
73			1	1			Motor	1 hp, 1 ph, TEFC 208-230V, wired for 208V 50/60 Hz, 1500/1725 rpm	722-60-005*
73			1	1			Motor	1 hp, TEFC, 3 ph 208/230/460V, 60 Hz, 1725 rpm 200/220/380V, 50 Hz, 1500 rpm	722-60-070
73						1	Motor	1-1/2 hp, TEFC, 3 ph 208-230/460V, 60Hz, 1725 rpm 200-220/380V, 50 Hz, 1500 rpm	722-60-076†
73						1	Motor	2 hp, 1 ph, TEFC, 208-230V, wired for 208V, 60 Hz, 1725 rpm	722-60-007*

† This motor has a rotational lock bearing.

* This motor has an automatic resetting thermal overload.

hp — horsepower
kw — kilowatt
V — voltage
VAC — voltage, alternating current
ph — phase
Hz — hertz
TEFC — totally enclosed fan cooled
rpm — revolutions per minute

TABLE 7-2 — COMPLETE LIST OF PARTS (continued)

Position No. on Figs.	Number Required per Unit							Part Name	Motor Specifications	Motor Part No.
	Pump Model									
	D2A	D4A	D8A	D16A	D30A	D60A	D90A			
73						1		Motor	2 hp, 3 ph, TEFC 200-230/460V, 1200 rpm, 60Hz 200-220/380V, 1000 rpm, 50Hz	722-60-074†
73							1	Motor	3 hp, TEFC, 3 ph 208/230/460V, 60Hz, 1800 rpm 200-220/380V, 50 Hz, 1500 rpm	722-60-013†

hp — horsepower
kw — kilowatt
V — voltage
VAC — voltage, alternating current
ph — phase
Hz — hertz
TEFC — totally enclosed fan cooled
rpm — revolutions per minute

† This motor has a rotational lock bearing.

MAINTENANCE RECORD

[illegible]

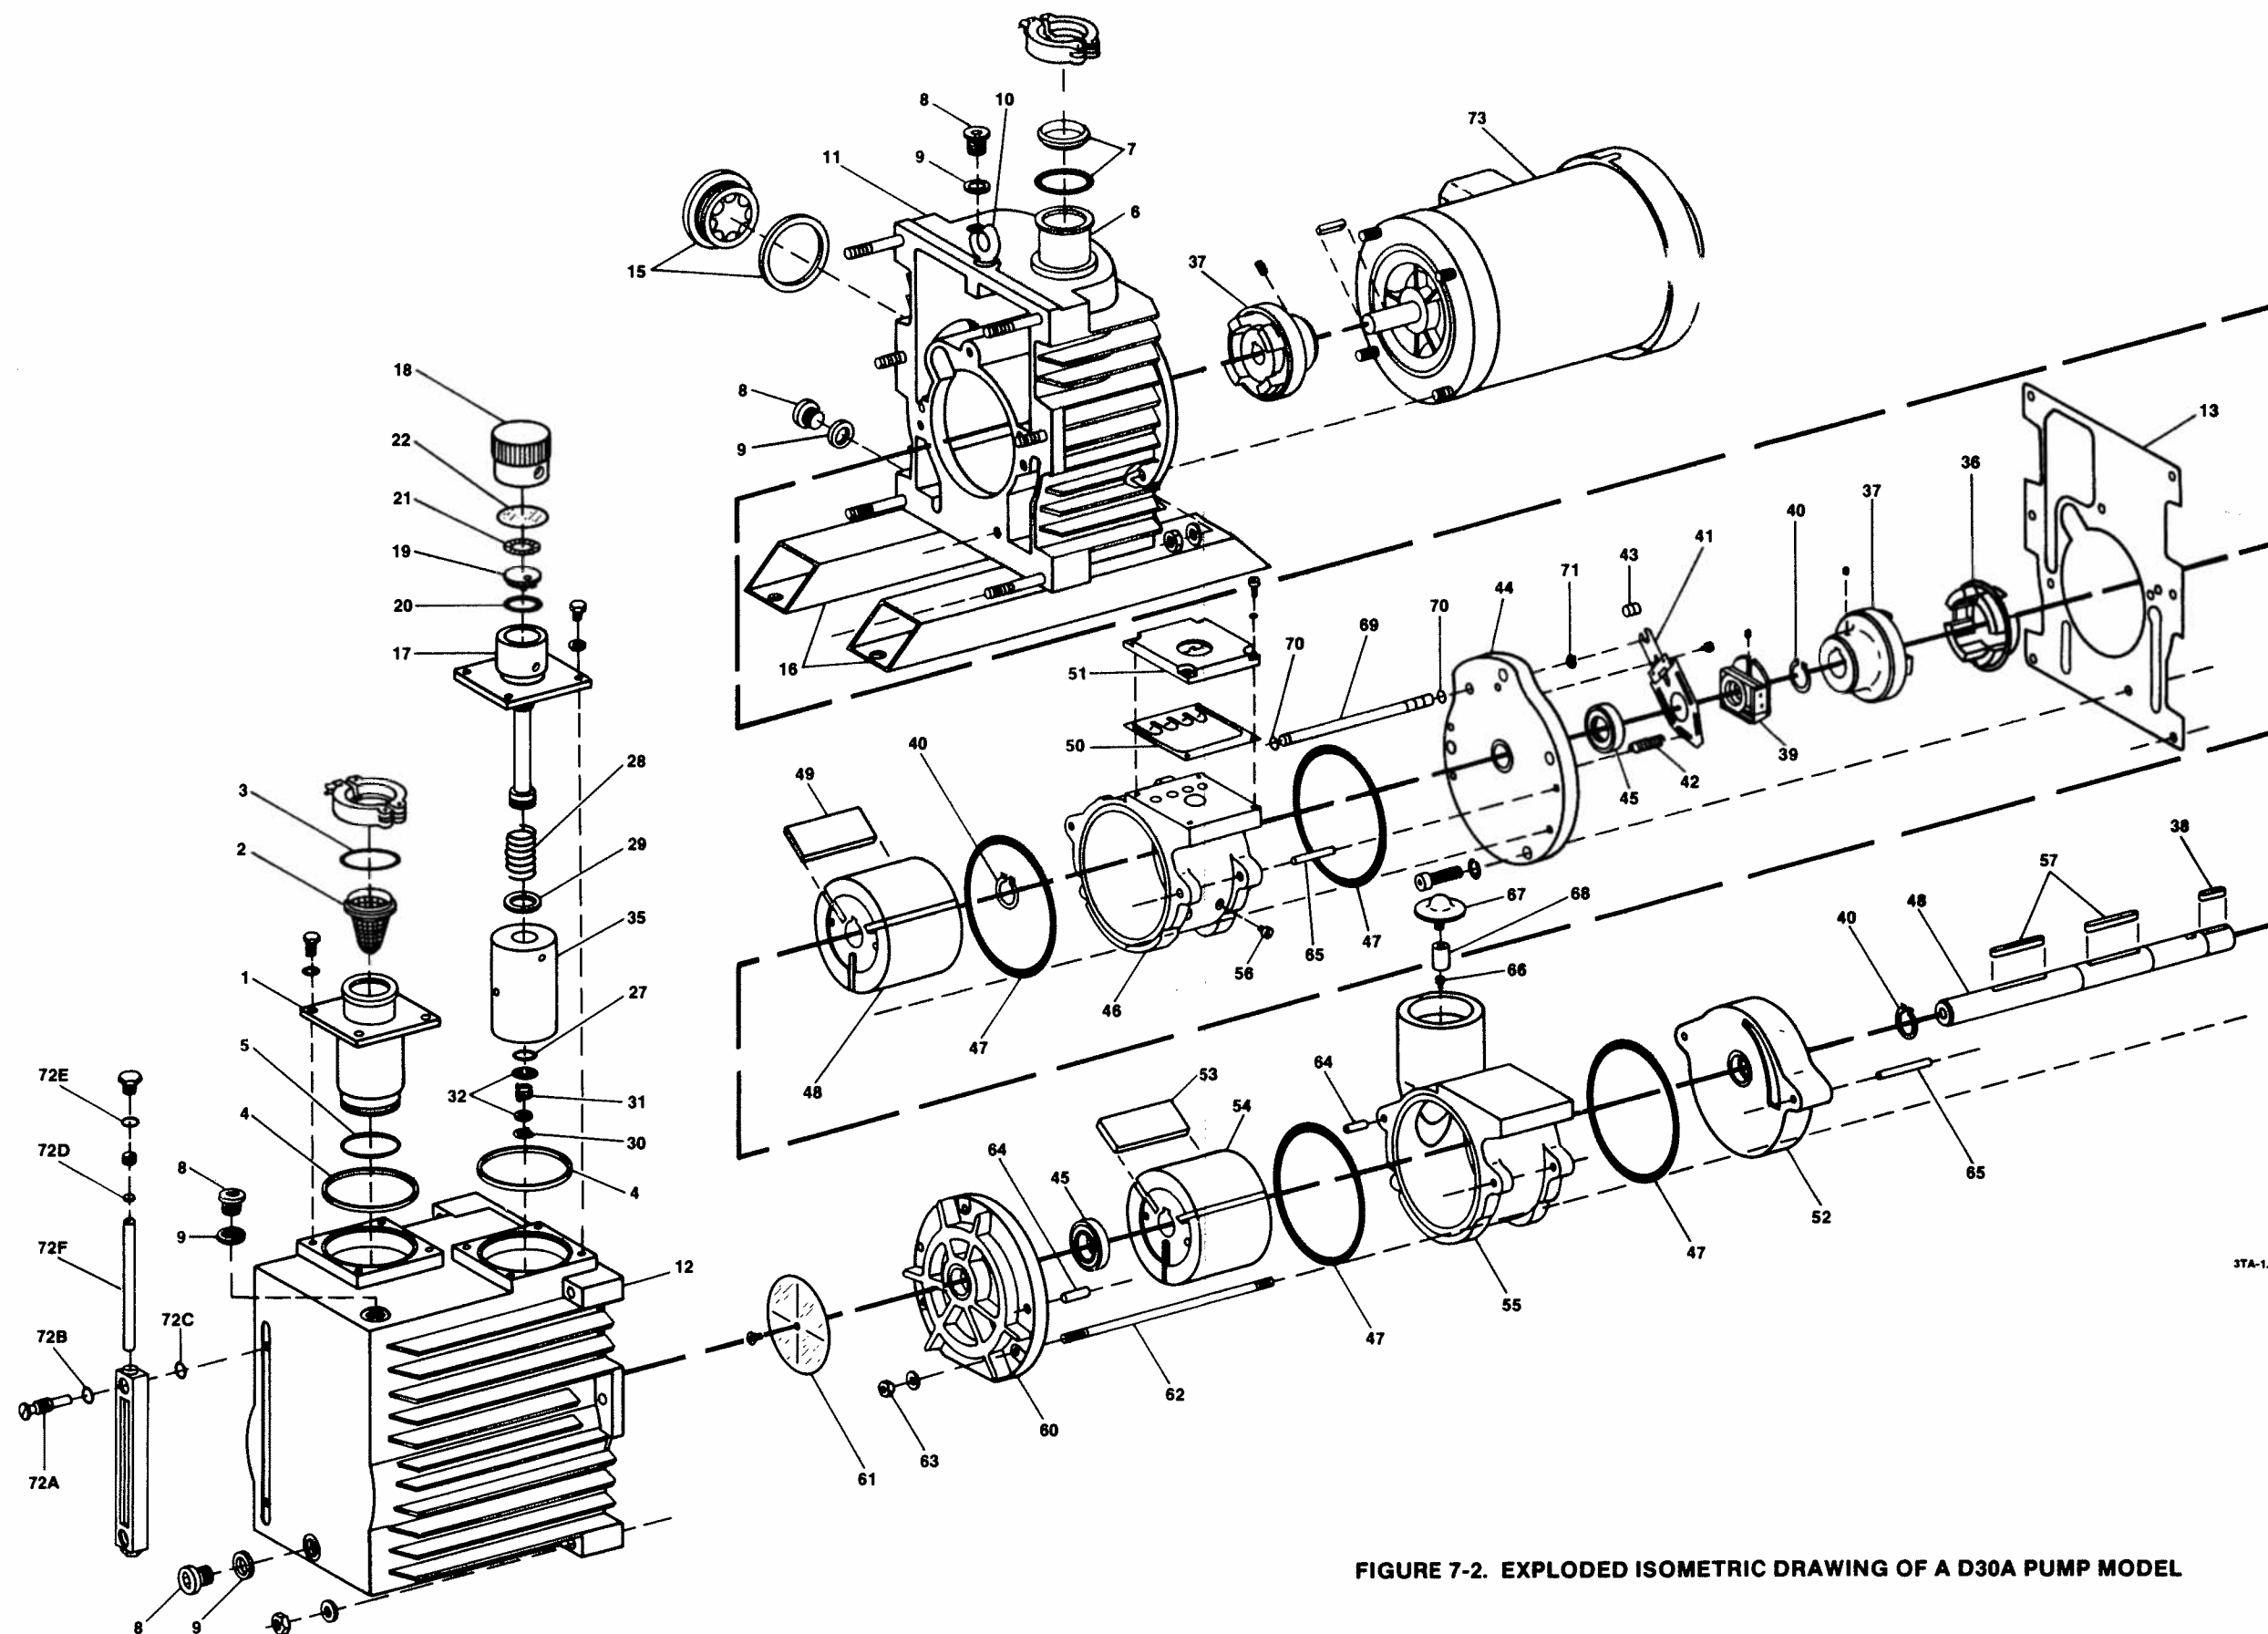


FIGURE 7-2. EXPLODED ISOMETRIC DRAWING OF A D30A PUMP MODEL

Manuals Available from Leybold Vacuum Products

Manual Description	Part Number
Engineering Notes on Vacuum Pump Oils	Contact LHVP Advertising
TRIVAC Dual-Stage Rotary Vane Pump Manual	722-78-001
TRIVAC BCS Modular System Manual	722-78-028
OF-1000 Oil Filtering System Manual	722-78-009
OF-3000 Oil Filtering System Manual	722-78-030
S100C, S160C, S250C Rotary Vane Pump Manual	99-800-009
S400/630F Rotary Vane Pump Manual	722-78-014
E and DK Rotary Piston Pump Manual	722-78-007
RUVAC WA/WAU/WS/WSU “00” Series Manual	99-800-001
TMP/NT 150/360 V/H Turbomolecular Pump and Converter Manual	722-78-036
TMP151/361 & NT150/360 Turbomolecular Pump and Converter Manual ..	722-78-047
TMP 151/361/600/1000 Turbomolecular Pump & NT20 Converter Manual .	722-78-049
TMP/NT 340M Turbomolecular Pump and Converter Manual	722-78-051
TMP/NT 450 Turbomolecular Pump and Converter Manual	722-78-011
TMP/NT 1000 Turbomolecular Pump and Converter Manual	722-78-018
TMP 151/361, 600, & 1000 Turbo Pump, and NT20 Converter Manual	722-78-049
RPK & RW Cryopump & Compressor Manual	722-78-025